



UPUTSTVO ZA UPOTREBU

LED TELEVIZORI

Model: 43AOS460F

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne

podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

EN

SR

Sadržaj

Upozorenja i mere opreza	1
Važna bezbednosna uputstva.....	2
Rad na daljinskom upravljaču.....	4
TV dugmad i interfejs terminala.....	5
Daljinsko Upravljanje.....	6
Prva Instalacija.....	7
Početna Stranica.....	9
Mediji	14
TV Setting.....	16
Izvor	16
Slika	16
Zvuk	18
Kanal.....	20
Lista kanala.....	22
Zaključati	24
Pomoć.....	26

Napomena:

Slike i sadržaj proizvoda su samo za referencu,
a specifične su za stvarnu robu.

Upozorenja i mere opreza

	Upozorenje Rizik od strujnog udara. Ne otvaraj.	
--	--	---

Upozorenje: Da biste izbegli rizik od strujnog udara, nemojte skidati poklopac (ili poledinu). Unutra nema delova koje korisnik može servisirati. Servisiranje se obratite kvalifikovanom servisnom osoblju.



Simbol munje sa vrhom strelice, unutar jednakokraničnog trougla, ima za cilj da upozori korisnika na prisustvo neizolovanog „opasnog napona“ unutar kućišta proizvoda koji može biti dovoljne veličine da predstavlja rizik od strujnog udara za osobu.



Uzvičnik unutar jednakokraničnog trougla ima za cilj da upozori korisnika na prisustvo važnih uputstava za rad i održavanje (servisiranje) u literaturi koja prati uređaj.

UPOZORENJE: DA BISTE SPREČILI OPASNOST OD POŽARA ILI ŠOKA, NE IZLAŽITE OVU JEDINICU KIŠI ILI VLAGI.
OPREZ: DA BISTE OBEZBEDILI LIČNU BEZBEDNOST, POŠTOVAJTE SLEDEĆA PRAVILA U VEZI KORIŠĆENJA OVE JEDINICE

1. Radite samo iz izvora napajanja koji je naveden na jedinici.
2. Izbegavajte oštećenje AC utikača i kabela za napajanje.
3. Izbegavajte nepravilnu instalaciju i nikada ne postavljajte jedinicu tamo gde je dobra ventilacija nedostižna.
4. Ne dozvolite da predmeti ili tečnost uđu u otvore kućišta.
5. U slučaju problema, isključite jedinicu i pozovite servisera. Ne pokušavajte sami da je popravite ili uklonite zadnji poklopac.

Promene ili modifikacije koje nije odobrila naša kompanija mogu poništiti garanciju.

* Kada ne koristite ovaj televizor duži vremenski period, obavezno izvucite utikač iz utičnice za naizmjeničnu struju i iz antene radi vaše bezbednosti.

* Da biste sprečili strujni udar, nemojte koristiti ovaj utikač za napajanje sa produžnim kablom, utičnicom ili drugom utičnicom osim ako se oštrice mogu do kraja umetnuti kako bi se sprečilo izlaganje oštrice.

— Ne pokušavajte sami da servisirate proizvod —

Oprez

Da biste sprečili strujni udar, ne otvarajte kućište televizora. Unutra nema delova koje korisnik može servisirati.

Važna bezbednosna uputstva

- 1) Pročitajte ova uputstva.
- 2) Sačuvajte ova uputstva.
- 3) Obratite pažnju na sva upozorenja.
- 4) Pratite sva uputstva.
- 5) Ne koristite ovu jedinicu blizu vode.
- 6) Čistite samo suvom krpom.
- 7) Ne blokirajte otvore za ventilaciju. Ventilaciju ne bi trebalo ometati pokrivanjem ventilacionih otvora stvarima kao što su novine, stolnjaci, zavese itd. Mora postojati minimalna udaljenost od 5 cm slobodnog prostora oko jedinice u svakom trenutku kako bi se osiguralo odgovarajuća ventilacija.
- 8) Ne postavljajte u blizini izvora toplote kao što su radijatori, grejne komore, peći ili drugi uređaji (uključujući pojačala) koji proizvode toplotu. Na ili blizu jedinice ne smeju se postavljati izvori otvorenog plamena kao što su upaljene sveće.
- 9) Zaštite kabl za napajanje od gaženja ili priklještenja, posebno kod utikača, utičnica i mesta gde izlaze iz jedinice.
- 10) Koristite samo dodatke/pribor koji je naveo proizvođač.
- 11) Koristite samo sa kolicima, postoljem, stativom, držačem ili stolom koje je odredio proizvođač ili se prodaje uz jedinicu. Kada se koriste kolica, budite oprezni kada pomerate kombinaciju kolica/jedinice da biste izbegli povrede od prevrtanja.
- 12) Isključite ovu jedinicu iz struje tokom oluja sa grmljavinom ili kada se ne koristi duži vremenski period.
- 13) Sve servisiranje prepustite kvalifikovanom serviseru. Servisiranje je potrebno kada je jedinica oštećena na bilo koji način, kao što je oštećeni kabl za napajanje ili utikač, prolivena tečnost ili su predmeti upali u jedinicu, izložen kiši ili vlazi, ne radi normalno ili je pao.
- 14) Jedinicu ne treba izlagati kapanju ili prskanju i na jedinicu ne treba stavljati predmete napunjene tečnošću, kao što su vaze.
- 15) Postavite televizor na stabilnu, ravnu površinu. Ako to ne uradite, televizor može da padne i da izazove povrede.
- 16) Ne dozvolite maloj deci da se igraju oko ili na televizoru. Nemojte da visite sa jedinice. Ako to ne učinite, televizor može da padne i da izazove povrede.
- 17) Nemojte dozvoliti maloj deci da se igraju plastičnom kesom koju ste dobili uz televizor kada ste ga otpakovali. Ako to ne učinite, može doći do gušenja, što može dovesti do smrti.
- 18) Izbegavajte nepravilnu instalaciju i nikada ne postavljajte jedinicu tamo gde je nemoguća dobra ventilacija. Prilikom postavljanja ove jedinice, preporuke za rastojanje se moraju održavati između garniture i zida, kao i unutar čvrsto zatvorenog prostora ili komada nameštaja. Držite se na minimumu prikazane smernice za razdaljinu za bezbedan rad.
- 19) Upozorenja za instalaciju
 - Nemojte naginjati jedinicu ulevo ili udesno ili prema nazad.
 - Uverite se da je kabl za napajanje van putanje pešačkog saobraćaja.
 - Jedinica će proizvoditi malu količinu toplote tokom rada. Uverite se da ima dovoljno prostora oko jedinice da omogući zadovoljavajuće hlađenje.
 - Neka dvoje ljudi uklone jedinicu iz kutije tako da ekran bude okrenut od vas. Moguće je da vaša odeća (kao što je kopča za kaiš ili dugme) može izgrebati prednji deo jedinice. Uradite isto kada premeštate jedinicu na drugu lokaciju.



-
- 20) Ova jedinica mora biti priključena na utičnicu sa zaštitnim uzemljenjem.
 - 21) Napravite dovoljno prostora za umetanje i izvlačenje utikača. Postavite jedinicu što je moguće bliže utičnici. Glavnim napajanjem za ovu jedinicu se kontroliše umetanjem ili izvlačenjem utikača. Jedini način je fizičko isključivanje utikača, da potpuno isključite jedinicu iz izvora napajanja.
 - 22) Baterije se ne smeju izlagati preteranoj toploti kao što je sunce, vatra ili slično.
 - 23) Kada je ova jedinica priključena na zidnu utičnicu, uvek je u stanju pripravnosti čak i kada sve LED lampe nisu upaljene. Da biste isključili jedinicu, isključite jedinicu iz zidne utičnice.
 - 24) Ako je kabl za napajanje oštećen, pre dalje upotrebe ga mora zameniti proizvođač, njegov serviser ili slično kvalifikovano lice kako bi se izbegla opasnost.
 - 25) Uvek postavljajte TV na nameštaj koji može bezbedno da podrži TV. Uverite se da krajevi televizora ne nadvisuju ivicu nosećeg nameštaja.
 - 26) Ne postavljajte televizor na visok nameštaj (na primer, ormariće ili police za knjige) bez pričvršćivanja i nameštaja i televizora za zid ili drugu odgovarajuću čvrstu potporu.
 - 27) Ne postavljajte TV na tkaninu ili druge materijale postavljene između televizora i pratećeg nameštaja.
 - 28) Kada se utikač za napajanje koristi kao uređaj za isključivanje, uređaj za isključivanje treba da ostane u funkciji.

VAŽNA INFORMACIJA


Televizori koji nisu postavljeni na dovoljno stabilnim lokacijama mogu predstavljati potencijalnu opasnost od pada. Da biste izbegli povrede, posebno dece, preduzmite sledeće jednostavne mere predostrožnosti:

- Postavite ovaj televizor samo na nameštaj koji može bezbedno da ga nosi.
- Koristite samo ormarić ili postolje koje preporučuje proizvođač televizora.
- Uverite se da televizor ne visi preko ivice nosećeg nameštaja.
- Ne postavljajte televizor na visok nameštaj (kao što su ormari ili police za knjige) bez pričvršćivanja i nameštaja i televizora na odgovarajući oslonac.
- Nemojte stavljati tkaninu ili druge materijale između televizora i pratećeg nameštaja.
- Ne dozvolite deci da se penju na nameštaj da bi došla do televizora ili njegovih komandi.

Rad na daljinskom upravljaču


Instaliranje baterija

1. Klizite u smeru koji pokazuje strelica na slici 1 ispod da biste otvorili poklopac baterija na poleđini daljinskog upravljača.
2. Ubacite dve AAA alkalne baterije u odeljak.
3. Vratite poklopac baterija.

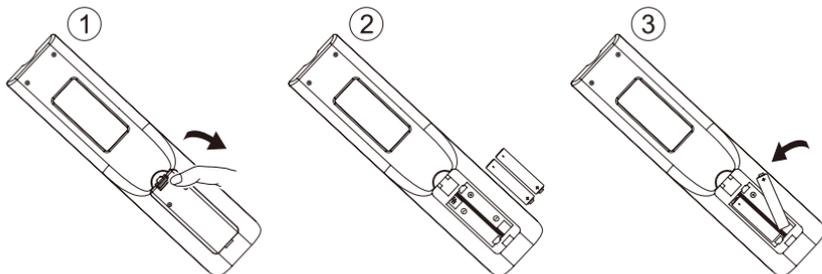

Preventivne mere

Uverite se da nema prepreka između daljinskog upravljača i televizora.

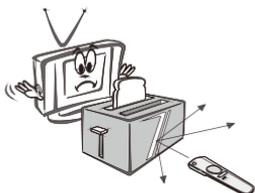


Pošto jako svetlo može da ometa signale, promenite položaj da biste upravljali daljinskim upravljačem ako se televizor ne može uključiti ili isključiti kako očekujete.



Držite daljinski upravljač dalje od izvora toplote i vlažnih područja kako biste osigurali efikasan rad daljinskog upravljača.



Uverite se da su dve AAA 1,5V alkalne baterije pravilno napunjene.

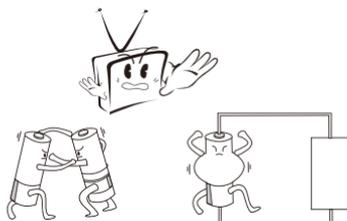

TV dugmad i interfejs terminala

TV dugmad




- **Upalim TV:**
U režimu pripravnosti, kratko pritisnite dugme za kontrolu televizora da biste uključili TV.
- **Funkcija meke tastature:**
Nakon uključivanja TV-a, kratko pritisnite TV kontrolno dugme da biste pozvali sledeću programsku tastaturu. Kratko pritisnite dugme za kontrolu TV-a da biste izabrali stavku koju želite. Dugo pritisnite dugme za kontrolu TV-a da biste ušli u stavku koju ste izabrali.

Soft Keyboard		
Ikona	Ime	Funkcija
	Dole gore	Prebacite se na prethodni ili sledeći kanal u TV režimu. Pomerite se nadole ili gore da biste izabrali stavku u podešavanjima menija.
	Levo desno	Smanjite ili povećajte jačinu zvuka u TV režimu. Pomerite se levo ili desno da biste izabrali stavku u podešavanjima menija.
	Glavni meni	Pristupite podešavanjima glavnog menija.
	Izvor	Pristupite interfejsu izvora unosa.
	Prizekat	Uključite TV u stanje pripravnosti.


Terminal Interface

Napomena: Slede različiti terminalni interfejsi, stvarni položaj i raspored, broj različitih modela može biti različit.

	AV ulaz Ulaz spoljnog AV signala I Odgovarajući desni/levi zvučni kanal		Izlaz za SLUŠALICE Kada su slušalice priključene, zvučnici su onemogućeni (Neki modeli bez ovog interfejsa)
	HDMI ulaz Ulaz digitalnog signala sa HDMI video konektora.		USB ulaz Povežite USB uređaj ovde da biste reprodukovali njegove medijske datoteke
	ANT 75 Povežite antenski/cadle TV ulaz (75/VHF/UHF)		COAKSIAL Povežite SPDIF prijemnik. (Neki modeli bez ovog interfejsa)
	Rj45 Povežite Internet.		CI Povežite karticu za dešifrovanje Data TV-a

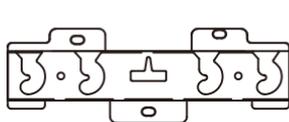

(32"40"43"50"55")

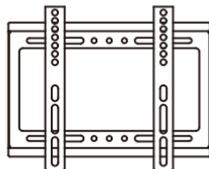

(65")

Pažnja: Molimo vas da kupite zidni nosač kao što je prikazano na slici ako je kupcu potrebno.

Daljinsko Upravljanje



POVER(ϕ): Uključuje ili isključuje TV.

MUTE(🔇): Smanjuje jačinu zvuka TV-a na minimalni nivo. Pritisnite ponovo da vratite jačinu zvuka.

BROJAČKA DUGME: Pritisnite 0-9 i izaberite TV kanal direktno kada gledate TV.

Favorite: Pritisnite da dodate ili uklonite svoje omiljene

Mouse: Prikažite ili sakrijte miša.

MENU: Pristup glavnom meniju ili povratak na gornji nivo aspod menija.

SOURCE(**IZVOR**): Za izbor menija izvora ulaza.

Strelice (\leftarrow / \rightarrow / \uparrow / \downarrow): Koristi četiri strelce da označi različite stavke u TV meniju ili promeni vrednost.

OK: dugme Unesi i potvrdi.

EPG: Prikažite EPG.

BACK(**NAZAD**): Povratak na prethodno gledani program ili povratak na ekran višeg nivoa.

▶II: Pauza.

HOME: prečica za Android početnu stranicu.

VOL+ ili **VOL-**: Povećava ili smanjuje jačinu zvuka TV-a.

CH \wedge ili **CH \vee** : Skenira nagore ili nadole kroz trenutnu listu kanala.

PVR: Grabar

YouTube: Pristupite YouTube interfejsu.

NETFLIX: Pristupite NETFLIX interfejsu.

Dugmad u boji (možda neće biti dostupna) (crvena/zelena/žuta/plava)

T.Shift: Kada korisnik ode, automatski će zaustaviti TV program i snimiti program u uređaj za udaljeno skladište. Dostupno kada je funkcija PVR efikasna).

P.MODE: tada će se slika promeniti na sledeći način: Standard Mild-User Dinamic. Pritisnite jednom, biće prikazano trenutno podešavanje slike.

S.MODE: onda će se zvuk promeniti na sledeći način: Standard-Music-Movie Sports-User Pritisnite jednom, biće prikazano trenutno podešavanje zvuka

SLEEP: Pritisnite ovaj taster da kontrolišete vreme automatskog isključivanja Pritisnite (SLEEP) i vreme automatskog isključivanja će se promeniti na sledeći način: OFF-10-20-30-60-90-120-180-240-OFF.

\leftarrow : Prethodno.


$\leftarrow\leftarrow$: Nazad.

$\rightarrow\rightarrow$: Napred.

\rightarrow : Sledeće.

Prva Instalacija


Sistemska postavka će se pojaviti kada prvi put otvorite TV. Podesite u skladu sa vodičem na ekranu. Pritisnite dugme **OK** da biste započeli podešavanje.

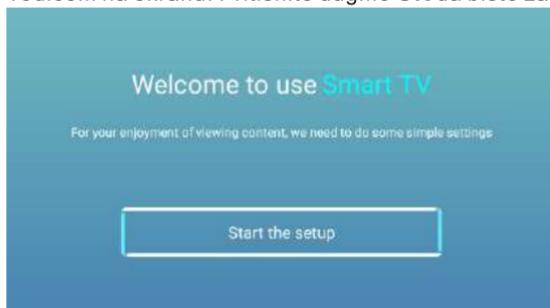

Pritisnite dugme ▼ / ▲ da biste izabrali jezik.



Pritisnite dugme ◀ / ▶ da izaberete vremensku zonu.

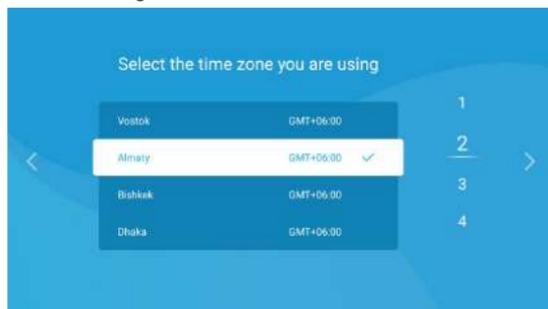

Pritisnite dugme ◀ / ▶ da izaberete Podesite svoju TV mrežu.



Pritisnite dugme ◀ / ▶ da izaberete vodič za gledanje TV-a.
Pritisnite dugme ▼ / ▲ da izaberete način na koji gledate TV programe ili izvor: Početna stranica/DTV/ATV/AV



Početna Stranica

Pritisnite dugme ▼/▲ da izaberete Početna stranica u čarobnjaku za podešavanje ili pritisnite dugme ◀/▶ da izaberete Početna u meniju DTV/ATV ulaza.




Podešavanja

Pritisnite dugme ▼/▲/◀/▶ da biste izabrali Podešavanja. i pritisnite dugme OK da biste ušli u Podešavanja sistema.
Pritisnite dugme ▼/▲/◀/▶ da izaberete Mreža/Vreme/Zajedničko/Nalozi/Informacije o sistemu.



Mreža

Na stranici sa podešavanjima, pritisnite ▼/▲ da biste izabrali Mreža, a zatim pritisnite <OK> da biste ušli na stranicu Mreža za sledeću operaciju.

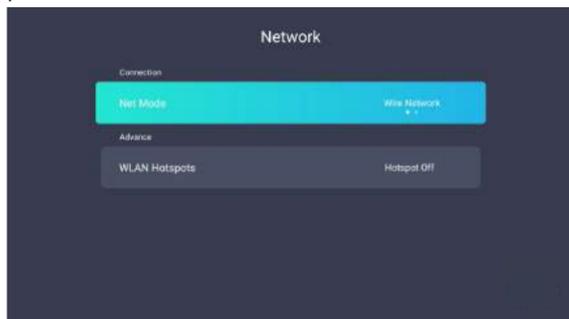

Net Mode


Pritisnite ▼/▲ da izaberete Net Mode, a zatim pritisnite ◀/▶ da izaberete Vire Network ili Vireless.


VLAN Hotspots

Postavite TV kao VIFI predajnik.

Vreme

Na stranici sa podešavanjima, pritisnite ▼/▲/◀/▶ da izaberete Vreme, a zatim pritisnite <OK> da uđete na stranicu Vreme za sledeću operaciju.

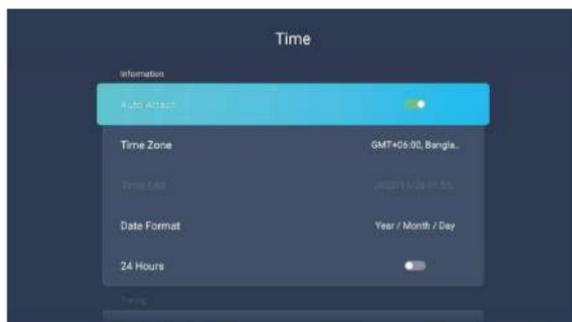

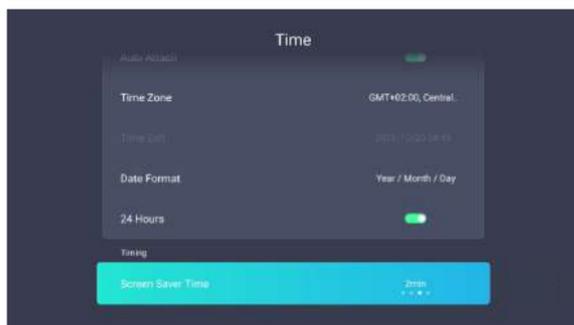


Pritisnite dugme ▼/▲ da izaberete Automatsko pričvršćivanje/Vremenska zona/Format datuma/24 sata/Vreme čuvara ekrana/Tajmer za isključenje/ Tajmer za uključivanje.

Auto Attach	Automatski dobijte trenutno vreme i datum.
Vremenska zona	Podesite trenutnu vremensku zonu.
Format datuma	Podesite trenutni format datuma.
24 sati	Izaberite 12 sati ili 24 sata.
Vreme čuvara ekrana	Podesite vreme čuvara ekrana na Isključeno/1min/2min/5min.
Off Timer	Set Off Timer.
On Timer	Set On Timer.

Ajednički

Na stranici sa podešavanjima, pritisnite ▼/▲/◀/▶ da izaberete Common, a zatim pritisnite <OK> da uđete u Common stranicu za sledeću operaciju.



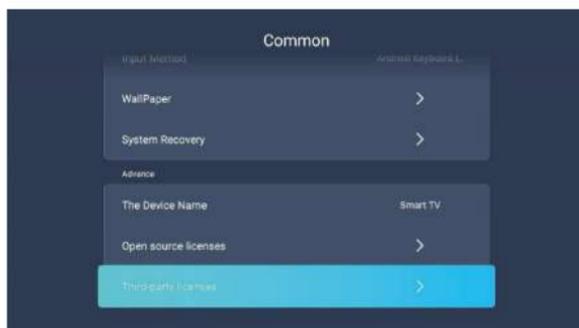


Pritisnite dugme ▼/▲ da izaberete Jezik/Metod unosa/Pozadinu/Oporavak sistema/Naziv uređaja/Licence otvorenog koda/Licence treće strane.

Jezik	Podesite trenutni jezik prikaza. Podrazumevani jezik je engleski.
Metod unosa	Podesite metod unosa daljinskog upravljača.
Vallpaper	Postavite pozadinu.
Oporavak sistema	Vratite sistemske postavke u prvobitno stanje.
Ime uređaja	Podesite naziv uređaja.
Licence otvorenog koda	Pogledajte licence otvorenog koda.
Licence treće strane	Pogledajte licence treće strane.

Računi

Na stranici sa podešavanjima, pritisnite ▼/▲/◀/▶ da biste izabrali Nalozi, a zatim pritisnite <OK> da biste ušli na stranicu Nalozi za sledeću operaciju. Na ovoj stranici možete dodati nalog ili izaći sa trenutnog naloga.

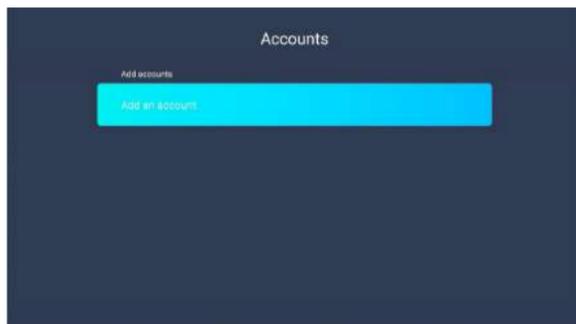

Informacije o sistemu

Na stranici sa podešavanjima, pritisnite ▼/▲/◀/▶ da izaberete Sistem Info, a zatim pritisnite <OK> da uđete na stranicu sa informacijama o sistemu za sledeću operaciju. Na ovoj stranici možete videti informacije vezane za sistem.



Mediji

Mediji

Nakon umetanja USB uređaja, sistem će se pojaviti da vas pita da li da uđete na multimedijalnu stranicu. Izaberite OK da biste ušli.

Ako ne postoji takva stranica, možete pritisnuti tastere ▼/▲/◀/▶ da odaberete Mediji, a zatim pritisnuti taster <OK> da uđete na stranicu sa medijima za sledeću operaciju.


Nakon unosa, stranica se prikazuje na sledeći način.



Video

Pritisnite ▼/▲ da izaberete video, a zatim pritisnite ▼/▲/◀/▶ da izaberete video koji želite da reprodukujete.


Pritisnite taster <MENU> da biste prikazali levu stranicu menija.

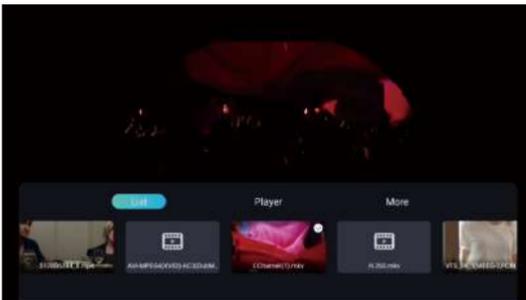

Audio

Pritisnite ▼/▲ da izaberete Audio, a zatim pritisnite ▼/▲/◀/▶ da izaberete audio koji želite da reprodukujete.

Pritisnite taster<MENU>da biste prikazali levu stranicu menija.

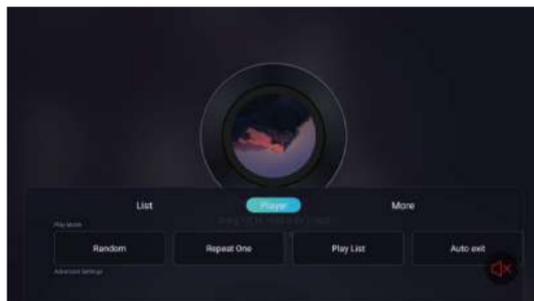

Slika

Pritisnite ▼/▲ da izaberete Image, a zatim pritisnite ◀/▶ da izaberete sliku koju želite da reprodukujete.




TV Setting

U interfejsu za gledanje TV-a, pritisnite dugme <Meni> na daljinskom upravljaču da biste ušli u meni TV podešavanja. Pritisnite taster ◀/▶ na daljinskom upravljaču da biste izabrali. Pritisnite taster <OK> na daljinskom upravljaču da biste ušli. (opcija: Izvor/Slika/Zvuk/Kanal/Zajedničko)

Izvor

Pritisnite taster <Meni> da biste ušli u interfejs glavnog menija, a zatim pritisnite taster ◀/▶ da biste izabrali meni Izvor. U ovom interfejsu, možete pritisnuti ▼/▲/◀/▶ <OK> da biste promenili izvor signala. (opcija: DTV/ATV/AV/HDMI 1/HDMI 2/HDMI 3)

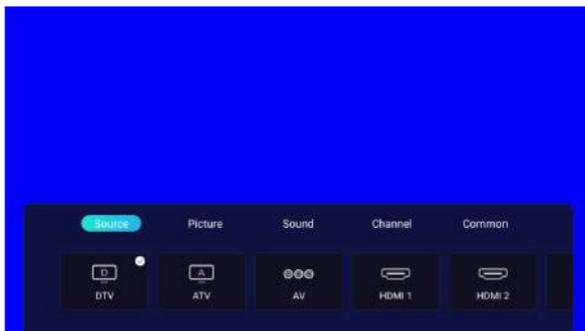

Slika

Pritisnite taster <Meni> da biste ušli u interfejs glavnog menija, a zatim pritisnite taster ◀/▶ da biste izabrali meni Slika.



-
1. Pritisnite ▼/▲ da izaberete meni.
(opcija: Režim slike/Odnos/Napredna podešavanja)
 2. Pritisnite <OK>/◀/▶ za podešavanje ili odabir.

Režim slike

Pritisnite ▼/▲ da izaberete režim slike Pritisnite ◀/▶ da izaberete režim slike.

(opcija: Standard/Dinamic/Soft/Živopisan/Korisnik)

Standard	Standardni efekat slike.
Dinamic	Poboljšajte kontrast, hromu i oštrinu slike, tako da slika bude u dinamičkom balansu boja.
Soft	Smanjite kontrast, osvetljenost, hromu i definiciju slike da bi slika izgledala meko.
Živopisan	Poboljšajte kontrast, hromu i definiciju slike da biste učinili boju svetlijom.
Korisnik	Izaberite Prilagođena podešavanja slike.

Aspect Ratio

Pritisnite ▼/▲ da izaberete Aspect Ratio Pritisnite tastere ◀/▶ da izaberete.
(opcija: 16:9/4:3/Zoom1/Zoom2)

Napredna podešavanja

Pritisnite ▼/▲ da izaberete Advance Settings Pritisnite tastere ◀/▶ da izaberete.

(opcija: smanjenje šuma/temperatura boje/pozadinsko osvetljenje/DLC)

Smanjenje buke

Postavlja opcije za intenzitet eliminacije šuma slike.

Pritisnite taster ◀/▶ da izaberete Smanjenje šuma, pritisnite taster <OK> da biste ušli na stranicu za izbor, a zatim pritisnite taster ◀/▶ da biste izabrali.

(opcija: Off/Lov/Middle/High)

Temperatura boje

Podesite ukupnu boju slike.

Pritisnite taster ◀/▶ da biste izabrali Temperaturu boje, pritisnite taster <OK> da biste ušli na stranicu za izbor i pritisnite taster ◀/▶ da biste izabrali.

(opcija: hladno/normalno/toplo)

Hladan	Slika je zelena i plava, manje crvena, a ukupna boja je svetla. Slika je svežija i elegantnija.
Normalno	Slika nije pristrasna i boja je umerena.
Toplo	Slika je crvena i zelena, manje plava, a boja je svetlija i meka.

Pozadinsko osvetljenje

Pritisnite taster ◀/▶ da biste izabrali Pozadinsko osvetljenje, pritisnite taster <OK> da biste ušli na stranicu za podešavanje i pritisnite taster ◀/▶ da biste podesili.

DLC

Pritisnite tastere ◀/▶ da biste izabrali DLC, pritisnite taster <OK> da biste ušli na stranicu za izbor, a zatim pritisnite tastere ◀/▶ da biste izabrali.

Zvuk

Pritisnite taster <Meni> da biste ušli u interfejs glavnog menija, a zatim pritisnite taster ◀/▶ da biste izabrali meni Zvuk.



1. Pritisnite ▼/▲ da izaberete meni.

(opcija: Režim zvuka/Izlaz zvuka/Napredna podešavanja)

2. Pritisnite <OK>/◀/▶ za podešavanje ili odabir.

Režim zvuka

Pritisnite ▼/▲ da izaberete režim zvuka. Pritisnite ◀/▶ da izaberete režim zvuka.

(opcija: Standard/Muzika/Film/Vesti/Korisnik)

Standard

Uravnotežen zvuk u svakom okruženju.

Muzika

Visoki tonovi su pojačani, a bas spušten.

Film

Poboljšajte visok i nizak ton, bogat melodijom, i poboljšajte efekat na licu mesta.

Vesti

Poboljšajte glas.

Korisnik

Izaberite Prilagođene postavke zvuka.

Napomena: Možete pritisnuti prečicu SMODE na daljinskom upravljaču da izaberete režim zvuka.

Izgovori

Pritisnite ▼/▲ da izaberete Sound Out Pritisnite ◀/▶ da izaberete režim audio izlaza.

(opcija: interni TV zvučnik/SPDIF/HDMI ARC/Bluetooth/slušalice)

Napredna podešavanja

Pritisnite ▼/▲ da izaberete napredna podešavanja Pritisnite tastere ◀/▶ da izaberete.

(opcija: Balans/AVC/Digitalni audio izlaz/Multi Track Sound/SPDIF Delai/Surround/Samo audio)

Balans

Podesite različite frekvencijske komponente da biste kompenzovali defekte zvučnika i zvučnog polja.

Pritisnite tastere ◀/▶ da izaberete Balans, pritisnite taster<OK> da biste ušli, a zatim pritisnite tastere ◀/▶ da biste podesili.

AVC

Pritisnite tastere ◀/▶ da izaberete AVC, a zatim pritisnite taster<OK> da biste uključili/isključili.

Nakon što je „Automatska kontrola jačine zvuka“ uključena, kada je jačina zvuka podešena, ona može da zadrži jačinu zvuka u zvučniku stabilnom bez obzira na to koji TV zvuk svakog kanala je drugačiji.

Digitalni audio izlaz

Pritisnite tastere ◀/▶ da izaberete Digitalni audio izlaz, koji je podrazumevano isključen.

Zvuk sa više numera

Pritisnite tastere ◀/▶ da izaberete Zvuk sa više numera.Podrazumevano je Mono.

SPDIF Delai

Pritisnite tastere ◀/▶ da izaberete SPDIF odlaganje, koje je podrazumevano 0.

Okruziti

Pravac svakog izvora zvuka u originalnom signalu se reprodukuje kako bi se korisnik osećao okružen zvucima iz različitih pravaca.


Pritisnite tastere ◀/▶ da izaberete Surround, a zatim pritisnite taster<OK> da biste uključili/isključili.

Samo audio

Pritisnite taster ◀/▶ da izaberete Samo audio, a zatim pritisnite taster<OK> da biste uključili/isključili.

Kanal

Pritisnite taster <Meni> da biste ušli u interfejs glavnog menija, a zatim pritisnite taster ◀/▶ da biste izabrali meni Kanal.

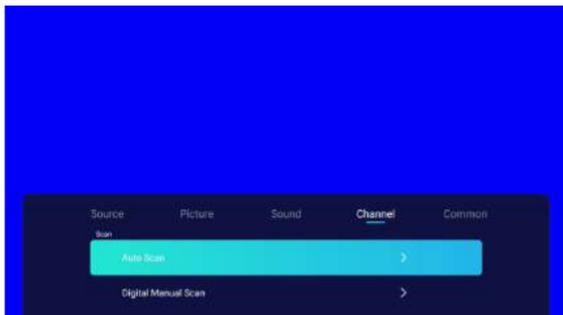


Napredna podešavanja

(opcija: Skeniraj/Lista kanala)

Skeniraj


Pritisnite tastere ◀/▶ da biste izabrali Skeniraj, a zatim pritisnite taster <OK> da biste ušli.

Pritisnite ▼/▲ da izaberete Start Scan/Analog Manual Scan.

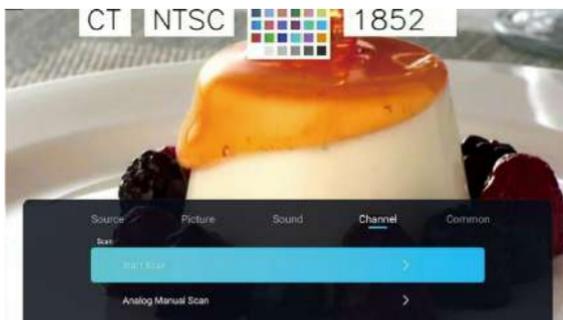

Započni skeniranje

Start Scan će automatski tražiti važeće programske kanale. Pritisnite V/A da izaberete Start Scan, pritisnite <OK> da biste ušli, a zatim počnite da tražite. Ako želite da zaustavite proces pretrage, možete pritisnuti dugme Izadi ili Meni.

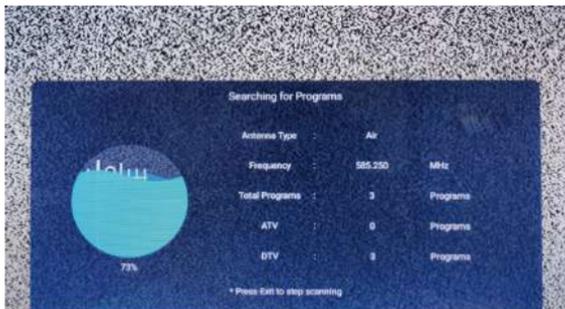

Analogno ručno skeniranje

Ručno potražite važeći analogni programski kanal. Pritisnite ▼/▲ da izaberete Analogno ručno skeniranje, pritisnite <OK> da uđete, a zatim pokrenite ručnu pretragu kanala. Ako želite da zaustavite proces pretrage, možete pritisnuti dugme Izadi ili Meni.



Kanal

Pritisnite ▼/▲ da izaberete kanal, a zatim pritisnite ◀/▶ da izaberete broj kanala.

Sistem boja

Pritisnite ▼/▲ da izaberete sistem boja, a zatim pritisnite ◀/▶ da izaberete: PAL/NTSC /SECAM/NTSC-443/Auto.

Ozvučenje


Pritisnite ▼/▲ da izaberete Sound Sistem, a zatim pritisnite ◀/▶ da izaberete BG/DK/IL/L/M/N.

Frekvencija

Pritisnite ▼/▲ da izaberete Frekvencija, a zatim pritisnite ◀/▶ da izaberete.

Lista kanala

Pogledajte sve postojeće programske kanale Pritisnite ▼/▲ da odaberete Lista kanala, a zatim pritisnite ▶ da uđete u podmeni.

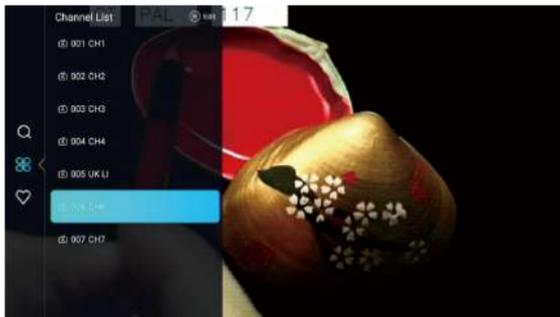


Pritisnite ▼/▲ da izaberete program i pritisnite <Meni> da uredite program (opcija: Pomeri/Na vrh/Omiljeno/Preimenuj/Izbriši/Preskoči)

Ako je program izabran kao program za analogni signal, program se može preimenovati.

Automatsko skeniranje

Automatska pretraga može automatski tražiti efikasan programski kanal. Pritisnite dugme ▼/▲ da biste izabrali Auto Scan, a zatim pritisnite dugme OK da biste pokrenuli automatsku pretragu.

Ako želite da prekinete pretragu, pritisnite dugme EKSIT ili MENU da biste zaustavili pretragu.

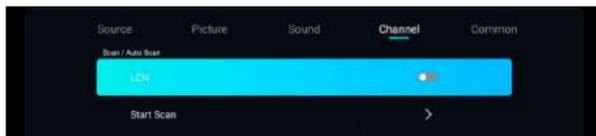

LCN

Pritisnite dugme ▼/▲ da izaberete LCN. Pritisnite dugme ▶ da izaberete On/Off.

Započni skeniranje

Pritisnite dugme ◀/▶ da izaberete Start Scan.

Digita ručno skeniranje

Analogna ručna pretraga može ručno tražiti kanal efektivnog simulacionog programa.

Može se izabrati samo u ATV ulazu.


Pritisnite dugme ▼/▲ da izaberete Digta Manual Scan , a zatim pritisnite dugme OK da uđete u podmeni.

Pritisnite dugme EKSIT ili MENU da biste izašli.



Zajednički

Pritisnite taster <Meni> da biste ušli u interfejs glavnog menija, a zatim pritisnite taster ◀/▶ da biste izabrali zajednički meni.

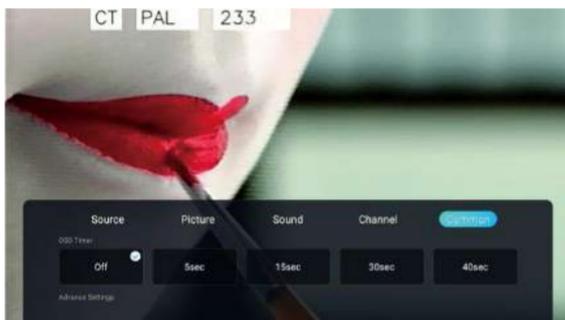

1 .Pritisnite ▼/▲ da izaberete meni.

(opcija: OSD tajmer/napredna podešavanja)

2.Pritisnite<OK>/◀/▶ za podešavanje ili odabir.

OSD tajmer

Pritisnite ▼/▲ da izaberete OSD tajmer, a zatim pritisnite ◀/▶ da izaberete.

(opcija: isključeno/5 sekundi/15 sekundi/30 sekundi/40 sekundi)

Napredna podešavanja

Pritisnite ▼/▲ da izaberete Advance Settings.

Merač spavanja

Pritisnite taster ◀/▶ da izaberete Sleep Timer, pritisnite taster <OK> da biste ušli, a zatim pritisnite taster ◀/▶ da biste izabrali.

(opcija: isključeno/15min/30min/45min/60min/90min/120min/240min)

Auto Standbi Timer

Pritisnite taster ◀/▶ da izaberete tajmer automatskog režima pripravnosti, pritisnite taster <OK> da biste ušli, a zatim pritisnite taster ◀/▶ da biste izabrali.

(opcija: isključeno/3 sata/4 sata/5 sati)

Dailight SavingAuto

Pritisnite taster ◀/▶ da biste izabrali, a zatim pritisnite taster <OK> da biste izabrali uključeno/isključeno/automatski.

Plavi ekran

Kada nema signala, ekran će biti plavi.

Pritisnite taster ◀/▶ da biste izabrali Plavi ekran, a zatim pritisnite taster <OK> da biste izabrali uključivanje/isključivanje.

Teletekst Zapadni evro

Pritisnite taster ◀/▶ da biste izabrali, a zatim pritisnite taster <OK> da biste izabrali uključivanje/isključivanje.

Audio jezik 1

Pritisnite taster ◀/▶ da biste izabrali, a zatim pritisnite taster <OK> da biste izabrali uključivanje/isključivanje.

Audio jezik 2

Pritisnite taster ◀/▶ da biste izabrali, a zatim pritisnite taster <OK> da biste izabrali uključivanje/isključivanje.

CEC

Pritisnite taster ◀/▶ da izaberete CEC, a zatim pritisnite taster <OK> da uđete u podmeni.

Pritisnite taster ◀/▶/<OK> u podmeniju da biste uključili ili isključili funkcije CEC-a, automatskog uključivanja televizora i automatskog isključivanja uređaja.

Zaključati

Pritisnite taster ◀/▶ da izaberete Zaključaj, pritisnite taster <OK> da biste ušli.

Lozinka je 4711.

Hotelski režim

Pritisnite dugme ◀/▶ da biste izabrali Hotelski režim, a zatim pritisnite dugme OK da biste izabrali Uključeno/Isključeno. Lozinka je 4711.

PVR Setting

Pritisnite dugme ▼/▲ da izaberete PVR podešavanje.

Pritisnite dugme ▼/▲ da izaberete Select Disk/Format/Speed/Record List/Schedule List.

Pritisnite dugme ENTER da uđete u sub-mene. (Koristi se samo na DTV kanalima)

Menu Reset

Vratiti podrazumevane postavke.

Pritisnite tastere ◀/▶ da biste izabrali Resetovanje menija, a zatim pritisnite taster <OK> da biste izabrali da li želite da resetujete.

Pomoć

Nema struje	Proverite da li je kabl za naizmeničnu struju na TV-u u plusu ili ne. Ako i dalje nema napajanja, izvucite utikač i ponovo ga uključite nakon 60 sekundi. I ponovo otvorite TV
Prijem signala nije ispravan	<ul style="list-style-type: none"> • Za izazivanje duple slike ili fantoma ako postoji visoka zgrada ili visokoplaninski okrugli TV. Možete podesiti efekat slike ručnim radom: pogledajte uputstvo za regulaciju nonija ili promenite smer spoljne antene. • Ako koristite unutrašnju antenu, pod određenim okolnostima, prijem će biti teži. Tako da možete promeniti smer antene da biste podesili efekat slike. Ako ne možete da promenite ni efekat prijema slike, morate koristiti spoljnu antenu.
Bez slike	<ul style="list-style-type: none"> • Proverite da li je antena na zadnjoj strani televizora pravilno povezana ili ne. • Pokušajte da izaberete druge kanale i proverite da li je problem u samom televizoru ili ne.
ali. Video je u redu bez zvuka	<ul style="list-style-type: none"> • Povećajte jačinu zvuka. • Proverite da li je TV u režimu isključenja zvuka ili ne i pritisnite dugme za isključivanje zvuka da bi se zvuk nastavio.
ali, zvuk je u redu greška u boji ili nema slike	<ul style="list-style-type: none"> • Povećajte kontrast i osvetljenost.
Statična slika snega i šum	<ul style="list-style-type: none"> • Proverite da li je antena na zadnjoj strani televizora povezana ili ne.
Nivo izlomljena linija	<ul style="list-style-type: none"> • Usisivač, kao što je fen za kosu, Možda ometa električni uređaj, isključite ove vrste električnih uređaja, čistača i tako dalje.
Slika ili-Dual "simulakrum" Televizor ne reaguje sa daljinskim	<ul style="list-style-type: none"> • Možda lokacija za antenu nije dobra. Upotrebom antene sa visokim snopom možete poboljšati kvalitet slike na ekranu. • Upravljajte daljinskim upravljačem direktno na senzor daljinskog upravljača na TV-u. Ako TV i dalje nema odgovora, proverite da li je plastična kesa na daljinskom upravljaču ili ne. I proverite da li je lokacija za bateriju ispravna. Zamenite novu bateriju. • TV će se prebaciti u STAND BI ako daljinski upravljač ne odgovori u roku od nekoliko minuta.
NEMA video ulaza (PC režim)	<ul style="list-style-type: none"> • Proverite da li je kabl ekrana povezan na VGA ispravan. • Proverite da li postoji krivina na kابلu ekrana.
Vertikalno treptanje (PC režim)	<ul style="list-style-type: none"> • Uđite u glavni meni Koristite regulator sata za šum video ekrana da biste eliminirali vertikalnu liniju.
Horizontalno kopiranje (PC režim)	<ul style="list-style-type: none"> • Podesite horizontalni zvuk zvuka u glavnom meniju da biste obrisali horizontalnu liniju ripanje.
Ekran je previše svetao ili previše taman (PC režim)	<ul style="list-style-type: none"> • Podesite odnos kontrasta ili osvetljenost u glavnom meniju.
PC funkcija nema odgovora	<ul style="list-style-type: none"> • Proverite podešavanja računara u stanju kompatibilne rezolucije ekrana
Ripping linija u RCA povezivanju	<ul style="list-style-type: none"> • Molimo koristite kabl za povezivanje dobrog kvaliteta.
Problem i dalje postoji	<ul style="list-style-type: none"> • Isključite kabl za napajanje i sačekajte 30 sekundi, a zatim povežite Ako postoji neki problem sa našim televizorom, nemojte ga sami popravljati, obratite se korisničkom servisu.

Biće kompletna slika i osvetljenost će se smanjiti ako je TV u režimu Note. Zato vas molimo da ne držite televizor u istom stanju, statičnu sliku predugo. Meni ili ista slika koja ima veliku razliku u osvetljenosti i odnosu kontrasta predugo.

Napomena: TV panel je napravljen pomoću tehnologije visoke preciznosti koja vam daje fine detalje slike u živopisnim bojama. Povremeno se na ekranu može pojaviti nekoliko neaktivnih piksela kao fiksna tačka crvene, zelene, plave ili bele. Imajte na umu da ovo ne utiče na performanse proizvoda.



USER MANUAL

LED TELEVISION

Model: 43AOS460F

Thank you for purchasing this device.

FOX LED televisions are known for their great performance, as for modern, functional and elegant design. Besides that, we constantly improve our customer support, we have highly efficient and wide network of services, that make our proud customers feel safe.

You made a right choice.

Now it's time for instructions, they are not complicated, but you have to follow them.

EN

Content

Warning and Precautions	1
Important Safety Instructions	2
Remote Control Operation	4
TV Buttons and Terminal Interface	5
Remote Control	6
First Time Installation	7
Home page	9
Media	14
TV Setting	16
Source	16
Picture	16
Sound	18
Channel.....	20
ChannelList.....	22
Lock.....	24
Help.....	26

*Note: The pictures and contents of the product only for reference,
and Specific subject to the real goods.*

Warning and Precautions

	Warning	
Risk of electric shock. Do not open.		
<p>Warning: To avoid the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.</p>		



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to a person.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

CAUTION: TO ENSURE PERSONAL SAFETY, OBSERVE THE FOLLOWING RULES REGARDING THE USE OF THIS UNIT.

1. Operate only from the power source specified on the unit.
2. Avoid damaging the AC plug and power cord.
3. Avoid improper installation and never position the unit where good ventilation is unattainable.
4. Do not allow objects or liquid into the cabinet openings.
5. In the event of trouble, unplug the unit and call a service technician. Do not attempt to repair it yourself or remove the rear cover.

Changes or modifications not approved by our company could void the warranty.

- * When you don't use this TV set for a long period of time, be sure to disconnect both the power plug from the AC outlet and antenna for your safety.
- * To prevent electric shock do not use this power plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

Do not attempt to service the product yourself

Caution

To prevent electrical shock, do not open the TV casing.
There are no user serviceable parts inside.
Please refer to qualified service personnel for repairs.

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this unit near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table-cloths, curtains etc. There must be a minimum distance of 5cm clear space around the unit at all times to ensure proper ventilation.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat. No naked flame sources such as lit candles, should be placed on or near the unit.
- 9) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the unit.
- 10) Only use attachments/accessories specified by the manufacturer.
- 11) Use only with a cart, stand, tripod, bracket or table specified by the manufacturer or sold with the unit. When a cart is used, use caution when moving the cart/unit combination to avoid injury from tip-over.
- 12) Unplug this unit during lightning storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, does not operate normally or has been dropped.
- 14) The unit should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the unit.
- 15) Place the television on a stable, flat surface. Failure to do so can result in the television falling, causing injury.
- 16) Do not allow young children to play around or on the television. Do not hang from the unit. Failure to do so can result in the television falling, causing injury.
- 17) Do not allow young children to play with the plastic bag that came with the television when you unpacked it. Failure to do so can result in suffocation, which may lead to death.
- 18) Avoid improper installation and never position the unit where good ventilation is impossible. When installing this unit, distance recommendations must be maintained between the set and the wall, as well as inside a tightly enclosed area or piece of furniture. Keep to the minimum distance guidelines shown for safe operation.
- 19) **Cautions for installation**
 - Do not tilt the unit towards the left or right or towards the back.
 - Ensure the power cord is out of the path of foot traffic.
 - The unit will generate a slight amount of heat during operation. Ensure that sufficient space is available around the unit to allow satisfactory cooling.
 - Have two people remove the unit from the box with the screen facing away from you. It's possible your clothing (such as a belt buckle or button) may scratch the front of the unit. Do the same when moving the unit to another location.



-
- 20) This unit shall be connected to a mains socket outlet with a protective earthing connection.
 - 21) Make enough room for inserting and removing the power plug. Place the unit as close to the outlet as possible. The main power supply for this unit is controlled by inserting or removing the power plug. Physically disconnecting the power plug is the only way to completely disconnect the unit from the mains power source.
 - 22) Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
 - 23) When this unit is connected to the wall outlet, it is always on standby even when all the LED lamps are not lit. To shut down the unit, unplug the unit from the wall outlet.
 - 24) If the supply cord is damaged, it must be replaced before further use by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - 25) Always place the TV on furniture that can safely support the TV. Make sure the ends of the TV do not overhang the edge of the supporting furniture.
 - 26) Do not place the TV on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the TV to a wall or other suitably strong support.
 - 27) Do not stand the TV on cloth or other materials placed between the TV and the supporting furniture.
 - 28) Where the mains plug is used as the disconnect device, the disconnect device shall remain readily operable.

IMPORTANT INFORMATION


Televisions that are not positioned in sufficiently stable locations can present potential falling hazards. To avoid injuries, particularly to children, take the following simple precautions:

- Place this television only on furniture that can safely support it.
- Use only a cabinet or stand recommended by the manufacturer of the television.
- Ensure the television does not hang over the edge of supporting furniture.
- Do not place the television on tall furniture (such as cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Do not place cloth or other materials between the television and the supporting furniture.
- Do not let children climb on furniture to reach the television or its controls.

Remote Control Operation


Installing Batteries

1. Slide in the direction shown by the arrow in Image 1 below to open the cover of the batteries on the back of the remote control.
2. Load two AAA alkaline batteries in the compartment.
3. Replace the cover of the batteries.

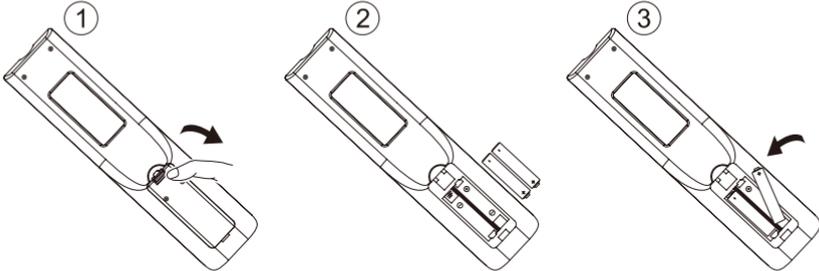

Precautions

Make sure that there is no obstacle between the remote control and television set.

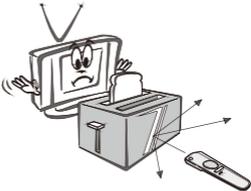


Keep the remote control away from heat sources and humid areas to ensure effective performance of the remote control.



As strong light may interfere with the signals, change your position to operate the remote control if the television cannot be turned on or off as you expect.



Make sure that two AAA 1.5V alkaline batteries are loaded correctly.

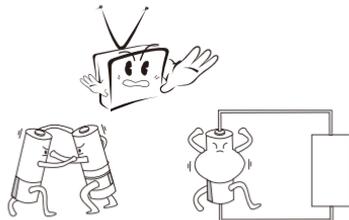

TV Buttons And Terminal Interface

TV Buttons




- Turn on the TV:
In standby mode, short press TV control button to turn on the TV.
- Soft keyboard function:
After turning on the TV, short press TV control button to call out the following soft keyboard. Short press TV control button to select the item you want. Long press TV control button to enter the item you have selected.

Soft Keyboard		
Icon	Name	Function
	Down/Up	Change to previous or next channel in TV mode. Move down or up to select an item in menu settings.
	Left/Right	Decrease or increase the sound volume in TV mode. Move left or right to select an item in menu settings.
	Main Menu	Access the main menu settings.
	Source	Access the interface of input source.
	Standby	Turn the TV standby.


Terminal Interface

Note: The following are the various terminal interface, the actual position and arrangement, the number of different models may be different.

	AV input External AV Signal Input And Relevant Right/Left Sound Channel		EARPHONE output When earphones are plugged in, speakers are disabled (Some models without this interface)
	HDMI input Digital signal input from HDMI video connector.		USB input Connect a USB device here to play its media files
	ANT 75 Connect the antenna/cable tv input (75/VHF/UHF)		COAXIAL Connect the SPDIF receiver. (Some models without this interface)
	RJ45 Connect the Internet.		CI Connect the Data TV decryption card

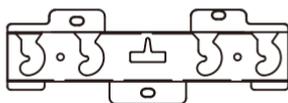

(32"40"43"50"55")

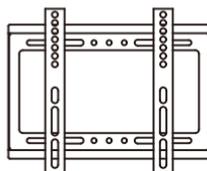

(65")

Attention: Pls purchase the wallmount as show in the picture if the customer need.

Remote Control



POWER (⏻): Turns the TV on or off.

MUTE (🔇): Reduces the TV volume to its minimum level. Press again to restore the volume.

NUMBER BUTTONS: Press 0-9 select a TV channel directly when you are watching TV.

Favorite: Press to add or remove your favorite

MOUSE: Show or hide the mouse.

MENU: Accesses the Main Menu, or return to the upper level of asub-menu.

SOURCE: To select input source menu.

Arrows (</>/^/∨): Uses the four arrows to highlight different items in the TV menu or change the value.

OK: Enter and confirm button.

EPG: Display the EPG.

BACK: Return to the previously-viewed program, or return to the upper-level screen.

⏸: Pause.

HOME: Android homepage shortcut.

VOL+ or VOL-: Increases or decreases the TV volume.

CHA or CHV: Scans up or down through the current channel list.

PVR: Grabar

YouTube: Access the YouTube interface.

NETFLIX: Access the NETFLIX interface.

Color Buttons (May not be available)(Red/Green/Yellow/Blue)

T.Shift: When the user leaves, it will auto stop the TV program and record the program into the remote store device. Available when the PVR function is effective).

P.MODE: then picture will change as following: Standard Mild-User Dynamic. Press once, the current picture setup will be shown.

S.MODE: then sound will change as following: Standard-Music-Movie Sports-User. Press once, the current sound setup will be shown

SLEEP: Press this key to control the auto time of turn off Press (SLEEP) then the auto turn-off time will change as followi ng: OFF-10-20-30-60-90-120-180-240-OFF.

⏮: Previous.


⏪: Backward.

⏩: Forward.

⏭: Next.

First Time Installation


The system setting will appear when you open the TV on the first time. Please set according to the on-screen guide. Press **OK** button to start the setup.

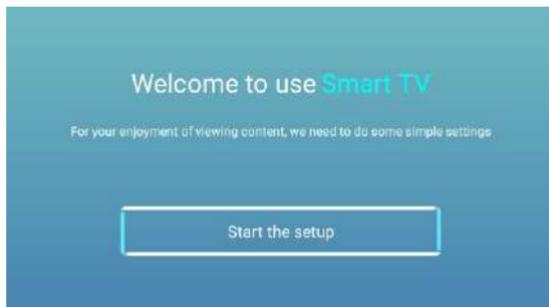

Press ▼ / ▲ button to select the language.



Press ◀ / ▶ button to select the time zone.

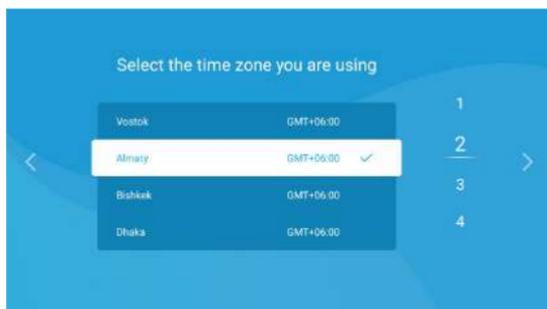

Press ◀ / ▶ button to select Set your TV network.



Press ◀ / ▶ button to select TV viewing guide.

Press ▼ / ▲ button to choose the way you watch TV programs or source: Home page/DTV
ATV/AV



Home page

Press ▼/▲ button to select Home page in Setup Wizard or press ◀/▶ button to select Home in the menu of DTV/ATV input .



Settings


Press ▼/▲/◀/▶ button to select Settings, and press **OK** button to enter the System Setting.

Press ▼/▲/◀/▶ button to select Network/Time/Common/Accounts/System Info.



Network

On the Setting page, press ▼/▲◀/▶ to select Network, and then press <OK> to enter the Network page for the next operation.

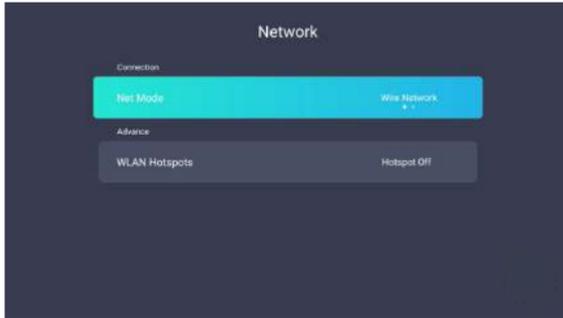

Net Mode


Press ▼/▲ to select Net Mode, and then press ◀/▶ to select Wire Network or Wireless.


WLAN Hotspots

Set the TV as a WIFI transmitter.

Time

On the Setting page, press ▼/▲◀/▶ to select Time, and then press <OK> to enter the Time page for the next operation.

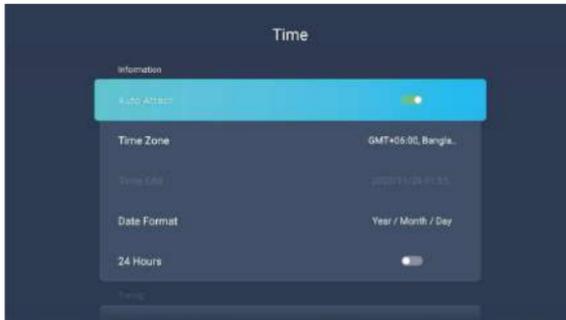

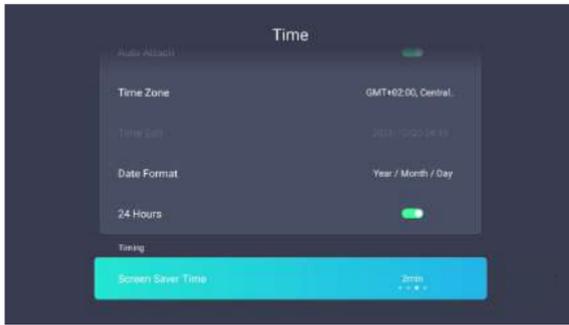



Press ▼/▲ button to select Auto Attach/Time Zone/Date Format/24 Hours/Screen Saver Time/Off Timer/On Timer.

- | | |
|-------------------|--|
| Auto Attach | Get the current time and date automatically. |
| Time Zone | Set the current time zone. |
| Date Format | Set the current date format. |
| 24 Hours | Select the 12 hours or 24 hours. |
| Screen Saver Time | Set the screen saver time as Off/1min/2min/5min. |
| Off Timer | Set Off Timer. |
| On Timer | Set On Timer. |

Common

On the Setting page, press ▼/▲◀/▶ to select Common, and then press<OK>to enter the Common page for the next operation.

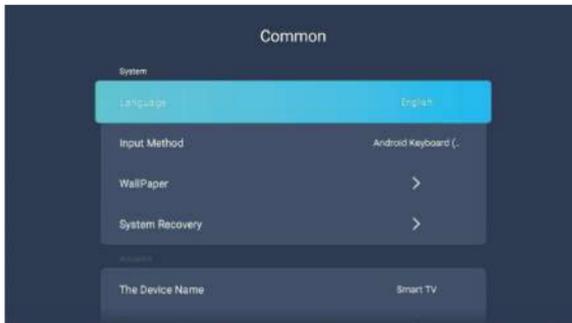

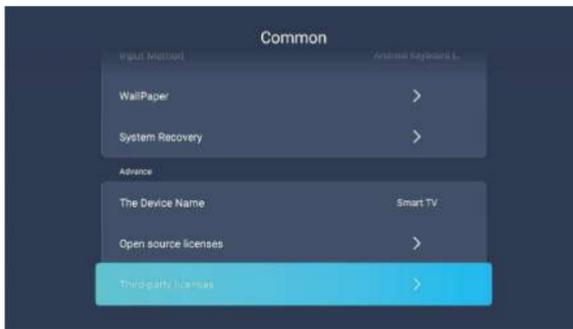


Press ▼/▲ button to select Language/Input Method/Wallpaper/System Recovery/The device name/Open source licenses/Third-party licenses.

Language	Set the current display language.The default language is English.
Input Method	Set the remote controller input method.
Wallpaper	Set wallpaper.
System Recovery	Restore the system settings to the original state.
The Device Name	Set Device Name.
Open source licenses	View open source licenses.
Third party licenses	View third party licenses.

Accounts

On the Setting page, press ▼/▲◀/▶ to select Accounts, and then press<OK>to enter the Accounts page for the next operation.On this page, you can add an account or exit the current account.

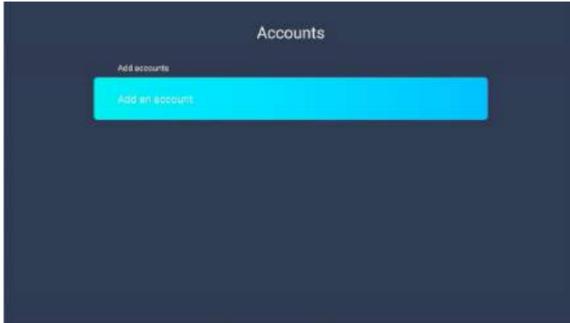

System Info

On the Setting page, press ▼/▲◀/▶ to select System Info, and then press<OK>to enter the System Info page for the next operation.You can view system related information on this page.



Media

Media

After inserting the USB device, the system will pop up to prompt you whether to enter the multimedia page. Select OK to enter.

If there is no such page, you can press the ▼/▲/◀/▶ keys to select Media, and then press the <OK> key to enter the Media page for the next operation.


After entering, the page is displayed as follows.



Video

Press ▼/▲ to select the video, and then press ▼/▲/◀/▶ to select the video you want to play.


Press the <MENU> key to display the left menu page.

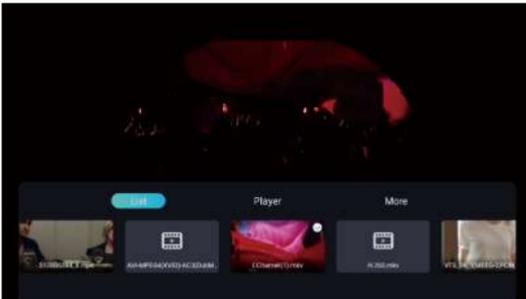

Audio

Press ▼/▲ to select Audio, and then press ▼/▲/◀/▶ to select the audio you want to play.

Press the<MENU>key to display the left menu page.

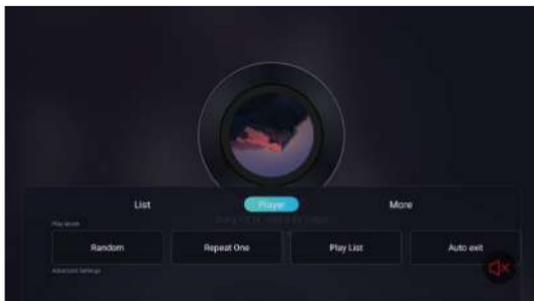

Image

Press ▼/▲ to select Image, and then press ◀/▶ to select the picture you want to play.



TV Setting

In the TV viewing interface, press the <Menu> button in the remote control to enter the TV setting menu.

Press the ◀/▶ key in the remote control to select. Press the <OK> key in the remote control to enter.

(option: Source/Picture/Sound/Channel/Common)

Source

Press the <Menu> key to enter the main menu interface, and press the ◀/▶ key to select the Source menu.


In this interface, you can press ▼/▲/◀/▶/<OK> to switch the signal source.

(option: DTV /ATV /AV/HDMI 1/HDMI 2/HDMI 3)



Picture

Press the <Menu> key to enter the main menu interface, and press the ◀/▶ key to select the Picture menu.

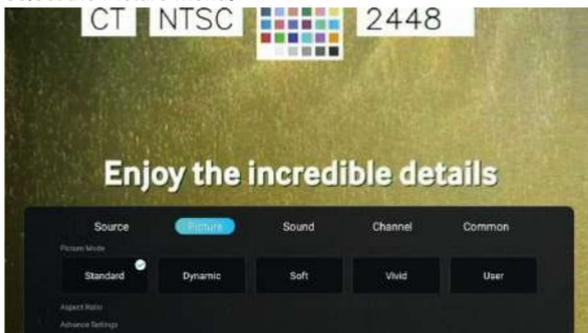

-
1. Press ▼/▲ to select the menu.
(option: Picture Mode/Aspect Ratio/Advance Settings)
 2. Press <OK>/◀/▶ to adjust or select.

Picture Mode

Press ▼/▲ to select Picture Mode. Press ◀/▶ to select the image mode.
(option: Standard/Dynamic/Soft/Vivid/User)

Standard	Standard picture effect.
Dynamic	Enhance the contrast, chroma and sharpness of the picture, so that the picture is in dynamic color balance.
Soft	Reduce the contrast, brightness, chroma and definition of the picture to make the picture look soft.
Vivid	Enhance the contrast, chroma and definition of the picture to make the color more bright.
User	Select Custom Image Settings.

Aspect Ratio

Press ▼/▲ to select Aspect Ratio. Press the ◀/▶ keys to select.
(option: 16:9/4:3/Zoom1/Zoom2)

Advance Settings

Press ▼/▲ to select Advance Settings. Press the ◀/▶ keys to select.
(option: Noise Reduction/Color Temp/Backlight/DLC)

Noise Reduction

Sets options for the intensity of image noise elimination.

Press the ◀/▶ key to select Noise Reduction, press the <OK> key to enter the selection page, and press the ◀/▶ key to select.
(option: Off/Low/Middle/High)

Color Temp

Adjust the overall color of the image.

Press the ◀/▶ key to select Color Temp, press the <OK> key to enter the selection page, and press the ◀/▶ key to select.
(option: Cool/Normal/Warm)

Cool	The picture is green and blue, less red, and the overall color is light. The picture is more fresh and elegant.
Normal	The picture is not biased and the color is moderate.
Warm	The picture is red and green, less blue, and the color is more bright and

Backlight

Press the ◀/▶ key to select Backlight, press the<OK>key to enter the adjustment page, and press the ◀/▶ key to adjust.

DLC

Press the ◀/▶ keys to select DLC, press the<OK>key to enter the selection page, and press the ◀/▶ keys to select.

Sound

Press the<Menu>key to enter the main menu interface, and press the ◀/▶ key to select the Sound menu.



- 1.Press ▼/▲ to select the menu.
(option:Sound mode/Sound Out/Advance Settings)
- 2.Press<OK>/◀/▶ to adjust or select.

Sound mode

Press ▼/▲ to select Sound mode.Press ◀/▶ to select the sound mode.
(option: Standard/Music/Movie/News/User)

Standard	A balanced sound in any environment.
Music	The treble is strengthened and the bass is lowered.
Movie	Enhance the high and low pitch, rich in melody, and enhance the on-site effect.
News	Enhance voice.
User	Select Custom Sound Settings.

Note: You can press the SMODE shortcut key in the remote control to select the sound mode.

Sound Out

Press ▼/▲ to select Sound Out. Press ◀/▶ to select the audio output mode.
(option: Internal TV Speaker/SPDIF/HDMI ARC/Bluetooth/Headphones)

Advance Settings

Press ▼/▲ to select advanced settings. Press the ◀/▶ keys to select.
(option: Balance/AVC/Digital Audio Output/Multi Track Sound/SPDIF Delay/Surround/
Audio Only)

Balance

Adjust various frequency components to compensate the defects of loudspeaker and sound field.

Press the ◀/▶ keys to select Balance, press the <OK> key to enter, and press the ◀/▶ keys to adjust.

AVC

Press the ◀/▶ keys to select AVC, and press the <OK> key to switch on/off.
After the "Automatic Volume Control" is turned on, once the volume is set, it can keep the volume in the speaker stable no matter what the TV sound of each channel is different.

Digital Audio Output

Press the ◀/▶ keys to select Digital Audio Output, which is Off by default.

Multi Track Sound

Press the ◀/▶ keys to select Multi Track Sound. The default is Mono.

SPDIF Delay

Press the ◀/▶ keys to select SPDIF Delay, which is 0 by default.

Surround

The direction of each sound source in the original signal is reproduced to make the user feel surrounded by sounds from different directions.


Press the ◀/▶ keys to select Surround, and press the <OK> key to switch on/off.

Audio Only

Press the ◀/▶ key to select Audio Only, and press the <OK> key to switch on/off.

Channel

Press the<Menu>key to enter the main menu interface, and press the ◀/▶ key to select the Channel menu.

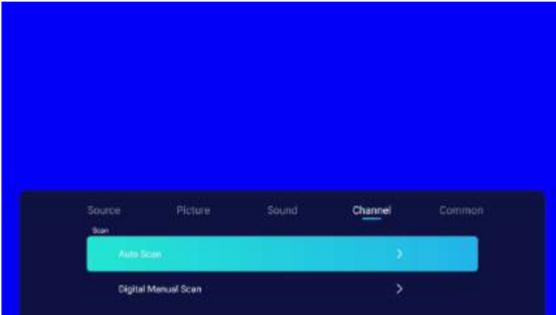


Advance Settings

(option: Scan/Channel List)

Scan

Press the ◀/▶ keys to select Scan, and then press the<OK>key to enter.
Press ▼/▲ to select Start Scan/Analog Manual Scan.

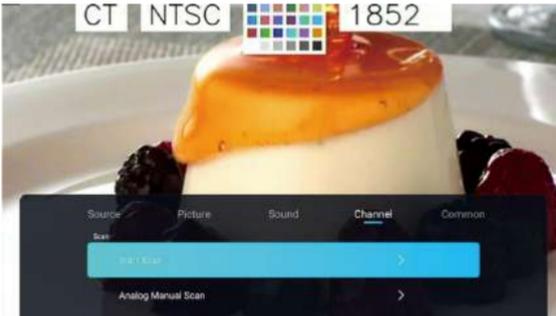

Start Scan

Start Scan will automatically search for valid program channels. Press ▼/▲ to select Start Scan, press<OK>to enter, and then start searching.

If you want to stop the search process, you can press the Exit or Menu button.



Analog Manual Scan

Manually search for a valid analog program channel.

Press ▼/▲ to select Analog Manual Scan, press<OK>to enter, and then start manual channel search.

If you want to stop the search process, you can press the Exit or Menu button.



Channel

Press ▼/▲ to select Channel, and press ◀/▶ to select channel number.

Color System

Press ▼/▲ to select Color System, and press ◀/▶ to select: PAL/NTSC /SECAM/NTSC-443/Auto.

Sound System


Press ▼/▲ to select Sound System, and press ◀/▶ to select BG/DK/I/L/M/N.

Frequency

Press ▼/▲ to select Frequency, and press ◀/▶ to select.

Channel List

View all existing program channels. Press ▼/▲ to select Channel List, and press ▶ to enter the submenu.

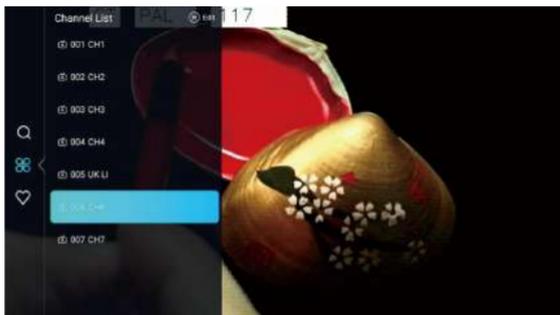

Press ▼/▲ to select the program, and press <Menu> to edit the program (option: Move/Top/Favorite/Rename/Delete/Skip)

If the program is selected as analog signal program, the program can be renamed.

Auto Scan

Automatic search can search for effective program channel automatically.

Press ▼ / ▲ button to select Auto Scan, then press OK button to start auto search.

If you want to stop searching, press EXIT or MENU button to stop searching.



LCN

Press ▼ / ▲ button to select LCN. Press ▶ button to select On/Off.

Start Scan

Press ◀ / ▶ button to select Start Scan.

Digital Manual Scan

Analog manual search can search for effective simulation program channel manually. It can be selected only in the ATV Input.


Press ▼ / ▲ button to select Digital Manual Scan , and press OK button to enter the sub-menu.

Press EXIT or MENU button to quit.



Common

Press the <Menu> key to enter the main menu interface, and press the ◀/▶ key to select the Common menu.

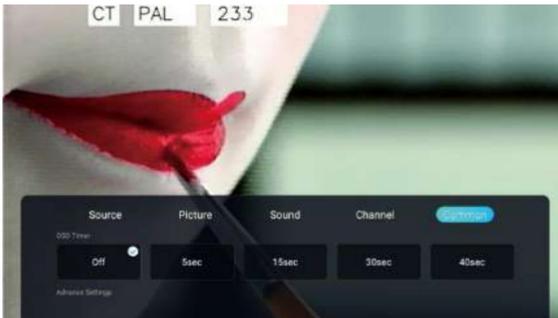

1. Press ▼/▲ to select the menu.

(option: OSD Timer/Advance Settings)

2. Press <OK>/◀/▶ to adjust or select.

OSD Timer

Press ▼/▲ to select OSD Timer, and press ◀/▶ to select.

(option: off/5sec/15sec/30sec/40sec)

Advance Settings

Press ▼/▲ to select Advance Settings.

Sleep Timer

Press the ◀/▶ key to select the Sleep Timer, press the<OK>key to enter, and press the ◀/▶ key to select.

(option:off/15min/30min/45min/60min/90min/120min/240min)

Auto Standby Timer

Press the ◀/▶ key to select the Auto Standby Timer, press the<OK>key to enter, and press the ◀/▶ key to select.

(option:Off/3hour/4hour/5hour)

Daylight SavingAuto

Press the ◀/▶ key to select the , and press the<OK>key to select on/off/Auto.

Blue Screen

When there is no signal, the screen will display blue.

Press the ◀/▶ key to select the Blue screen, and press the<OK>key to select on/off.

Teletext West Euro

Press the ◀/▶ key to select the , and press the<OK>key to select on/off.

Audio Language 1st

Press the ◀/▶ key to select the , and press the<OK>key to select on/off.

Audio Language 2nd

Press the ◀/▶ key to select the , and press the<OK>key to select on/off.

CEC

Press the ◀/▶ key to select CEC, and press the<OK>key to enter the submenu.

Press the ◀/▶ /<OK>key in the submenu to turn on or off the functions of CEC, TV Auto Power On, and Device Auto Power Off.

Lock

Press the ◀/▶ key to select Lock, press the<OK>key to enter.

The password is 4711.

Hotel Mode

Press ◀/▶ button to select Hotel Mode then press OK button to select On/Off.
The password is 4711.

PVR Setting

Press ▼/▲ button to select PVR Setting.

Press ▼/▲ button to select Select Disk/Format/Speed/Record List/Schedule List.

Press ENTER button to enter sub-mune. (Only used in DTV channels)

Menu Reset

Restore default settings.

Press ◀/▶ keys to select Menu Reset, and press the <OK>key to select whether to reset.

Help

No Power	Check the AC cord of TV is plus in or not. If still no power, please pull out the plug and replug in after 60 seconds. And open the TV again
Signal receive not properly	<ul style="list-style-type: none"> ● To cause double image or phantom if there has high building or high mountain round TV. You can adjust image effect by manually operation: consult instruction of vernier regulation or change the direction of external antenna. ● If you use the indoor antenna, under certain circumstance, receive will be more difficult. So you can change the direction of the antenna to adjust the image effect. If can't change image receiving effect either, you have to use external antenna.
No picture	<ul style="list-style-type: none"> ● Check the antenna at the back of TV is connected properly or not. ● Try to select other channels and check whether the TV problem itself or not.
but, Video is ok without audio	<ul style="list-style-type: none"> ● Increase the volume. ● Check the TV is in mute mode or not, and please press the mute button to make sound resume.
but, Audio is ok color error or no picture	<ul style="list-style-type: none"> ● Increase contrast and brightness.
Snow statics picture and noise	<ul style="list-style-type: none"> ● Check the antenna at the back of TV is connected or not.
Level broken line	<ul style="list-style-type: none"> ● Vacuum, such as hair drier, Maybe has electrical appliance interfere, please turn off these kinds of electrical appliance, cleaner and so on.
Image or-Dual "simulacrum" The TV no response with the Remote	<ul style="list-style-type: none"> ● Perhaps the location for the antenna is not good. Use the tall beamed antenna can be improved quality of the display image. ● Operate the remote direct to the remote sensor on the TV. If still no response for the TV, please check if the plastic bag on the remote take or not. And check if the location for the battery is correct. Change the new battery. ● The TV will shift to the STAND BY if no response from the remote in the few minutes.
NO Video In (PC Mode)	<ul style="list-style-type: none"> ● Please check if the display cable connect to the VGA correcte. ● Please check if there has the bend on the display cabl.
Vertical twinkling (PC Mode)	<ul style="list-style-type: none"> ● Enter the main menu. Use the clock regulator for the video display noise to eliminate the vertical line.
Horizontal ripping (PC Mode)	<ul style="list-style-type: none"> ● Adjust the Audio sound horizontal in the main menu to clear the horizontal ripping line.
The screen is too bright or too dark (PC Mode)	<ul style="list-style-type: none"> ● Adjust the contrast ratio or brightness in the main menu.
PC Function no response	<ul style="list-style-type: none"> ● Check the computer setting in the state of compatible display resolution
Ripping line in RCA connecting	<ul style="list-style-type: none"> ● Please use good quality connecting cable.
Problem still exist	<ul style="list-style-type: none"> ● Unplug the power cable and wait for 30 seconds, then connect. If there is some problem with our TV, do not repair it by yourself, please contact with the customer service center.

There will be complete picture and the brightness will come down if the TV is in Note. So please do not keep the TV in a state of same, the static picture for too long time. Menu or same picture that has much difference in brightness and contrast ratio for too long time.

Note : TV panel is built with very high precision technology giving you fine picture details in vibrant color. Occasionally, a few non-active pixels may appear on the screen as fixed point of red, green, blue or white. Please note this does not affect the performance of the product.



И 035 24

Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati.
Za više informacija o FOX uređajima posetite našu internet stranicu:

www.foxelectronics.rs