



UPUTSTVO ZA UPOTREBU

LED TELEVIZORI

Model: 55WOS635F

Hvala Vam što ste kupili ovaj uređaj.

FOX LED televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne

podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici FOX televizora mogu osećati sigurno.

Napravili ste pravi izbor.

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

SR

Sadržaj

Upozorenja i mere opreza	1
Važna bezbednosna uputstva	2
Rad sa daljinskim upravljačem	4
TV tastatura i interfejs terminala	5
Daljinsko Upravljanje	6
Prva Instalacija	7
Početna Stranica	12
AirPlay	14
Podešavanje TV-a	17
Brza podešavanja	17
Režim slike	18
Režim zvuka	18
Izlaz za zvuk	18
Optimizator igrica	19
Mreža	19
Slika	20
Zvuk	21
Opšte	23
Mediji	31
Fotografija i video	31
Fotografija	32
Video	32
Muzika	33
LG ThinQ	34
Pomoć	38

Upozorenja i mere opreza

	Upozorenje Rizik od strujnog udara. Ne otvaraj.	
<p>Upozorenje: Da biste izbegli rizik od strujnog udara, nemojte skidati poklopac (ili poleđinu). Unutra nema delova koje korisnik može servisirati. Za servisiranje se obratite kvalifikovanom servisnom osoblju.</p>		



Simbol munje sa strelicom, unutar jednakostraničnog trougla, ima za cilj da upozori korisnika na prisustvo neizolovanog „opasnog napona“ unutar kućišta proizvoda koji može biti dovoljne veličine da predstavlja rizik od strujnog udara za osobu.



Uzvičnik unutar jednakostraničnog trougla ima za cilj da upozori korisnika na prisustvo važnih uputstava za rad i održavanje (servisiranje) u literaturi koja prati uređaj.

UPOZORENJE: DA BISTE SPREČILI OPASNOST OD POŽARA ILI ŠOKA, NE IZLAŽITE OVU UREĐAJ KIŠI ILI VLAGI.

OPREZ: DA BISTE OBEZBEDILI LIČNU BEZBEDNOST, POŠTUJTE SLEDEĆA PRAVILA U VEZI KORIŠĆENJA OVOG UREĐAJA.

1. Radite samo iz izvora napajanja koji je naveden na uređaju.
2. Izbegavajte oštećenje AC utikača i kabla za napajanje.
3. Izbegavajte nepravilnu instalaciju i nikada ne postavljajte uređaj tamo gde je dobra ventilacija nedostižna.
4. Ne dozvolite da predmeti ili tečnost uđu u otvore kućišta.
5. U slučaju problema, isključite uređaj i pozovite servisera. Ne pokušavajte sami da ga popravite ili uklonite zadnji poklopac.

Promene ili modifikacije koje nije odobrila naša kompanija mogu poništiti garanciju.

* Kada ne koristite ovaj televizor duži vremenski period, obavezno izvucite utikač iz utičnice za naizmeničnu struju i iz antene radi Vaše bezbednosti.

* Da biste sprečili strujni udar, nemojte koristiti utikač za napajanje sa produžnim kablom.

— Ne pokušavajte sami da servisirate proizvod —

Opres

Da biste sprečili strujni udar, ne otvarajte kućište televizora. Unutra nema delova koje korisnik može servisirati.

Važna bezbednosna uputstva

- 1) Pročitajte ova uputstva.
- 2) Sačuvajte ova uputstva.
- 3) Obratite pažnju na sva upozorenja.
- 4) Pratite sva uputstva.
- 5) Ne koristite ovaj uređaj blizu vode.
- 6) Čistite samo suvom krpom.
- 7) Ne blokirajte otvore za ventilaciju. Ventilaciju ne bi trebalo ometati pokrivanjem ventilacionih otvora stvarima kao što su novine, stolnjaci, zavese itd. Mora postojati minimalna udaljenost od 5 cm slobodnog prostora oko uređaja u svim pravcima kako bi se osiguralo odgovarajuća ventilacija.
- 8) Ne postavljajte u blizini izvora toplote kao što su radijatori, grejne komore, peći ili drugi uređaji (uključujući pojačala) koji proizvode toplotu. Na ili blizu uređaja ne smeju se postavljati izvori otvorenog plamena kao što su upaljene sveće.
- 9) Zaštitite kabl za napajanje od gaženja ili priklještenja, posebno kod utikača, utičnica i mesta gde izlaze iz uređaja.
- 10) Koristite samo dodatke/pribor koji je naveo proizvođač.
- 11) Koristite samo sa kolicima, postoljem, stativom, držačem ili stolom koje je odredio proizvođač ili se prodaje uz uređaj. Kada se koriste kolica, budite oprezni kada pomerate kombinaciju kolica/uređaj da biste izbegli povrede od prevrtanja.
- 12) Isključite ovaj uređaj iz struje tokom oluja sa grmljavinom ili kada se ne koristi duži vremenski period.
- 13) Sve servisiranje prepustite kvalifikovanom serviseru. Servisiranje je potrebno kada je uređaj oštećen na bilo koji način, oštećen kabl za napajanje ili utikač, prolivena tečnost ili su predmeti upali u uređaj, izložen kiši ili vlazi, ne radi normalno ili je pao.
- 14) Uređaj ne treba izlagati kapanju ili prskanju i na uređaj ne treba stavljati predmete napunjene tečnošću, kao što su vaze.
- 15) Postavite televizor na stabilnu, ravnu površinu. Ako to ne uradite, televizor može da padne i da izazove povrede.
- 16) Ne dozvolite maloj deci da se igraju oko ili na televizoru.
- 17) Nemojte dozvoliti maloj deci da se igraju plastičnom kesom koju ste dobili uz televizor kada ste ga otpakovali. Ako to učinite, može doći do gušenja, što može dovesti do smrti.
- 18) Izbegavajte nepravilnu instalaciju i nikada ne postavljajte uređaj tamo gde je nemoguća dobra ventilacija. Prilikom postavljanja ovog uređaja, preporuke za rastojanje se moraju održavati između garniture i zida, kao i unutar čvrsto zatvorenog prostora ili komada nameštaja. Držite uređaj na minimum 5 cm u svim pravcima.
- 19) Upozorenja za instalaciju
 - Nemojte naginjati uređaj ulevo ili udesno ili prema nazad.
 - Uverite se da je kabl za napajanje van putanje pešačkog saobraćaja.
 - Uređaj će proizvoditi malu količinu toplote tokom rada. Uverite se da ima dovoljno prostora oko jedinice da omogući zadovoljavajuće hlađenje.
 - Neka dvoje ljudi uklone uređaj iz kutije tako da ekran bude okrenut od vas. Moguće je da vaša odeća (kao što je kopča za kaiš ili taster) može izgrebati prednji deo TV-a. Uradite isto kada premeštate TV na drugu lokaciju.



- 20) Ovaj uređaj mora biti priključena na utičnicu sa zaštitnim uzemljenjem.
- 21) Napravite dovoljno prostora za postavljanje i izvlačenje utikača. Postavite TV što je moguće bliže utičnici. Glavno napajanje se kontroliše umetanjem ili izvlačenjem utikača. Jedini način je fizičko isključivanje utikača, da potpuno isključite uređaj iz izvora napajanja.
- 22) Baterije se ne smeju izlagati preteranoj toploti kao što je sunce, vatra ili slično.
- 23) Kada je ovaj uređaj priključena na zidnu utičnicu, uvek je u stanju pripravnosti čak i kada sve LED lampe nisu upaljene. Da biste isključili uređaj, isključite uređaj iz zidne utičnice.
- 24) Ako je kabl za napajanje oštećen, pre dalje upotrebe ga mora zameniti proizvođač, njegov serviser ili slično kvalifikovano lice kako bi se izbegla opasnost.
- 25) Uvek postavljajte TV na nameštaj koji može bezbedno da izdrži TV. Uverite se da krajevi televizora ne nadvisuju ivicu nosećeg nameštaja.
- 26) Ne postavljajte televizor na visok nameštaj (na primer, ormariće ili police za knjige) bez pričvršćivanja i nameštaja i televizora za zid ili drugu odgovarajuću čvrstu podlogu.
- 27) Ne postavljajte TV na tkaninu ili druge materijale postavljene između televizora i pratećeg nameštaja.

VAŽNA INFORMACIJA


Televizori koji nisu postavljeni na dovoljno stabilnim lokacijama mogu predstavljati potencijalnu opasnost od pada. Da biste izbegli povrede, posebno dece, preduzmite sledeće jednostavne mere predostrožnosti:

- Postavite ovaj televizor samo na nameštaj koji može bezbedno da ga nosi.
- Koristite samo ormarić ili postolje koje preporučuje proizvođač televizora.
- Uverite se da televizor ne visi preko ivice nosećeg nameštaja.
- Ne postavljajte televizor na visok nameštaj (kao što su ormari ili police za knjige) bez pričvršćivanja i nameštaja i televizora na odgovarajući oslonac.
- Nemojte stavljati tkaninu ili druge materijale između televizora i pratećeg nameštaja.
- Ne dozvolite deci da se penju na nameštaj da bi došla do televizora ili njegovih komandi.

Rad sa daljinskim upravljačem


Instaliranje baterija

1. Pritisnite u smeru koji pokazuje strelica na slici 1 ispod da biste otvorili poklopac baterija na poleđini daljinskog upravljača.
2. Ubacite dve AAA alkalne baterije u odeljak.
3. Vratite poklopac baterija.

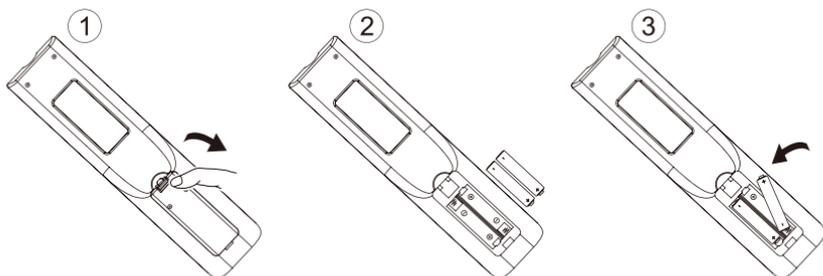

Preventivne mere

Uverite se da nema prepreka između daljinskog upravljača i televizora.

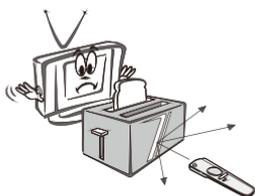


Držite daljinski upravljač dalje od izvora toplote i vlažnih područja kako biste osigurali efikasan rad daljinskog upravljača.



Pošto jako svetlo može da ometa signale, promenite položaj da biste upravljali daljinskim upravljačem ako se televizor ne može uključiti ili isključiti kako očekujete.



Uverite se da su dve AAA 1,5V alkalne baterije pravilno napunjene.

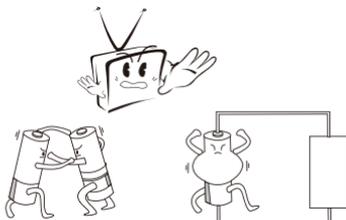

TV tastaturai interfejs terminala

TV tastatura



- **Uključi TV:**
U režimu pripravnosti, kratko pritisnite taster za kontrolu televizora da biste uključili TV.
- **Funkcije tastature:**
Nakon uključivanja TV-a, kratko pritisnite taster da biste pozvali sledeću mekanu tastaturu. Kratko pritisnite taster da biste izabrali stavku koju želite. Dugo pritisnite taster televizora da biste ušli u stavku koju ste izabrali.




Tastatura		
Ikona	Ime	Funkcija
	Ispod/ Iznad	Prebacite se na prethodni ili sledeći kanal u TV režimu. Pomerite se nadole ili gore da biste izabrali stavku u podešavanjima menija.
	Levo/ Desno	Smanjuje ili povećava jačinu zvuka u TV režimu. Pomerite se levo ili desno da biste izabrali stavku u podešavanjima menija.
	Glavni meni	Pristupite podešavanjima glavnog menija.
	Ulaz	Unesite interfejs ulaznog izvora.
	Isklj/Uklj	Predite u režim pripravnosti.

	MINI AV ulaz Ulaz spoljnog AV signala Odgovarajući desni/levi zvučni kanal		Izlaz za SLUŠALICE Kada su slušalice priključene, zvučnici su onemogućeni (Neki modeli bez ovog interfejsa)
	HDMI ulaz Ulaz digitalnog signala sa HDMI video konektora.		USB ulaz Povežite USB uređaj ovde da biste reprodukovali njegove medijske datoteke
	ANT 75 Povežite antenski/ TV ulaz (75/VHF/UHF)		COAKSIAL Povežite SPDIF prijemnik. (Neki modeli bez ovog interfejsa)
	Rj45 Povežite Internet.		




(32"40"43"50"55")

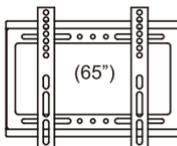

Pažnja: Molimo Vas da kupite zidni nosač kao što je prikazano na slici ako potrebno.

Daljinsko Upravljanje

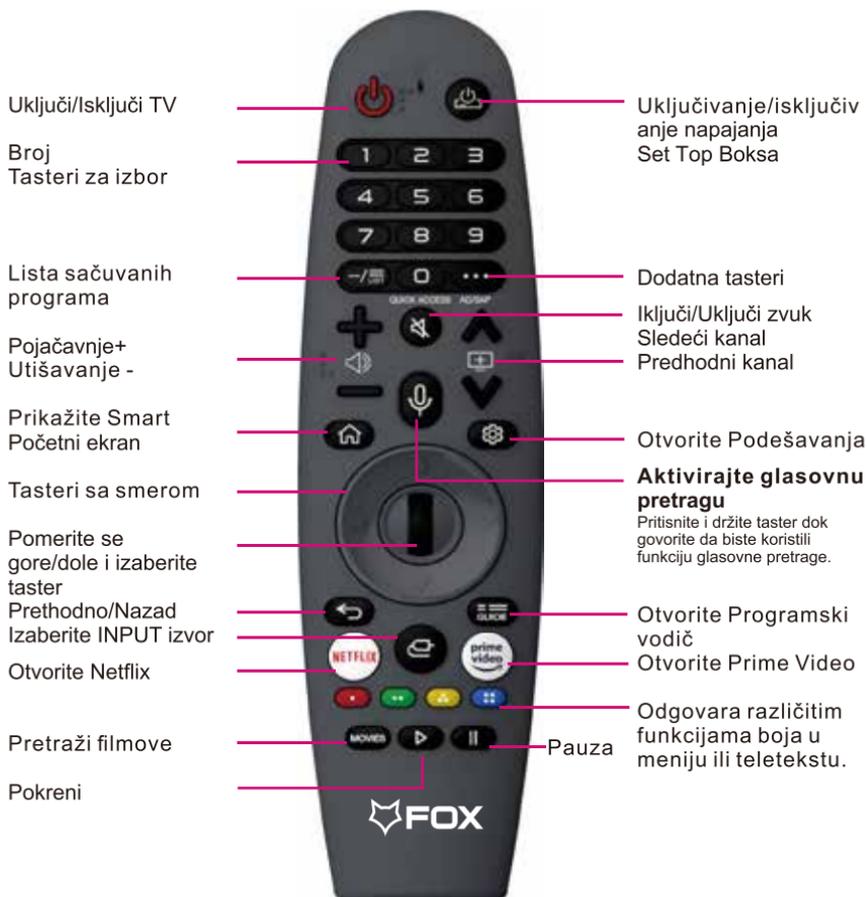

Beleška:

- 1) Slika je samo za referencu.
- 2) Slika, tasteri ili funkcije daljinskog upravljača mogu se razlikovati u zavisnosti od regiona, modela ili izvora.

Prva Instalacija

Uđite na početnu stranicu nakon prve instalacije.



Pritisnite taster [◀] / [▶] da biste pristupili metodi instalacije.



Pritisnite taster [▼] / [▲] da biste izabrali jezik.

Pritisnite taster [▼] / [▲] da biste izabrali zemlju.






Pritisnite taster [▼]/[▲] da biste izabrali Internet vezu.



Pritisnite taster <OK> da biste izabrali Uslove i odredbe.




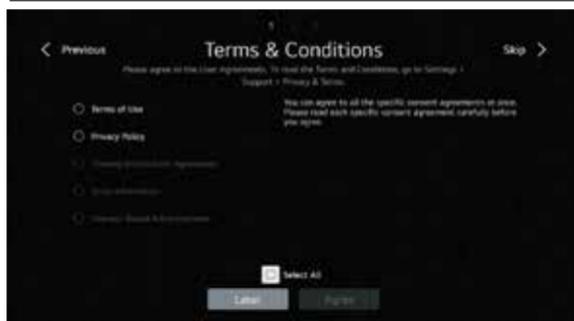

Pritisnite taster [▼]/[▲] da biste izabrali način gledanja TV-a.



Pritisnite taster [◀] / [▶] da biste izabrali tip fizičke instalacije TV-a.

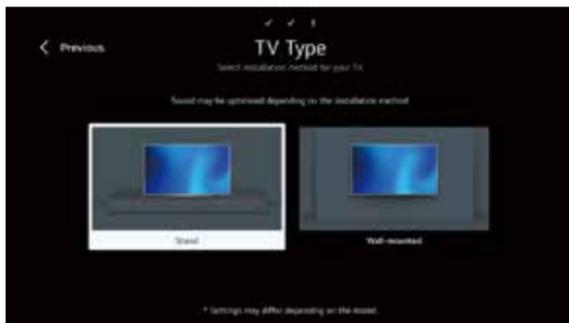

Pritisnite taster [▼] / [▲] da biste izabrali Podešavanje programa.





Pritisnite taster [▼]/[▲] da biste izabrali LG nalog.



Početna Stranica

Uđite na početnu stranicu nakon prve instalacije.
Na listi aplikacija izaberite aplikaciju koju želite da otvorite.

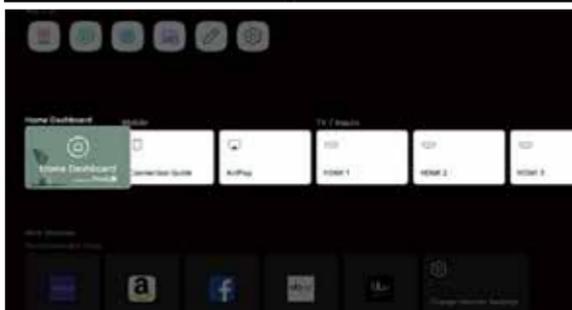

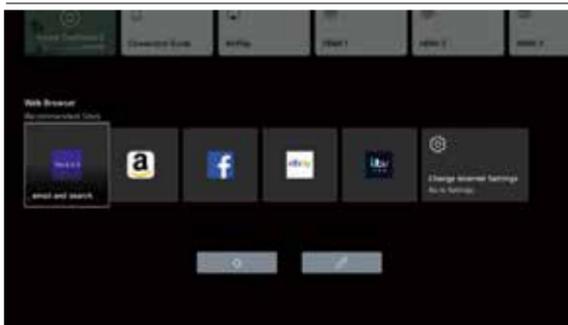

Korišćenje kućne kontrolne table

Možete da izaberete ili da kontrolišete uređaj (mobilni, eksterni uređaj, Home IoT uređaji, itd.) povezan sa TV-om.

Pritisnite taster ▼ / ▲ / ◀ / ▶ da biste izabrali.



TV/ulaz/mobilni

1. Možete da reprodukujete zvuk sa pametnog uređaja povezanog preko Bluetooth-a.
Molimo Vas pogledajte Povezivanje spoljnih uređaja →
Reprodukcija zvuka sa pametnog uređaja preko zvučnika televizora u Korisničkom vodiču za više informacija o radnji.
2. Možete da proverite i izaberete spoljni uređaj povezan preko spoljnog ulaznog porta ili mreže.

Povezivanje mobilnog uređaja

Možete proveriti i izabrati pametni uređaj povezan sa aplikacijom LG ThinQ app.

Molimo Vas pogledajte u Povezivanje spoljnih uređaja →
Povezivanje pametnih uređaja u Korisničkom priručniku, za više informacija o aktivnosti.


AirPlay

Izaberite televizor ili uređaj za strimovanje na svojim Apple uređajima i moći ćete bežično da delite sadržaj sa svog iPhone-a, iPad-a ili Mac-a. Uputstvo za povezivanja:

1. Osigurajte se da su vaši uređaji na istoj Wi-Fi ili Ethernet mreži. Otvorite Kontrolni centar i izaberite Screen Mirroring da biste izabrali TV ili uređaj za strimovanje.





2. Osigurajte se da su Vaši uređaji na istoj Wi-Fi ili Ethernet mreži. Na svom video ili audio plejeru, dodirnite ikonu AirPlay da biste izabrali TV ili uređaj za strimovanje.

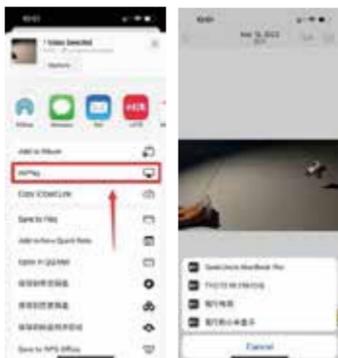

3. Takođe možete da skenirate QR-kod da biste uređaj dodali u HomeKit i moći ćete lako i bezbedno da kontrolišete uređaj pomoću aplikacije Home na svojim Apple uređajima.

Pritisnite taster ▼/▲ da biste izabrali podešavanja Airplay-a i HomeKit-a i pritisnite taster <OK> da biste ušli u podmeni.

Pritisnite taster ▼/▲ da biste izabrali Podešavanje.

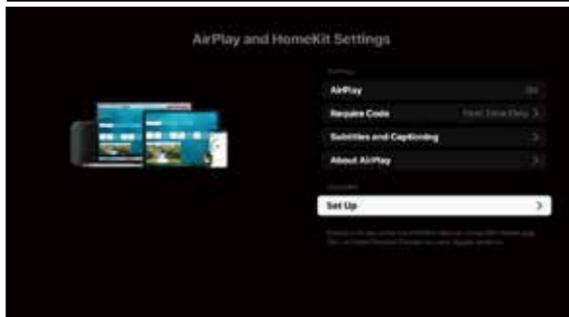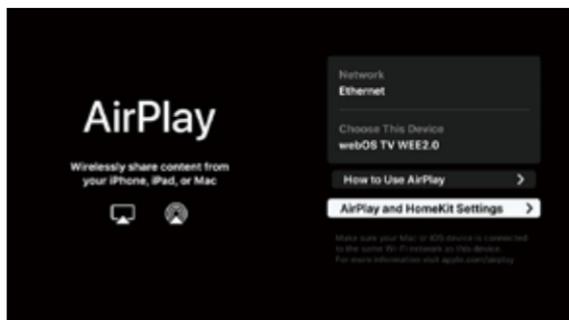

USB 1

Možete odabrati USB uređaj.

TV zvučnik

Prikazuje se trenutno izabrani izlazni zvučnik i možete se kretati do ekrana podešavanja izlaznog zvučnika.

Home IOT uređaji

Možete da proverite i kontrolišete uređaj koji je povezan preko Home IoT.

Molimo Vas pogledajte u Povezivanje spoljnih uređaja →
Povezivanje Home IoT uređaja u Korisničkom priručniku, za više informacija o aktivnosti.



Možete lako kontrolisati svoj uređaj tako što ćete unapred podesiti željene operacije.



Izađite sa početne kontrolne table.

Podešavanje TV-a

Pritisnite taster **MENU** da uđete u TV podešavanja.
Pritisnite taster **▼/▲** da biste označili željenu ikonu menija, a zatim pritisnite taster **<OK>** da biste izabrali.

Brza podešavanja



- ① Možete da podesite **režim slike** (Picture Mode).
- ② Možete da podesite **režim zvuka** (Sound Mode). Možete
- ③ izabrati **izlaz za zvuk**(Sound Out).
- ④ Možete da podesite **optimizator igara** (Game Optimizer).
- ⑤ Pređite na ekran za **povezivanje** (Connection screen).
- ⑥ Možete da podesiti više opcija.
- ⑦ Možete dodati/obrisati stavke brzih podešavanja ili promeniti njihov redosled.

Režim slike

Pritisnite taster ▼/▲ da biste izabrali režim slike (Picture Mode).

Pritisnite taster <OK> da biste ušli u podmeni.

Pritisnite taster ◀/▶ za izbor

Živopisno/Standardno/Osnovno/Bioskop/Sport i pritisnite taster <OK> za potvrdu.

- | | |
|------------|---|
| Živopisno | Izoštava sliku povećanjem kontrasta, osvetljenosti i oštřine. |
| Standardno | Standardni režim, da bi korisnici iskusili slike visokog kvaliteta pod normalnim osvetljenjem. |
| Osnovno | Funkcija uštede energije menja podešavanja na TV-u da bi smanjila potrošnju energije. |
| Bioskop | Pogodan je za gledanje TV-a ili filmova u mračnoj prostoriji. |
| Sport | Pogodna slika za sportske emisije. Izoštava sliku brzih pokreta kao što su šutiranje ili bacanje lopte. |

Režim zvuka

Pritisnite taster ▼/▲ da biste izabrali režim zvuka.

Pritisnite taster <OK> da biste ušli u podmeni.

Pritisnite taster ◀/▶ da biste izabrali Standardno/ Bioskop/ Jasan glas/ Sport/ Muzika, a zatim pritisnite taster <OK> da biste potvrdili.

Standardno Optimizuje zvuk za sve vrste sadržaja.

Bioskop Optimizuje zvuk za bioskop.

Jasan glas Povećava jasnoću glasa.

Sport Optimizuje zvuk za sportske emisije.

Muzika Naglašava visoke tonove i smanjuje bas.

Izlazni za zvuk

Pritisnite taster ▼/▲ da biste izabrali izlazni zvuka.

Pritisnite taster <OK> da biste ušli u podmeni.

Pritisnite taster ◀/▶ da biste izabrali TV zvučnik/ Bluetooth uređaj/ Mobilni uređaj/ Optički izlazni uređaj/ HDMI (ARC) uređaj/ Žičane slušalice/ Optički izlazni uređaj + TV zvučnik/ Žičane slušalice + TV zvučnik, a zatim pritisnite taster <OK> da biste podesili.

Optimizator igrica

Pritisnite taster ▼/▲ da biste izabrali Optimizator igrica.

Mreža

Ako konfigurirate podešavanja za mrežu, možete da koristite različite usluge kao što su onlajn sadržaji i aplikacije. **Žična veza (Ethernet)**

Pritisnite taster ▼/▲ da biste izabrali Žičnu vezu (Ethernet).

Pritisnite taster <OK> da biste ušli u podmeni i podešavanja.



Wi-Fi veza

Pritisnite taster ▼/▲ da biste izabrali Wi-Fi vezu. Pritisnite taster <OK> da biste ušli u podmeni i podešavanja.



Sva podešavanja

Pritisnite taster ▼/▲ da biste izabrali Sva podešavanja.

Pritisnite taster <OK> da biste ušli u podmeni.

Pritisnite taster ▼/▲ da biste izabrali Sliku/Zvuk/Opšte/Podršku.

Slika

Pritisnite taster ▼/▲ da biste izabrali Sliku. Pritisnite taster <OK> da biste ušli u podmeni i podešavanja.

(Opcionalno: Izaberite Režim/Odnos širine i visine slike/Napredna podešavanja)



Izaberite Režim

Pritisnite taster ▼/▲ da biste izabrali Izaberite režim.

Pritisnite taster <OK> da biste ušli u podmeni.

Pritisnite taster ▼/▲ da biste izabrali

Živopisno/Standardno/Osnovno/Bioskop/Sport.

Odnos širine i visine slike

Možete promeniti veličinu ekrana u skladu sa vrstom sadržaja koji gledate.

Pritisnite taster ▼/▲ da biste izabrali Izbor korisnika/Samo skeniranje.

Izbor korisnika

Pritisnite taster ▼/▲ da biste izabrali Odnos širine i visine slike.

(Opcije: 16:9/ Originalno/ Potpuno široko/ 4:3/ Vertikalno zumiranje/ 4-smerno zumiranje)

Samo skeniranje

Pritisnite taster ▼ / ▲ da biste izabrali Samo skeniranje.

Ako uključite ovu funkciju, možete da gledate sadržaj u odnosu širine i visine slike koji je u emitovanom signalu ili izvoru sadržaja. Ako ivica ekrana nije čista, isključite je.

Napredna podešavanja

Pritisnite taster ▼/▲ da biste izabrali Napredna podešavanja.

Pritisnite taster <OK> da biste ušli u podmeni.

Pritisnite taster ▼/▲ da biste izabrali

Osvetljenost/Boju/Jasnoću/Primeni na sve ulaze/Resetiraj.

Zvuk

Pritisnite taster ▼/▲ da biste izabrali Zvuk. Pritisnite taster <OK> da biste ušli u podmeni i podešavanja.

(Opcionalno: Izaberite Režim /Izlazni zvuk/Napredna podešavanja)



Režim zvuka

Pritisnite taster ▼/▲ da biste izabrali
Živopisno/Standardno/Osnovno/Bioskop/Sport.

Izlazni zvuk

Pritisnite taster ▼/▲ da biste izabrali Izlazni zvuk.
Pritisnite taster <OK> da biste ušli u podmeni.
Pritisnite taster ▼/▲ za izbor Koristi TV zvučnik/Koristi žičani
zvučnik/Koristi bežični zvučnik/Koristi spoljne zvučnike sa TV
zvučnikom.

Napredna podešavanja

Pritisnite taster ▼/▲ da biste izabrali Napredna podešavanja.
Pritisnite taster <OK> da biste ušli u podmeni.
Pritisnite taster ▼/▲ da biste izabrali Balans/Ekvilajzer/Primeni na
sve ulaze/Resetovanje/Vrsta instalacije/Automatsko podešavanje
jačine zvuka/Usklađivanje ekrana i zvuka/Izaberi audio format HDMI
ulaza/LG sinhronizacija zvuka/Digitalni izlaz zvuka/eARC podrška.

Balans

Balansira leve i desne kanale.
Pritisnite taster <OK> da biste izabrali Balans. Pritisnite taster ▼/▲
da biste podesili.

Ekvilajzer

Pritisnite taster ▼/▲ da biste izabrali Ekvilajzer.
Pritisnite taster <OK> da biste ušli u podmeni, a zatim pritisnite taster
▼/▲/◀/▶ da biste podesili.

Primeni na sve ulaze

Pritisnite taster ▼/▲ da biste izabrali Primeni na sve ulaze.

Resetovanje

Možete resetovati podešavanja zvučnih efekata.
Pritisnite taster ▼/▲ da biste izabrali Resetovanje.

Vrsta instalacije

Pritisnite taster ▼/▲ da biste izabrali TV vrsta instalacije.
Pritisnite taster ▼/▲ da biste izabrali Postolje/ Zidna montaža.

Automatsko podešavanje jačine zvuka

Pritisnite taster ▼/▲ da biste izabrali Automatsko podešavanje
jačine zvuka. Pritisnite taster <OK> da biste izabrali
Uključeno/Isključeno.

Usklađivanje ekrana i zvuka

Pritisnite taster ▼/▲ da biste izabrali Usklađivanje ekrana i zvuka.
(Opcionalno: Kašnjenje TV zvučnika/zaobilaznica)

Izaberi audio format HDMI ulaza

Pritisnite taster ▼/▲ da biste izabrali Izaberi audio format HDMI ulaza.

Možete podesiti audio format za svaki HDMI ulaz. Kada glas koji se isporučuje preko HDMI porta nije sinhronizovan, podesite ga na **PCM**.

LG sinhronizacija zvuka

Pritisnite taster ▼/▲ da biste izabrali LG sinhronizacija zvuka.

Povežite uređaj za LG sinhronizaciju zvuka na optički digitalni ulaz i podesite Izlazni zvuk na Optički.

Podešavanjem ove funkcije na Uključeno, možete podesiti jačinu zvuka povezanog uređaja za LG sinhronizaciju zvuka pomoću daljinskog upravljača za TV.

Digitalni izlaz zvuka

Pritisnite taster ▼/▲ da biste izabrali Digitalni izlaz zvuka.

(Opcionalno: PCM/Automatski/Prolaz preko)

eARC podrška


Pritisnite taster ▼/▲ da biste izabrali eARC podrška.

Opšte

Pritisnite taster ▼/▲ da biste izabrali Opšte. Pritisnite taster <OK> da biste ušli u podmeni i podešavanja.

(Opcionalno: AI usluga/Optimizator

igrica/Programi/Uređaji/Mreža/Sistem/Ušteda)

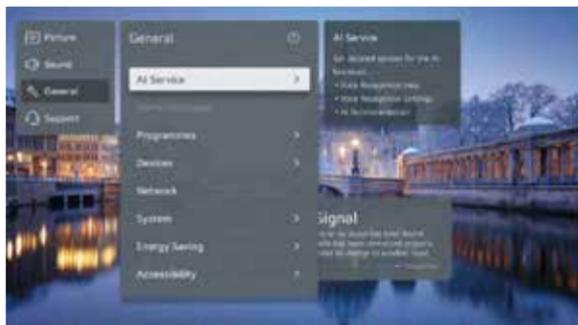

AI Usluge

Možete omogućiti preporučene usluge na osnovu istorije korišćenja.

Pritisnite taster ▼/▲ da biste izabrali AI Usluge. Pritisnite taster <OK> da biste ušli u podmeni.

Optimizator igrica

Pritisnite taster ▼/▲ da biste izabrali Optimizator igrica.

Programi

Pritisnite taster ▼/▲ da biste izabrali Programe.

(Opcionalno: Podešavanje programa/Programski menadžer /HbbTV)



Uređaji

Pritisnite taster ▼/▲ da biste izabrali Uređaje.

(Opcionalno: Upravljanje TV-om/spoljni uređaji/HDMI podešavanja)

Mreža

Pritisnite taster ▼/▲ da biste izabrali Mrežu.

Sistem

Pritisnite taster ▼/▲ da biste izabrali Sistem. Pritisnite taster <OK> da biste ušli u podmeni i podešavanja.

(Opcionalno: Jezik/Lokacija/Vreme i tajmer/Bezbednost/LG nalog/Dodatna podešavanja/Vrati na početna podešavanja)


Jezik

Možete izabrati jezik menija koji se prikazuje na ekranu i audio jezik digitalnog emitovanja.

Pritisnite taster ▼/▲ da biste izabrali Jezik. Pritisnite taster <OK> da biste ušli u podmeni.


(Opcionalno: Meni za Jezik/Audio jezik/Jezici tastature/Primarni jezik teleteksta/Drugi jezik teleteksta)

Pritisnite taster ▼/▲ da biste izabrali meni i podesili jezik.

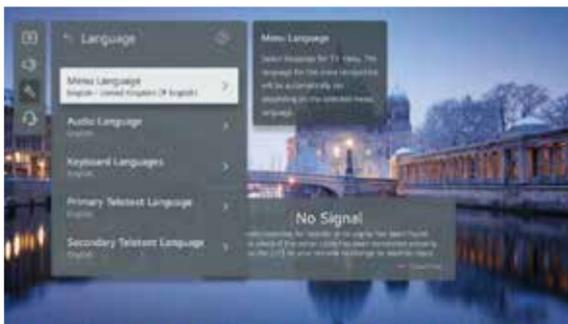

Lokacija

Možete promeniti podešavanje lokacije na svom SMART TV-u. Pritisnite taster ▼/▲ da biste izabrali Lokaciju. Pritisnite taster <OK> da biste ušli u podmeni.

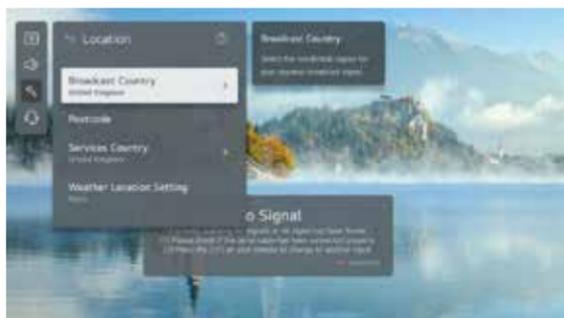

Zemlja emitovanja

Možete podesiti zemlju emitovanja na svom TV-u.

Pošanski broj

Ova se funkcija koristi da bi se podesila lokacija emitovanja TV-a, tako što unosite svoj Poštanski broj.

Zemlja koja pruža usluge

Ako ne podesite na Podesi automatski, možete zemlju izabrati ručno.

Lokacija vremenskih prilika

Možete podesiti Podešavanja lokacije vremenskih prilika.

Vreme i tajmer

Možete proveriti vreme ili konfigurisati povezana podešavanja. Pritisnite taster ▼/▲ da biste izabrali Vreme. Pritisnite taster <OK> da biste ušli u podmeni.



Automatsko podešavanje

TV vreme se automatski podešava na vreme informacija o digitalnom emitovanju koje se šalju sa stanice za emitovanje ili na vreme koje šalje server.

Pritisnite taster ▼/▲ da biste izabrali Automatsko podešavanje. Pritisnite taster <OK> da biste izabrali Uključeno/Isključeno.

Vreme / Datum / Vremenska zona

Možete ručno da podesite vreme i datum ako je automatski podešeno trenutno vreme netačno.


Pritisnite taster ▼/▲ da biste izabrali Podesi vreme / Datum I Vremensku zonu. Pritisnite taster <OK> da biste izabrali.

Tajmeri

Pritisnite taster ▼/▲ da biste izabrali Tajmere. Pritisnite taster <OK> da biste ušli u podmeni.

Bezbednost

Pritisnite taster ▼/▲ da biste izabrali Bezbednost. Pritisnite taster <OK> da biste ušli u podmeni.

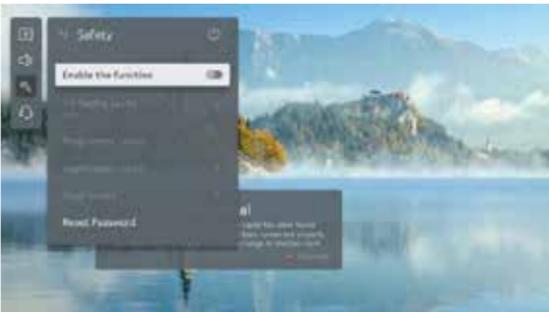

Sve opcije su dostupne samo kada je za Bezbednost izabrano Uključeno.
Početna lozinka je podešena kao „0000”.
Pritisnite taster ▼/▲ da biste izabrali tu opciju a zatim pritisnite taster <OK> da biste podesili.

LG nalog

Pritisnite taster ▼/▲ da biste izabrali LG nalog. Pritisnite taster <OK> da biste ušli u podmeni.




Dodatna podešavanja

Pritisnite taster ▼/▲ da biste izabrali Dodatna podešavanja.
Pritisnite taster <OK> da biste ušli u podmeni.




Vrati na početna podešavanja

Pritisnite taster ▼/▲ da biste izabrali Vrati na početna podešavanja.
Pritisnite taster <OK> da biste ušli u podmeni.
Vratite TV na njegova početna podešavanja. To će vratiti sva podešavanja na njihove standardne vrednosti.
Nakon resetovanja, TV će se automatski isključiti i uključiti.
Napomena: Ako je Bezbednost podešena na Uključeno, trebalo bi da unesete lozinku za Resetovanje na početna podešavanja.

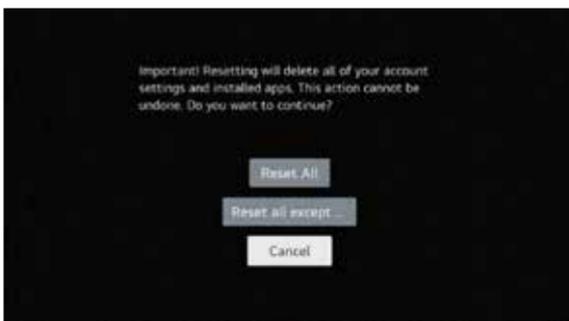


Ušteda energije

Smanjuje potrošnju energije podešavanjem osvetljenosti ekrana. Pritisnite taster ▼/▲ da biste izabrali Isključeno/ Minimalna/ Srednja/ Maksimalna/Automatsko isključivanje/Isključivanje ekrana.

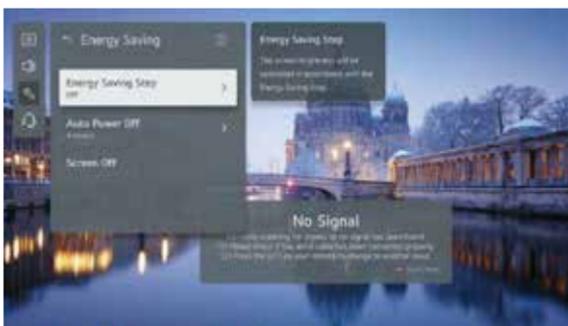

Pristupačnost

Označite stavku i pritisnite taster <OK> da biste ušli u podmeni.
Pritisnite taster ▼/▲ da biste izabrali Pristupačnost.

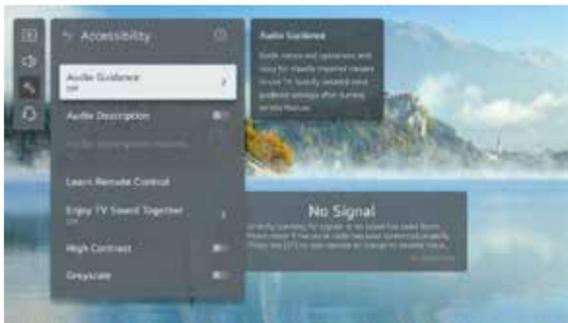

Audio navođenje

Pritisnite taster ▼/▲ da biste izabrali Audio navođenje. Pritisnite taster <OK> da biste ušli u podmeni.
Sve opcije su dostupne samo kada ja za Audio navođenje izabrano Uključeno.

Audio opis

Pritisnite taster <OK> da biste izabrali podešavanja. Pritisnite taster ▼/▲ da biste izabrali Jačina zvuka audio opisa.

Učenje daljinskog upravljača

Možete podesiti Učenje daljinskog upravljača.

Zajedno uživajte u TV zvuku

Pritisnite taster ▼/▲ da biste izabrali Zajedno uživajte u TV zvuku.
Pritisnite taster <OK> da biste ušli u podmeni.

Visoki kontrast

Možete podesiti Visoki kontrast.

Nijanse sive boje

Možete podesiti Nijanse sive boje.

Obrnute boje

Pritisnite taster <OK> da biste izabrali Uključeno/Isključeno.

Teškoće sa sluhom


Pritisnite taster <OK> da biste izabrali Uključeno/Isključeno.

Titlovi

Možete podesiti Titlove.

Podrška

Označite stavku i pritisnite taster <OK> da biste ušli u podmeni.
Pritisnite taster ▼/▲ da biste izabrali Podršku.

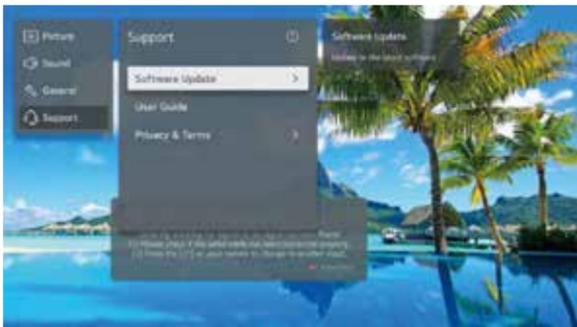

Ažuriranje softvera

Koristi ažuriranje softvera da bi proverio i dobio najnoviju verziju.
Pritisnite taster ▼/▲ da biste izabrali Ažuriranje softvera. Pritisnite taster <OK> da biste ušli u podmeni.
Zatim pritisnite taster ▼/▲ da biste izabrali i podesili.

Korisnički priručnik

Pritisnite taster ▼/▲ da biste izabrali Korisnički priručnik. Pritisnite taster <OK> da biste ušli u podmeni.
Zatim pritisnite taster ▼/▲ da biste izabrali i podesili.

Privatnost i uslovi

Pritisnite taster ▼/▲ da biste izabrali Privatnost i uslovi. Pritisnite taster <OK> da biste ušli u podmeni.
Zatim pritisnite taster ▼/▲ da biste izabrali i podesili.

Mediji

Povežite USB uređaj za skladištenje (USB HDD, USB priključak) na USB port na TV-u da biste uživali u datotekama sadržaja sačuvanim na USB uređaju za skladištenje, na vašem TV-u.

Pritisnite taster ▼/▲ da biste izabrali Fotografija i video/Fotografija/Video/Muzika.



Fotografija i video

Možete da gledate fotografije i video zapise pomoću aplikacije za fotografije i video.



Fotografija

Izborom fotografije u aplikaciji Fotografija i video pokreće se foto plejer. Možete pogledati svoje sačuvane fotografije.



Video

Izborom videa u aplikaciji pokreće se video plejer. Možete pogledati svoja sačuvana videa.



Muzika

Možete da puštate muziku na zgodan način tako što ćete izabrati muzičke fajlove sačuvane u aplikaciji Muzika ili izabrati ikonu muzičkog plejera tokom reprodukcije sadržaja u aplikacijama kao što su Fotografije i videa.



LG ThinQ

Možete da proverite i izaberete pametni uređaj povezan sa LG ThinQ aplikacijom i da se prijavite/odjavite na i sa LG ThinQ naloga koji ste kreirali na mobilnom telefonu.

Proverite internet vezu svog telefona i pokušajte ponovo.



Retry

Kad god, bilo gde
Kontrolišite svoje kućne aparate daljinski uz LG ThinQ.



Skip

Next

ThinQ radi sve čak i dok ste napolju

Sa ThinQ, možete da živite zgodan život gde se sve odvija



Skip

Next

Prave informacije u pravo vreme.

ThinQ Vas obaveštava o trenutnom stanju vaših uređaja. Obaveštava vas o trenutnim obaveštenjima o događajima kao što je kraj ciklusa pranja.



Skip

Next

Dobijte izveštaj o statusu Vaših uređaja.

Detaljno i pametno procenite stanje Vašeg proizvoda. Takođe možete dobiti i vodič za rešavanje problema prilagođen rezultatima dijagnoze.



Sign In

Welcome to
LG ThinQ.

Sign in with LG

[Another account >](#)

Otkrijte kako povezani život sa ThinQ-om čini Vaš život lakšim.

Povežite mašinu za pranje veša, klima uređaj, TV i druge uređaje na aplikaciju ThinQ.

Sklonite se od užurbane rutine i uživajte u opuštenom kućnom životu uz pametni ThinQ.

- Dobijajte trenutna obaveštenja

Aplikacija ThinQ će Vas obavješavati o svim obavještenjima koja su vam potrebna tako da Vaš veš neće mirisati na plesanj, niti će Vaša pica u rerni pregoreti. ThinQ će periodično sam dijagnostikovati stanje Vaših proizvoda.

- Kontrolišite svoj dom sa bilo kog mesta

Možete proveriti unutrašnju temperaturu vaše kuće i uključiti klima uređaj čak i dok ste napolju. Takođe možete daljinski pokrenuti mašinu za pranje veša i nastaviti sa procesom sušenja odmah po povratku kući.

- Daljinski upravljač za TV u mom pametnom telefonu

Promenite TV kanale i prilagodite zvuk pomoću aplikacije ThinQ. Možete uživati u sadržaju galerije Vašeg pametnog mobilnog telefona, na TV ekranu. Takođe možete da koristite i funkciju Magični daljinski upravljač sa svojom aplikacijom.

※ Dostupnost proizvoda i usluga može da varira u zavisnosti od modela koje posedujete ili regiona/zemlje u kojoj živite.

- ThinQ će automatski pristupiti aktuelnom stanju Vaših proizvoda

Dobijte pametnu procenu stanja Vaših proizvoda u detalje. Pametna dijagnoza će otkriti probleme i pomoći Vam da ih rešite.

Sledeće dozvole pristupa su neophodne za aplikaciju ThinQ.

Odlazni pozivi/Podešavanja poziva

Da biste kontaktirali LG servisni centar

Kontakti

Da biste verifikovali informacije o korisniku prilikom prijavljivanja u aplikaciju

Lokacija

Da biste dobili informacije o uređaju koji povezuje Wi-Fi kada dodajete uređaje

Da biste postavili i sačuvali kućnu lokaciju u Upravljač domom

Da biste tražili informacije o vremenskim prilikama na trenutnoj lokaciji

Kamera

Da biste snimili sliku profila

Da biste skenirali QR kodove i delili domove ili naloge

Da biste snimili fotografije i priložili ih na odeljak za podršku 1:1

Da biste snimili sliku računa o kupovini i sačuvate je prilikom registracije dodatnih informacija o proizvodu

Fotografije, mediji i datoteke

Da biste koristili kapacitet skladištenja vašeg pametnog telefona kada preuzimate informacije o proizvodu

Da biste snimili fotografije i priložili ih na odeljak Podrška 1:1

Da biste snimili račun o kupovini i sačuvali ga prilikom registracije dodatnih informacija o proizvodu

Mikrofon

Da biste proverili status proizvoda preko Pametne dijagnoze

Lokalna mreža

Da biste dobili informacije o uređaju koji povezuje Wi-Fi kada dodajete uređaje

Bluetooth

Da biste koristili funkciju skeniranja u blizini

HomeKit


Da biste dodali proizvode zasnovane na IoT-u

Praćenje

Da biste pružili personalizovane informacije

Daljinski upravljač

Uključite i proverite status proizvoda kad god i gde god poželite

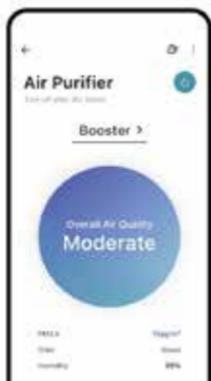

Upozorenja o statusu

Dobijajte obaveštenja o izveštajima o statusu proizvoda čim se dogode



Pametna dijagnoza

Dobijte pametnu procenu stanja Vaših proizvoda u detalje




TV daljinski upravljač

ThinQ aplikacija je ponovo uspostavljena kao daljinski upravljač za TV



Rad u režimima

Prava funkcija radi u režimu prave situacije

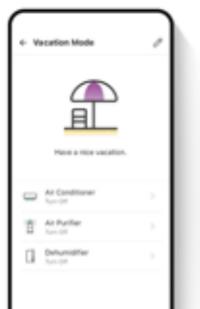

Pomoć

Nema struje	Proverite da li je kabl za naizmeničnu struju na TV-u uključen. Ako i dalje nema napajanja, izvucite utikač i ponovo ga uključite nakon 60 sekundi. I ponovo ouključite TV.
Prijem signala nije ispravan	<ul style="list-style-type: none"> • Za pojavu je duple slike ili fantoma problem je u vidljivosti podanika. Možete podesiti efekat slike ručnim radom: pogledajte uputstvo za regulaciju promenite smer spoljne antene. • Ako koristite unutrašnju antenu, pod određenim okolnostima, prijem će biti otežan. Tako da možete promeniti smer antene da biste podesili sliku. Ako ne možete da promenite prijem slike, morate koristiti spolnju antenu.
Bez slike	<ul style="list-style-type: none"> • Proverite da li je antena na zadnjoj strani televizora pravilno povezana ili ne. • Pokušajte da izaberete druge kanale i proverite da li je problem u samom televizoru ili ne.
Video je u redu bez zvuka	<ul style="list-style-type: none"> • Povećajte jačinu zvuka. • Proverite da li je TV u režimu isključenja zvuka ili ne i pritisnite taster za isključivanje zvuka da bi se zvuk nastavio.
zvuk je u redu greška u boji ili nema slike	<ul style="list-style-type: none"> • Povećajte kontrast i osvetljenost.
Statična slika snega i šum	<ul style="list-style-type: none"> • Proverite da li je antena na zadnjoj strani televizora povezana ili ne.
Nivo izlomljena linija	<ul style="list-style-type: none"> • Usisivač, fen za kosu, Možda ometaju električni uređaj, isključite ove vrste električnih uređaja.
Televizor ne reaguje sa daljinskim	<ul style="list-style-type: none"> • Upravljajte daljinskim upravljačem direktno na senzor daljinskog upravljača na TV-u. Ako TV i dalje nema odgovora, proverite da li je plastična kesa na daljinskom upravljaču ili ne. I proverite da li je baterija ispravna. Zamenite novu bateriju. • TV će se prebaciti u STAND BI ako daljinski upravljač ne odgovori u roku od nekoliko minuta.
NEMA video ulaza (PC režim)	<ul style="list-style-type: none"> • Proverite da li je kabl ekrana povezan na VGA ispravan. • Proverite da li postoji krivina na kablu ekrana.
Vertikalno treptanje (PC režim)	<ul style="list-style-type: none"> • Uđite u glavni meni Koristite regulator za šum video ekrana da biste eliminisali vertikalnu liniju.
Horizontalno kopiranje (PC režim)	<ul style="list-style-type: none"> • Podesite horizontalni regulator u glavnom meniju da biste obrisali horizontalnu liniju ripanje.
Ekran je previše svetao ili previše taman (PC režim)	<ul style="list-style-type: none"> • Podesite odnos kontrasta ili osvetljenost u glavnom meniju.
PC funkcija nema odgovora	<ul style="list-style-type: none"> • Proverite podešavanje računara u stanju kompatibilne rezolucije ekrana
Ripping linija u RCA povezivanju	<ul style="list-style-type: none"> • Molimo koristite kabl za povezivanje dobrog kvaliteta.
Problem dalje postoji	<ul style="list-style-type: none"> • Isključite kabl za napajanje i sačekajte 30 sekundi, a zatim povežite Ako postoji neki problem sa našim televizorom, nemojte ga sami popravljati, obratite se korisničkom servisu.

Napomena: TV panel je napravljen tehnologijom visoke preciznosti koja Vam daje fine detalje slike u živopisnim bojama. Povremeno se na ekranu može pojaviti nekoliko neaktivnih piksela kao fiksna tačka crvene, zelene, plave ili bele. Imajte na umu da ovo ne utiče na performanse proizvoda.

Content

Warning and Precautions	1
Important Safety Instructions	2
Remote Control Operation	4
TV Buttons and Terminal Interface	5
Remote Control	6
First Time Installation	7
Home page	12
Ariplay	14
TV Setting.....	17
Quick Settings	17
Picture Mode	18
Sound Mode.....	18
Sound Out	18
Game Optimiser	19
Network.....	19
Picture	20
Sound	21
General	23
Media	31
Photo and Video	31
Photo	32
Video	32
Music.....	33
LG ThinQ.....	34
Help.....	38

Warning and Precautions

	Warning Risk of electric shock. Do not open.	
Warning: To avoid the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.		



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to a person.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

CAUTION: TO ENSURE PERSONAL SAFETY, OBSERVE THE FOLLOWING RULES REGARDING THE USE OF THIS UNIT.

1. Operate only from the power source specified on the unit.
2. Avoid damaging the AC plug and power cord.
3. Avoid improper installation and never position the unit where good ventilation is unattainable.
4. Do not allow objects or liquid into the cabinet openings.
5. In the event of trouble, unplug the unit and call a service technician. Do not attempt to repair it yourself or remove the rear cover.

Changes or modifications not approved by our company could void the warranty.

- * When you don't use this TV set for a long period of time, be sure to disconnect both the power plug from the AC outlet and antenna for your safety.
- * To prevent electric shock do not use this power plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

Do not attempt to service the product yourself

Caution

To prevent electrical shock, do not open the TV casing. There are no user serviceable parts inside. Please refer to qualified service personnel for repairs.



Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this unit near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Ventilation should not be impeded by covering the ventilation openings with items such as newspapers, table-cloths, curtains etc. There must be a minimum distance of 5cm clear space around the unit at all times to ensure proper ventilation.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat. No naked flame sources such as lit candles, should be placed on or near the unit.
- 9) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the unit.
- 10) Only use attachments/accessories specified by the manufacturer.
- 11) Use only with a cart, stand, tripod, bracket or table specified by the manufacturer or sold with the unit. When a cart is used, use caution when moving the cart/unit combination to avoid injury from tip-over.
- 12) Unplug this unit during lightning storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, does not operate normally or has been dropped.
- 14) The unit should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the unit.
- 15) Place the television on a stable, flat surface. Failure to do so can result in the television falling, causing injury.
- 16) Do not allow young children to play around or on the television. Do not hang from the unit. Failure to do so can result in the television falling, causing injury.
- 17) Do not allow young children to play with the plastic bag that came with the television when you unpacked it. Failure to do so can result in suffocation, which may lead to death.
- 18) Avoid improper installation and never position the unit where good ventilation is impossible. When installing this unit, distance recommendations must be maintained between the set and the wall, as well as inside a tightly enclosed area or piece of furniture. Keep to the minimum distance guidelines shown for safe operation.
- 19) **Cautions for installation**
 - Do not tilt the unit towards the left or right or towards the back.
 - Ensure the power cord is out of the path of foot traffic.
 - The unit will generate a slight amount of heat during operation. Ensure that sufficient space is available around the unit to allow satisfactory cooling.
 - Have two people remove the unit from the box with the screen facing away from you. It's possible your clothing (such as a belt buckle or button) may scratch the front of the unit. Do the same when moving the unit to another location.



- 20) This unit shall be connected to a mains socket outlet with a protective earthing connection.
- 21) Make enough room for inserting and removing the power plug. Place the unit as close to the outlet as possible. The main power supply for this unit is controlled by inserting or removing the power plug. Physically disconnecting the power plug is the only way to completely disconnect the unit from the mains power source.
- 22) Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- 23) When this unit is connected to the wall outlet, it is always on standby even when all the LED lamps are not lit. To shut down the unit, unplug the unit from the wall outlet.
- 24) If the supply cord is damaged, it must be replaced before further use by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 25) Always place the TV on furniture that can safely support the TV. Make sure the ends of the TV do not overhang the edge of the supporting furniture.
- 26) Do not place the TV on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the TV to a wall or other suitably strong support.
- 27) Do not stand the TV on cloth or other materials placed between the TV and the supporting furniture.
- 28) Where the mains plug is used as the disconnect device, the disconnect device shall remain readily operable.

IMPORTANT INFORMATION


Televisions that are not positioned in sufficiently stable locations can present potential falling hazards. To avoid injuries, particularly to children, take the following simple precautions:

- Place this television only on furniture that can safely support it.
- Use only a cabinet or stand recommended by the manufacturer of the television.
- Ensure the television does not hang over the edge of supporting furniture.
- Do not place the television on tall furniture (such as cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Do not place cloth or other materials between the television and the supporting furniture.
- Do not let children climb on furniture to reach the television or its controls.

Remote Control Operation


Installing Batteries

1. Slide in the direction shown by the arrow in Image 1 below to open the cover of the batteries on the back of the remote control.
2. Load two AAA alkaline batteries in the compartment.
3. Replace the cover of the batteries.

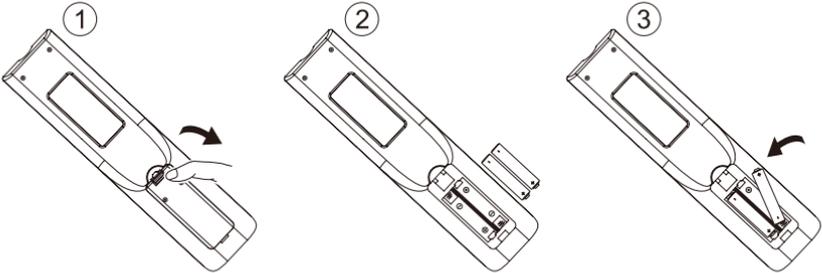

Precautions

Make sure that there is no obstacle between the remote control and television set.

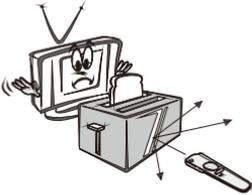


Keep the remote control away from heat sources and humid areas to ensure effective performance of the remote control.



As strong light may interfere with the signals, change your position to operate the remote control if the television cannot be turned on or off as you expect.



Make sure that two AAA 1.5V alkaline batteries are loaded correctly.

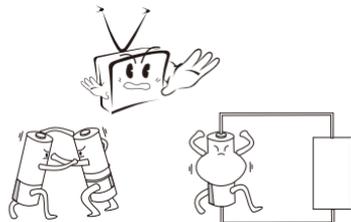


TV Buttons And Terminal Interface

TV Buttons




- Turn on the TV:
In standby mode, short press TV control button to turn on the TV.

 - Soft keyboard function:
After turning on the TV, short press TV control button to call out the following soft keyboard.
Short press TV control button to select the item you want. Long press TV control button to enter the item you have selected.




Soft Keyboard		
Icon	Name	Function
	Down/Up	Change to previous or next channel in TV mode. Move down or up to select an item in menu settings.
	Left/Right	Decrease or increase the sound volume in TV mode. Move left or right to select an item in menu settings.
	Main Menu	Access the main menu settings.
	Source	Access the interface of input source.
	Standby	Turn the TV standby.

	MINI AV input The TV is connected to the video transmission signal function, and the external AV transmits the video signal to the mini av in input port.		EARPHONE output When earphones are plugged in, speakers are disabled (Some models without this interface)
	HDMI input Digital signal input from HDMI video connector.		USB input Connect a USB device here to play its media files
	ANT 75 Connect the antenna/cable tv input (75/VHF/UHF)		OPTICAL Optical audio output, for audio signal transmission without loss of quality.
	RJ45 Connect the Internet.		

 


(32"40"43"50"55")

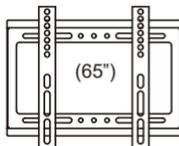

Attention: Pls purchase the wallmount as show in the picture if the customer need.

Remote Control

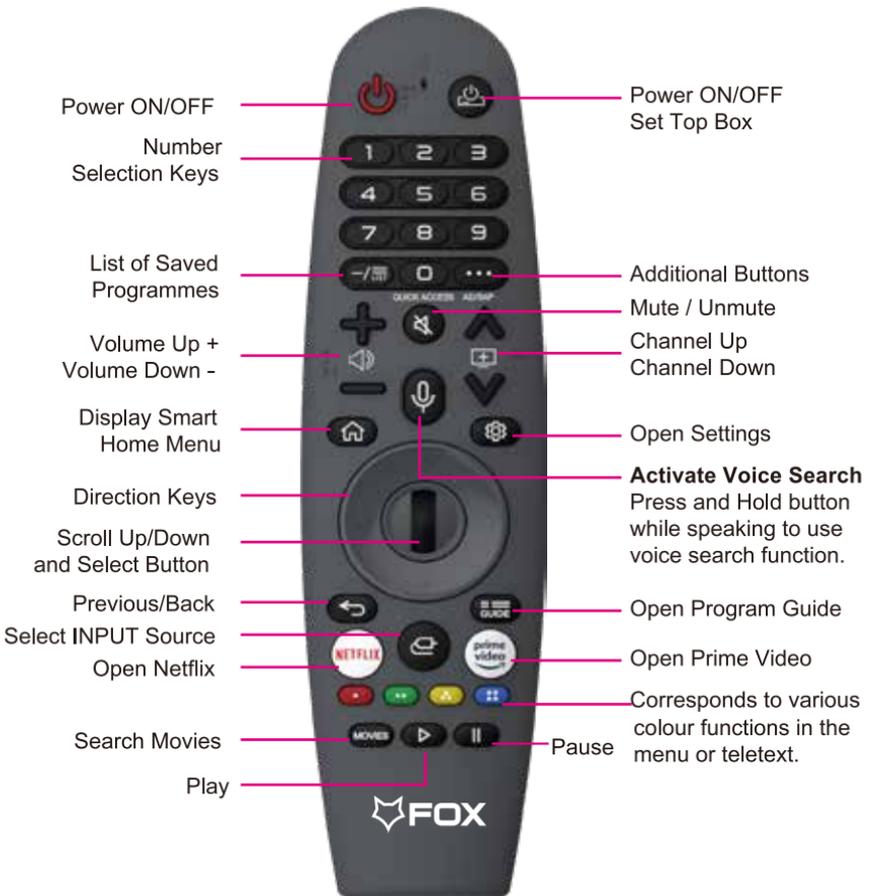

Note:


- 1) The picture is only for reference.
- 2) The image, buttons or functions of remote control may vary depending on the region, model or source.

First Time Installation

Enter the Home page after First Time install.



Press **【◀】 / 【▶】** button to Installation method.

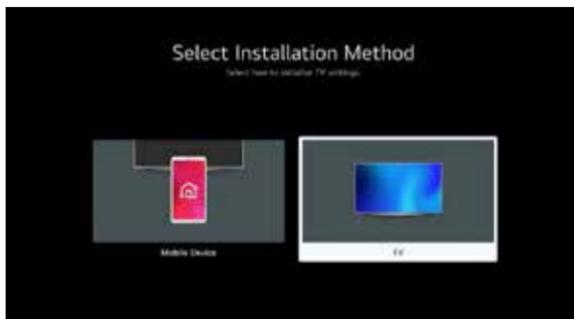

Press **【▼】 / 【▲】** button to select Language.

Press **【▼】 / 【▲】** button to select Country.






Press **[▼]** / **[▲]** button to select Internet Connection.




Press **<OK>** button to select Terms & Conditions.

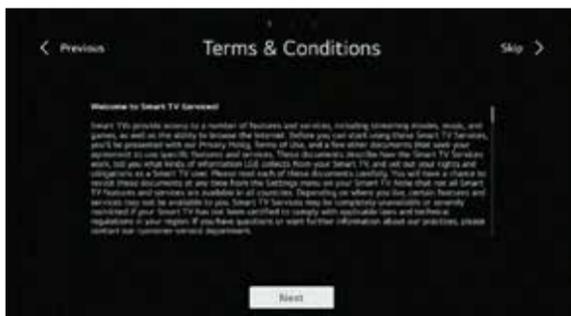



Press **【▼】 / 【▲】** button to select the way to watch TV.

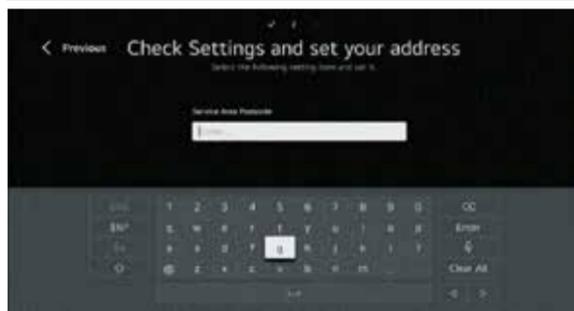

Press [◀] / [▶] button to select TV Type.



Press [▼] / [▲] button to select Programme Tuning.




Press **【▼】** / **【▲】** button to select LG Account.



Home page

Enter the Home page after First Time install.

In the list of apps, select the app you want to enter

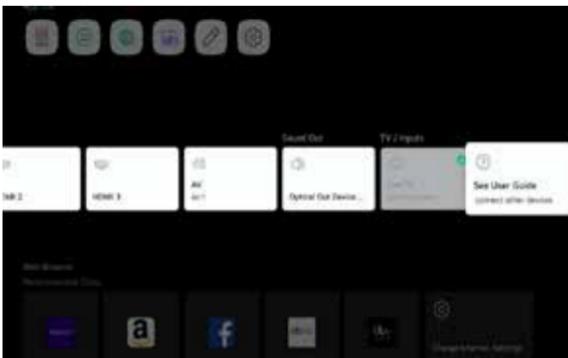



Using Home Dashboard

You can select or control a device (mobile, external device, Home IoT Devices, etc.) connected to the TV.

Press ▼ / ▲ / ◀ / ▶ button to select .



TV/Input/Mobile

1. You can play sound from a smart device connected via Bluetooth.

Please refer to Connecting External Devices → Playing Sound from a Smart Device through the TV's Speakers in User Guide for more information on the action.

2. You can check and select the external device connected through the external input port or network.

Connect Mobile Device

You can check and select the smart device connected with the LG ThinQ app.

Please refer to Connecting External Devices → Connecting Smart Devices in User Guide for more information on the action.

Airplay

Select this television or streaming device on your Apple devices, and you can wirelessly share content from your iPhone, iPad, or Mac.

Connection operation instruction :

1、 Make sure your devices are on the same Wi-Fi or Ethernet network. Open Control Center and Choose Screen Mirroring to Select this television or streaming device.





2、 Make sure your devices are on the same Wi-Fi or Ethernet network. From your video or audio player, tap the AirPlay icon to Select this television or streaming device.



3、 You can also scan the QR to add this device to Homekit,and you can easily and securely control this device using the Home app on your Apple devices.

Press ▼ / ▲ button to select Airplay and HomeKit Settings,and press the <OK> key to enter the sub-menu.

Press ▼ / ▲ button to select Set Up.

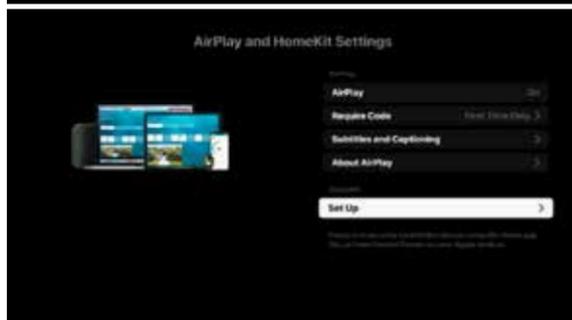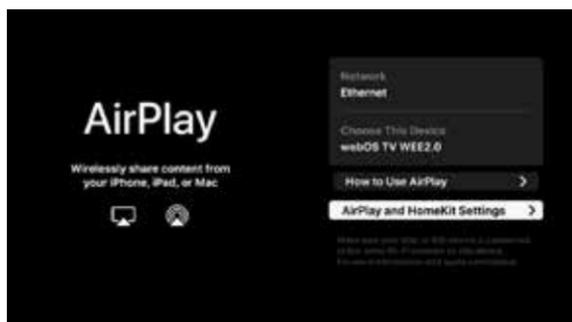

USB 1

You can view and select the connected storage device.

TV Speaker

The currently selected output speaker is displayed, and you can navigate to the output speaker settings screen.

Home IOT Devices

You can check and control the device connected via the Home IoT.

Please refer to Connecting External Devices → Connecting Home IoT Devices in

User Guide for more information on the action.



You can easily control your device by presetting the desired operations.



Exit the Home Dashboard.

TV Setting

Press **MENU** button to enter the TV Setting.

Press **▼ / ▲** button to highlight the desired menu icon , and press **<OK>** button to select.

Quick Settings



- ① You can set **Picture Mode**.
- ② You can set **Sound Mode**.
- ③ You can choose **Sound Out**.
- ④ You can set **Game Optimiser**.
- ⑤ Move to the **Connection** screen.
- ⑥ You can set more options.
- ⑦ You can add/delete the quick setting items or change their order.

Picture Mode

Press ▼ / ▲ button to select the Picture Mode.

Press the <OK> key to enter the sub-menu.

Press ◀ / ▶ button to select Vivid/Standard/Basic/Cinema/Sports, and press <OK> button to setup.

Vivid	Sharpens the image by increasing the contrast, brightness and sharpness.
Standard	The default mode, to make users experience high-quality images under normal light.
Basic	The Energy Saver feature changes settings on the TV to reduce power consumption.
Cinema	Is suitable for watching TV or movies in a dark room.
Sports	Suitable picture for sports games. Sharpens the image of rapid movements such as kicking or throwing a ball.

Sound Mode

Press ▼ / ▲ button to select the Sound Mode.

Press the <OK> key to enter the sub-menu.

Press ◀ / ▶ button to select Standard/ Cinema/ Clear Voice/ Sports/ Music, and press <OK> button to setup.

Standard	Optimises the sound for all types of content.
Cinema	Optimises the sound for cinemas.
Clear Voice	Boosts voice clarity.
Sports	Optimises the sound for sports games.
Music	Enhance the high pitch and reduce the bass.

Sound Out

Press ▼ / ▲ button to select the Sound Out.

Press the <OK> key to enter the sub-menu.

Press ◀ / ▶ button to select TV Speaker/ Bluetooth Device/ Mobile Device/ Optical Out Device/ HDMI (ARC) Device/ Wired Headphones/ Optical Out Device+TV Speaker/ Wired Headphones + TV Speaker, and press <OK> button to setup.

Game Optimiser

Press ▼ / ▲ button to select Game Optimiser.

Network

If you configure settings for the network, you can use various services such as online contents and applications.

Wired Connection(Ethernet)

Press ▼ / ▲ button to select Wired Connection(Ethernet).

Press <OK> button to enter sub-menu and setup.



Wi-Fi Connection

Press ▼ / ▲ button to select Wi-Fi Connection. Press <OK> button to enter sub-menu and setup.



All Settings

Press ▼ / ▲ button to select the All Settings.


Press the <OK> key to enter the sub-menu.

Press ▼ / ▲ button to select Picture/Sound/General/Support.

Picture

Press ▼ / ▲ button to select Picture. Press <OK> button to enter sub-menu and setup.

(option: Select Mode/Aspect Ratio/Advanced Settings)

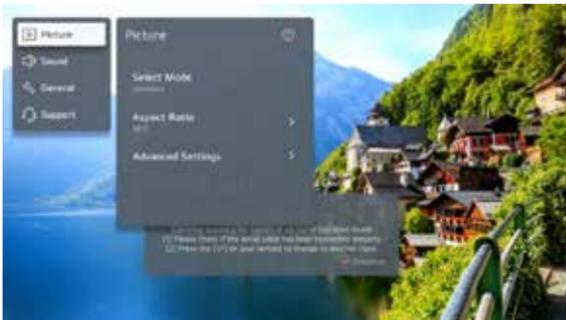

Select Mode

Press ▼ / ▲ button to select the Select Mode.

Press the <OK> key to enter the sub-menu.

Press ▼ / ▲ button to select Vivid/Standard/Basic/Cinema/Sports.

Aspect Ratio

You can change the screen size according to the type of content you are watching.

Press ▼ / ▲ button to select User Selection/Just Scan.

User Selection

Press ▼ / ▲ button to select Aspect Ratio.

(Optional: 16:9/ Original/ Full Wide/ 4:3/ Vertical Zoom/ 4-Way Zoom)

Just Scan

Press ▼ / ▲ button to select Just Scan.

If you turn this feature **On**, you can view the content in the aspect ratio that is in the broadcast signal or content source. If the edge of the screen is not clean, please turn it **Off**

Advanced Settings

Press ▼ / ▲ button to select the Advanced Settings.

Press the <OK> key to enter the sub-menu.

Press ▼ / ▲ button to select Brightness/Colour/Clarity/Apply to all inputs/Reset.

Sound

Press ▼ / ▲ button to select Sound. Press <OK> button to enter sub-menu and setup.

(Optional: Select Mode/Sound Out/Advanced Settings)



Sound Mode

Press ▼ / ▲ button to select Vivid/Standard/Basic/Cinema/Sports.

Sound Out

Press ▼ / ▲ button to select the Sound Out.

Press the <OK> key to enter the sub-menu.

Press ▼ / ▲ button to select Use TV Speaker/Use Wired Speaker/Use Wireless Speaker/Use External Speakers with TV Speaker.

Advanced Settings

Press ▼ / ▲ button to select the Advanced Settings.

Press the <OK> key to enter the sub-menu.

Press ▼ / ▲ button to select Balance/Equalizer/Apply to All Inputs/Reset/Installation Type/Automatic Volume Adjustment/Match Screen and Sound/Select HDMI Input Audio Format/LG Sound Sync/Digital Sound Output/eARC Support.

Balance

Balanced left and right channels.

Press <OK> button to select Balance. Press ▼ / ▲ button to adjust.

Equalizer

Press ▼ / ▲ button on to select Equalizer.

Press <OK> button to enter sub-menu then press ▼ / ▲ ◀ / ▶ button to adjust.

Apply to All Inputs

Press ▼ / ▲ button on to select Apply to All Inputs.

Reset

You can reset the sound effect settings.

Press ▼ / ▲ button to select Reset.

Installation Type

Press ▼ / ▲ button on to select TV Installation Type.

Press ▼ / ▲ button to select Stand/ Wall-mounted.

Automatic Volume Adjustment

Press ▼ / ▲ button on to select Auto Volume. Press <OK> button to select On/Off.

Match Screen and Sound

Press ▼ / ▲ button on to select Match Screen and Sound.

(Optional: TV Speaker Delay/ Bypass)

Select HDMI Input Audio Format

Press ▼ / ▲ button on to select HDMI Input Audio Format.

You can set the audio format for each HDMI input. When the voice delivered through the HDMI port is not synchronized, set it to **PCM**.

LG Sound Sync

Press ▼ / ▲ button on to select LG Sound Sync.

Connect the LG Sound Sync device to the optical digital input port and set Sound Out to Optical.

By setting this feature to On, you can adjust the volume of the connected LG Sound Sync device using a TV remote control.

Digital Sound Output

Press ▼ / ▲ button on to select Digital Sound Out.

(Optional: PCM/Auto/Pass Through)


eARC Support

Press ▼ / ▲ button on to select eARC Support.

General

Press ▼ / ▲ button to select General. Press <OK> button to enter sub-menu and setup.

(option: AI Service/Game Optimiser/Programmes/Devices/Network/System/Energy Saving/Accessibility)

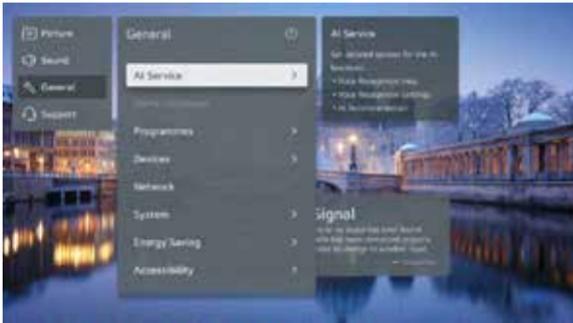

AI Service

You can enable the recommended services based on the usage history.

Press ▼ / ▲ button to select AI Service. Press <OK> button to enter sub-menu.


Game Optimiser

Press ▼ / ▲ button on to select Game Optimiser.

Programmes

Press ▼ / ▲ button on to select Programmes.

(Optional: Programme Tuning/Programme Manager/HbbTV)

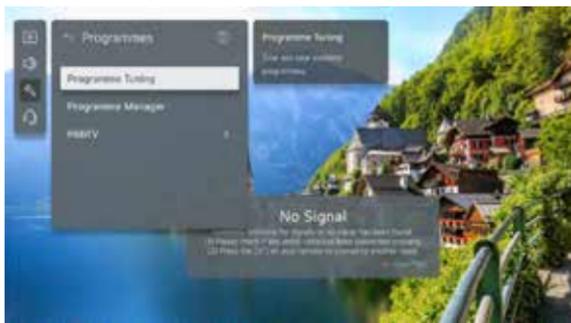

Devices

Press ▼ / ▲ button on to select Devices.

(Optional: TV Management/External Devices/HDMI Settings)

Network

Press ▼ / ▲ button on to select Network.

System

Press ▼ / ▲ button on to select System. Press <OK> button to enter sub-menu and setup.

(option: Language/Location/Time & Timer/Safety/LG Account/Additional Settings/Reset to Initial Settings)


Language

You can choose the menu language displayed on the screen and the audio language of the digital broadcast.

Press ▼ / ▲ button to select Language. Press <OK> button to enter sub-menu.

(Optional: Menu Language/Audio Language/Keyboard Languages/Primary Teletext Language/Secondary Teletext Language)


Press ▼ / ▲ button to select the menu and setup the language.

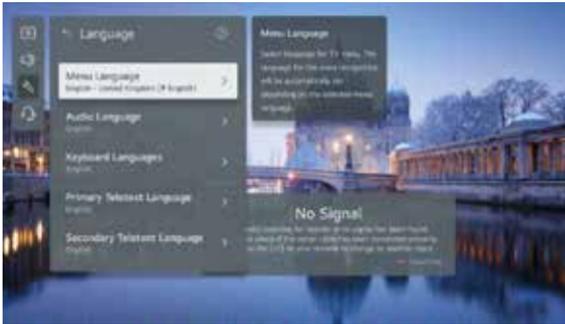

Location

You can change the location setting of your Smart TV.

Press ▼ / ▲ button to select Location. Press <OK> button to enter sub-menu.

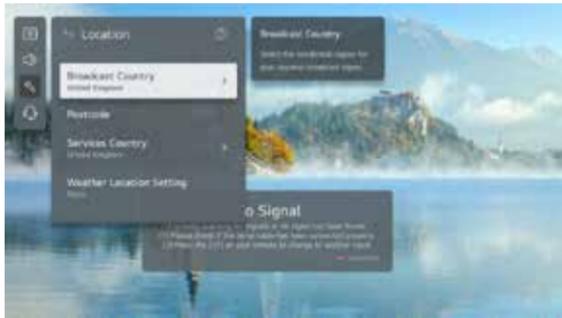

Broadcast Country

You can set the broadcast country on your TV.

Postcode

This function is used to set the broadcast location of the TV by entering your postcode.

Services Country

If you don't set the Set Automatically, you can select the country manually.

Weather Location

You can set the Weather Location Setting.

Time & Timer

You can check the time or configure related settings.

Press ▼ / ▲ button to select Time. Press <OK> button to enter sub-menu.



Set Automatically

The TV time is automatically set to the time of digital broadcasting information sent from the broadcasting station or the time sent from the server.

Press ▼ / ▲ button to select Set Automatically. Press <OK> button to select On/Off.

Time / Date / Time Zone

You can manually set the time and date if the automatically set current time is incorrect.


Press ▼ / ▲ button to select Set Time / Date / Time Zone. Press <OK> button to select.

Timers

Press ▼ / ▲ button to select Timers. Press <OK> button to enter sub-menu.

Safety

Press ▼ / ▲ button to select Safety. Press <OK> button to enter sub-menu.

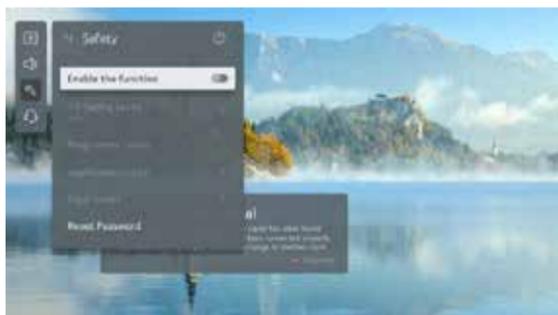


All the Options are available only when the Safety select On.

The initial password is set as "0000".

Press ▼ / ▲ button to select the option then press <OK> button to setup.

LG Account

Press ▼ / ▲ button to select LG Account.Press <OK> button to enter sub-menu.

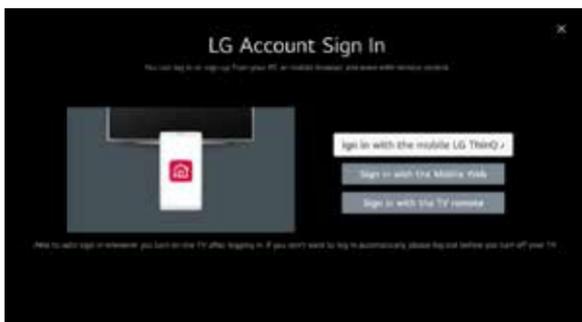

Additional Settings

Press ▼ / ▲ button to select Additional Settings.Press <OK> button to enter sub-menu.




Reset to Initial Settings

Press ▼ / ▲ button to select Reset to Initial Settings.Press <OK> button to enter sub-menu.

Return TV to its initial settings. This will revert all settings to their default values.

After reset, the TV will automatically turn off and on.


Note: If Safety is set to On, you should type the password to Reset to Initial Settings.

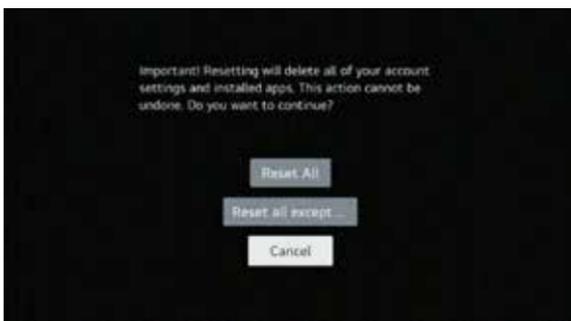

Energy Saving

Reduces power consumption by adjusting screen brightness.


Press ▼ / ▲ button to select Off/ Minimum/ Medium/ Maximum/Auto Power Off/Screen Off.

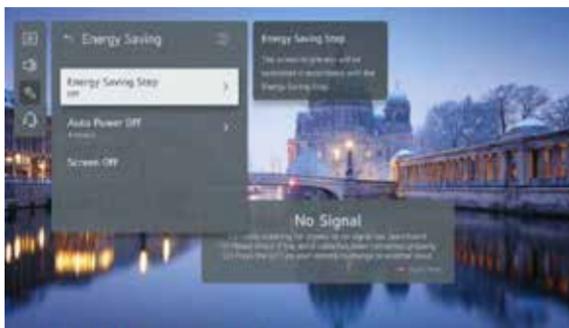

Accessibility

Highlight the item and press <OK> button to enter the sub-menu.

Press ▼ / ▲ button to select Accessibility.

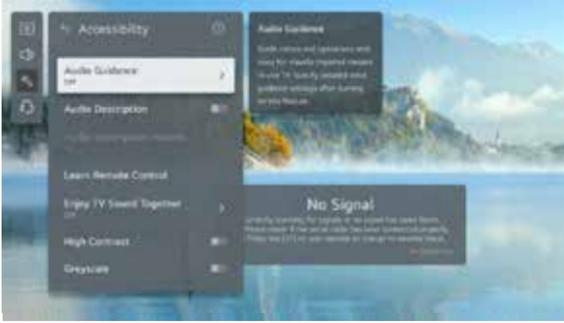

Audio Guidance

Press ▼ / ▲ button to select Audio Guidance. Press <OK> button to enter sub-menu.

All the Options are available only when the Audio Guidance select On.

Audio Description

Press <OK> button to setup. Press ▼ / ▲ button to select Audio Description Volume.

Learn Remote Control

You can set the Learn Remote Control.

Enjoy TV Sound Together

Press ▼ / ▲ button to select Enjoy TV Sound Together. Press <OK> button to enter sub-menu.

High Contrast

You can set the High Contrast.

Greyscale

You can set the Greyscale.

Invert Colours

Press <OK> button to select On/Off.

Hard of Hearing

Press <OK> button to select On/Off.

Subtitles

You can set the Subtitles.

Support

Highlight the item and press <OK> button to enter the sub-menu.

Press ▼ / ▲ button to select Support.



Software Update

Uses software update to check and obtain the latest version.

Press ▼ / ▲ button to select Software Update. Press <OK> button to enter sub-menu.

Then press ▼ / ▲ button to select and setup.

User Guide

Press ▼ / ▲ button to select User Guide. Press <OK> button to enter sub-menu.

Then press ▼ / ▲ button to select and setup.

Privacy & Terms

Press ▼ / ▲ button to select Privacy & Terms. Press <OK> button to enter sub-menu.

Then press ▼ / ▲ button to select and setup.

Media

Connect a USB storage device (USB HDD, USB stick) to the USB port on the TV to enjoy the content files stored on the USB storage device on your TV.

Press ▼ / ▲ button on to select Photo & Video/Photo/Video/Music.


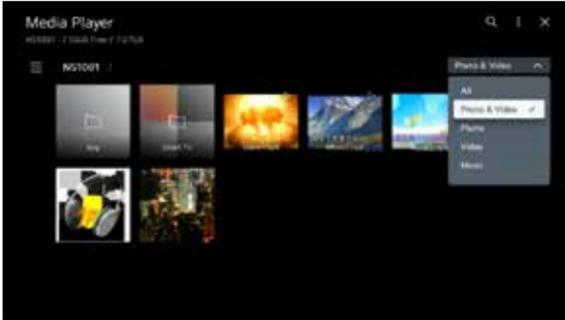



Photo and Video

You can view photos and videos using the Photo & Video app.

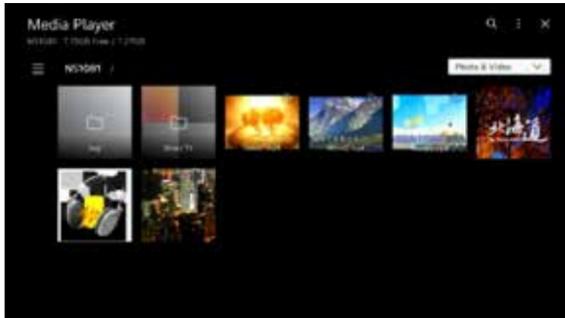

Photo

Selecting a photo in the Photo & Video app runs the photo player. You can view your saved photos.

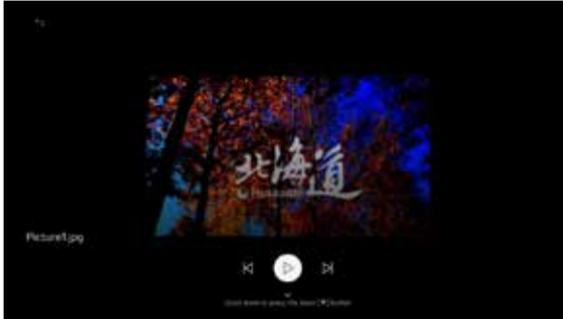


Video

Selecting a photo in the Photo & Video app runs the photo player. You can view your saved videos.



Music

You can play music conveniently by selecting the music files saved in the Music app or by selecting the music player icon during content playback in apps such as Photo & Video.

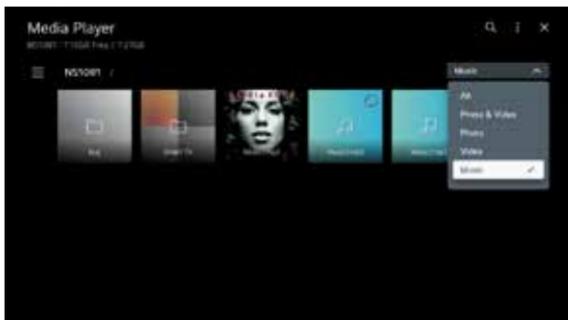

LG ThinQ

You can check and select the smart device connected with the LG ThinQ app and log in/out to and from the LG ThinQ account you created on mobile.

Check your phone's Internet connection and try again.



Retry

Whenever, wherever

Control your home appliances remotely with LG ThinQ.



Skip

Next

ThinQ does it all even while you are out

With the ThinQ, you can live a convenient life with everything running automatically.



Skip

Next

The right information at the right time.

The ThinQ informs you of the current state of your appliances. It keeps you updated with immediate notifications for events such as the end of a wash cycle.



Skip

Next

Get the status report of your appliances.

Get the state of your product smartly assessed in detail. You can also receive a troubleshooting guide tailored to the diagnosis results.



Sign in

● 中國/中國語 ▾

Welcome to LG ThinQ.



Sign in with LG

[Another account >](#)

Discover how a connected life with ThinQ makes your life easier.

Connect your washer, air conditioner, TV, and other appliances to the ThinQ app.

Get away from the busy routine and enjoy a relaxing home life with smart ThinQ.

■ Get immediate notifications

The ThinQ app will keep you informed with all notifications you need so that your laundry will not smell musty or your pizza in the oven will not get overcooked. ThinQ will periodically diagnose the state of your products by itself.

■ Control your home from anywhere

You can check the indoor temperature of your house and turn on your air conditioner even while you are out. You can also remotely run your washer from outside and proceed with the drying process right after coming back home.

■ TV remote control in my smartphone

Change TV channels and adjust the sounds with the ThinQ app. You can enjoy your mobile content in your smartphone gallery on a TV screen. You can also use the Magic Remote feature with your app.

※ The availability of products and services may vary depending on the models you own or the region/country you reside in.

■ ThinQ will automatically access the current state of your products

Get the state of your products smartly assessed in detail. Smart Diagnosis will catch problems and help you troubleshoot them.

The following access permissions are necessary for the ThinQ app.

Outgoing Calls/Call Settings

To contact the LG Service Centre

Contacts

To verify user information when signing in to the app

Location

To obtain the device connecting Wi-Fi info when adding devices

To set and save the home location in Manage Home

To search for the weather information of the current location

Camera

To take a profile picture

To scan QR codes and share homes or accounts

To take photos and attach them to the 1:1 Support section

To take a picture of the purchase receipt and save it when registering additional information about the product

Photos, Media & Files

To use the storage capacity of your smartphone when downloading product information

To take photos and attach them to the 1:1 Support section

To take a picture of the purchase receipt and save it when registering additional information about the product

Microphone

To check product status via Smart Diagnosis

Local Network

To obtain the device connecting Wi-Fi info when adding devices

Bluetooth


To use the Scan Nearby feature

HomeKit

To add IoT-based products

Tracking

To provide personalised information

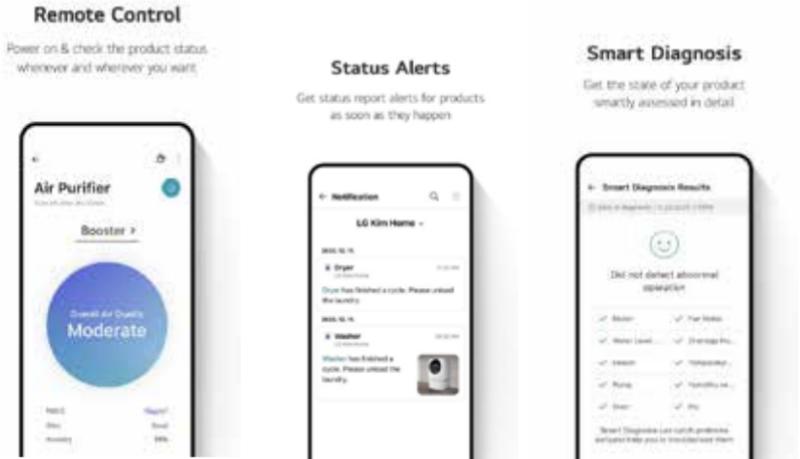


TV Remote

The ThinQ app is reborn
as a TV remote



Working in Modes

The right feature goes to work
in the right situation mode

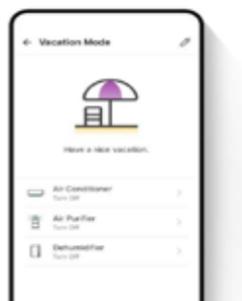

Help

No Power	Check the AC cord of TV is plus in or not. If still no power, please pull out the plug and replug in after 60 seconds. And open the TV again
Signal receive not properly	<ul style="list-style-type: none"> ● To cause double image or phantom if there has high building or high mountain round TV. You can adjust image effect by manually operation: consult instruction of vernier regulation or change the direction of external antenna. ● If you use the indoor antenna, under certain circumstance, receive will be more difficult. So you can change the direction of the antenna to adjust the image effect. If can't change image receiving effect either, you have to use external antenna.
No picture	<ul style="list-style-type: none"> ● Check the antenna at the back of TV is connected properly or not. ● Try to select other channels and check whether the TV problem itself or not
but, Video is ok without audio	<ul style="list-style-type: none"> ● Increase the volume. ● Check the TV is in mute mode or not, and please press the mute button to make sound resume.
but, Audio is ok color error or no picture	<ul style="list-style-type: none"> ● Increase contrast and brightness.
Snow statics picture and noise	<ul style="list-style-type: none"> ● Check the antenna at the back of TV is connected or not.
Level broken line	<ul style="list-style-type: none"> ● Vacuum, such as hair drier, Maybe has electrical appliance interfere, please turn off these kinds of electrical appliance, cleaner and so on.
Image or-Dual "simulacrum" The TV no response with the Remote	<ul style="list-style-type: none"> ● Perhaps the location for the antenna is not good. Use the tall beamed antenna can be improved quality of the display image. ● Operate the remote direct to the remote sensor on the TV. If still no response for the TV, please check if the plastic bag on the remote take or not. And check if the location for the battery is correct. Change the new battery. ● The TV will shift to the STAND BY if no response from the remote in the few minutes.
NO Video In (PC Mode)	<ul style="list-style-type: none"> ● Please check if the display cable connect to the VGA correct. ● Please check if there has the bend on the display cable.
Vertical twinkling (PC Mode)	<ul style="list-style-type: none"> ● Enter the main menu. Use the clock regulator for the video display noise to eliminate the vertical line.
Horizontal ripping (PC Mode)	<ul style="list-style-type: none"> ● Adjust the Audio sound horizontal in the main menu to clear the horizontal ripping line.
The screen is too bright or too dark (PC Mode)	<ul style="list-style-type: none"> ● Adjust the contrast ratio or brightness in the main menu.
PC Function no response	<ul style="list-style-type: none"> ● Check the computer setting in the state of compatible display resolution
Ripping line in RCA connecting	<ul style="list-style-type: none"> ● Please use good quality connecting cable.
Problem still exist	<ul style="list-style-type: none"> ● Unplug the power cable and wait for 30 seconds, then connect. If there is some problem with our TV, do not repair it by yourself, please contact with the customer service center.

There will be complete picture and the brightness will come down if the TV is in Note. So please do not keep the TV in a state of same, the static picture for too long time. Menu or same picture that has much difference in brightness and contrast ratio for too long time.

Note : TV panel is built with very high precision technology giving you fine picture details in vibrant color. Occasionally, a few non-active pixels may appear on the screen as fixed point of red, green, blue or white. Please note this does not affect the performance of the product.



Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati. Za više informacija o FOX uređajima posetite našu internet stranicu:

foxelectronics.rs