



## UPUTSTVO ZA UPOTREBU

# LED TELEVIZORI

Model: 50WOS640E

Hvala Vam što ste kupili ovaj uređaj.

**FOX LED** televizori prepoznaju se po odličnim tehničkim karakteristikama, kao i modernom, funkcionalnom i elegantnom dizajnu. Osim toga konstantna unapređenja u vidu postprodajne

podrške, izuzetno efikasna i rasprostranjena servisna mreža čine da se ponosni vlasnici **FOX televizora** mogu osećati sigurno.

**Napravili ste pravi izbor.**

U nastavku slede uputstva za upotrebu. Nisu komplikovana, ali ih se morate pridržavati.

SR

# Informacije o proizvodu

Delegirana uredba EU komisije 2019/2013

| Informacije   |                                    | Vrednost    | Jedinica        |
|---|------------------------------------|-------------|-----------------|
| 1. Ime ili marka proizvođača:   |                                    | FOX         |                 |
| 2. Identifikator modela:  |                                    | 50WOS640E   |                 |
| 3. Razred Energetske Efikasnosti za Standardni dinamički opseg (SDR)                        |                                    | G           |                 |
| 4. Potrošnja energije u uključenom stanju za Standardni dinamički opseg (SDR)               |                                    | 71.0        | W               |
| 5. Razred energetske efikasnosti za Veliki dinamički opseg (HDR)                            |                                    | G           |                 |
| 6. Potrošnja energije u uključenom stanju za Visok dinamički opseg (HDR)                    |                                    | 105.0       | W               |
| 7. Potrebna energija u isključenom stanju   |                                    | 0.0         | W               |
| 8. Potrebna energija u Stand-by režimu  |                                    | 0.5         | W               |
| 9. Potrebna energija kod umrežavanja u Stand-by režimu                                      |                                    | 2.0         | W               |
| 10. Kategorija elektronskog displeja  |                                    | Televizor   |                 |
| 11. Odnos veličina  |                                    | 16 : 9      |                 |
| 12. Rezolucija ekrana (u pikselima)   |                                    | 3840 x 2160 | piksela         |
| 13. Dijagonala ekrana   |                                    | 50          | inča            |
| 14. Dijagonala ekrana   |                                    | 126         | cm              |
| 15. Vidljiva površina ekrana  |                                    | 67,5        | dm <sup>2</sup> |
| 16. Korišćena tehnologija panela  |                                    | LCD sa LED  |                 |
| 17. Dostupna Automatska kontrola osvetljenja (ABC)  |                                    | Ne          |                 |
| 18. Dostupan senzor za prepoznavanje zvuka  |                                    | Ne          |                 |
| 19. Dostupan senzor prisustva u prostoriji  |                                    | Ne          |                 |
| 20. Frekvencija osvežavanja slike   |                                    | 60          | Hz              |
| 21. Minimalna garantovana dostupnost ažuriranja softvera i firmvera (do):                   |                                    | 3           | (u godinama)    |
| 22. Minimalna garantovana dostupnost rezervnih delova (do):                                 |                                    | 3           | (u godinama)    |
| 23. Minimalna garantovana podrška za proizvod (do):   |                                    | 3           | (u godinama)    |
| 24. Tip napajanja:  |                                    | Unutrašnje  |                 |
| <sup>i</sup> Eksterno standardizovano napajanje (uključeno u pakovanju proizvoda):          | Standardno ime                     |             |                 |
|   | Voltaža ulaznog signala            |             | V               |
|   | Voltaža izlaznog signala           |             | V               |
| <sup>ii</sup> Eksterno standardizovano napajanje (ako nije uključeno u pakovanju proizvoda) | Standardno ime                     |             |                 |
|   | Zahtevana voltaža izlaznog signala |             | V               |
|   | Zahtevana dopremljena struja       |             | A               |
|   | Zahtevana frekvencija struje       |             | Hz              |

## VAŽNA BEZBEDONOSNA UPUTSTVA

### UPOZORENJE

KAKO BISTE SPREČILI POŽAR ILI ELEKTRIČNI UDAR NEMOJTE KORISTITI PRODUŽENI KABL, DUPLI UTIKAČ ILI DRUGE DODATKE NA UTIČNICI I NE IZLAŽITE OVAJ UREDAJ VLAZI ILI KIŠI.



Ovaj simbol munje u jednakostraničnom trouglu upozorava korisnike na prisustvo opasnog i ne izolovanog napona unutar kućišta proizvoda koji može biti dovoljan da stvori rizik STRUJNOG UDARA

#### CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN

Upozorenje: Da biste smanjili rizik od strujnog udara nemojte skidati poklopac (ili zadnju stranu). Unutra nema delova koje korisnik može sam da zameni. Za obavljanje servisa zatražite pomoć kvalifikovanog osoblja.



Znak uzvika unutar jednakostraničnog trougla u ovom uputstvu upozorava korisnika na prisustvo važnih instrukcija za rad i održavanje (servisiranje) uređaja.

Ovaj aparat ne treba izlagati vodi, a predmete ispunjene tečnošću poput vaza ne treba da budu postavljeni na i oko uređaja.

#### OPREZ

Postoji opasnost od eksplozije ako se baterija nepropisno zameni.

Zamenite postojeću sa samo odgovarajućom vrstom baterije.

Nemojte izlagati bateriju direktnoj sunčevoj svetlosti ili bilo kojem drugom izvoru toplote.

Obezbedite pravilno odlaganje istrošenih baterija.

Ostavite lako dostupnim mesto gde je utikač ili nastavak za prekid napajanja.

Da biste smanjili rizik od strujnog udara, ne obavljajte bilo kakvo servisiranje osim onih koje se pominju u ovom uputstvu.

#### VAŽNE INFORMACIJE

Ako televizor nije postavljen na dovoljno stabilnom mestu, može postojati potencijalna opasnost od pada.

Mnoge povrede, posebno dečije, mogu se izbeći primenom jednostavnih mera opreza kao što su:

Korišćenje elemenata ili stalaka koje je preporučio proizvođač televizora.

Korišćenje samo onog nameštaja koji može sigurno izdržati uređaj.

Obezbeđivanje uređaja tako da ne prelazi ivicu nameštaja.

Nemojte postavljati TV na visok nameštaj (na primer, ormare ili police) bez prethodnog pričvršćivanja kako nameštaja tako i uređaja na odgovarajuću površinu.

Ne pokrivate televizor krpom i ne stavljajte drugi materijal između televizora i nameštaja na kom on stoji.

 


#### Sigurna instalacija

Koristite pojas za fiksiranje televizora kako bi sprečili uređaj od pada unapred.



1. **Pročitajte uputstva**- Sve napomene o sigurnosti i načinu rada treba pročitati pre uključivanja aparata.
  2. **Sačuvajte uputstva** – Uputstva za sigurnost i uputstvo za upotrebu treba da se sačuvaju za buduće potrebe.
  3. **Imajte u vidu Upozorenja** – Treba se pridržavati svih upozorenja na aparatu i svih uputstava za upotrebu.
  4. **Pratite uputstva**- Treba pratiti sva uputstva.
- 
5. **Voda i vlažnost** – Aparat ne treba koristiti u blizini vode.
  6. **Nosač i postolje** – Aparat treba koristiti samo sa nosačem ili postoljem koje preporučuje proizvođač
  7. **Montaža na zid ili plafon** – Aparat treba da se montira na zid ili plafon samo po preporuci proizvođača.
  8. **Ventilacija** – Aparat treba da bude dobro postavljen, tako da lokacija ili pozicija aparata ne ometaju njegovo provetranje.
  9. **Toplota** – Ovaj aparat treba postaviti dalje od izvora toplote kao što su radijatori i peći.
  10. **Napajanje** - Aparat treba povezati samo na napajanje kao što je opisano u uputstvima za upotrebu ili onako kako je naznačeno na uređaju.
  11. **Uzemljenje ili polarizacija** – Treba preduzeti mere predostrožnosti.
  12. **Zaštita kabla za napajanje** – Naponski kabl treba da bude usmeren tako da je malo verovatno da se može gaziti, priklještitu stvarima na njemu i njegovom kraju.
  13. **Čišćenje** – Aparat bi trebalo čistiti samo po preporuci proizvođača.
  14. Napajanje spoljne antene treba da se nalazi daleko od dalekovoda.
  15. **Uzemljenje spoljne antene** – Ako je spoljna antena povezana na prijemnik, antenski sistem mora biti uzemljen kako bi se obezbedila zaštita od naponskog i izvornog statičkog elektriciteta.
  16. **Kada ga dugo ne koristite** – napajanje uređaja trebalo bi da bude isključeno iz utičnice kada se ne koristi duži vremenski period.
  17. **Upad predmeta i tečnosti** – Treba paziti da predmeti ne upadnu, a tečnost ne prospe u kućište kroz otvore.
  18. **Kada je potreban servis** – Aparat treba da servisira kvalifikovano servisno osoblje kada su:
    - Kabal za struju ili utikač oštećeni.
    - Kada predmeti upadnu ili kada se tečnost prolje po uređaju
    - Kada je aparat izložen kiši
    - Kada aparat ne radi normalno ili pokazuje značajnu promenu u radu.
  19. Ventilacioni otvori ne bi trebalo da budu pokriveni predmetima, kao sto su novine, tkanine, zavese itd.
  20. Izvore otvorenog plamena, kao sto su upaljene sveće, ne bi trebalo da stoje na aparatu
  21. Aparat će biti povezan sa mrežnom utičnicom sa zaštitnim uzemljenjem. Utičnica ili nastavak za prekid napajanja trebaju da budu lako dostupni.



#### UPOZORENJE

Visok napon se koristi u napajanju ovog uređaja. Ne uklanjajte zadnji poklopac. Obratite se kvalifikovanoj osobi za obavljanje servisa.




#### UPOZORENJE

Da biste sprečili požar ili strujni udar, nemojte izlagati uređaj kiši ili vlazi.



#### UPOZORENJE

Nemojte ispuštati i gurati predmete u kućište TV-a ili u otvore. Nikada nemojte prosipati tečnost na TV prijemnik.

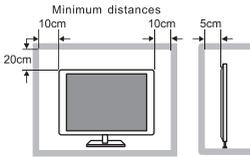

#### OPREZ

Ako televizor treba da se ugradi u zatvoreni odeljak ili na sličan način, morate se pridržavati dela uputstva o minimalnim udaljenostima. Toplota može smanjiti životni vek televizora, a takođe može biti povećan rizik od požara.



#### OPREZ

Nikada nemojte da stanete ili se oslonite ili gurnete uređaj ili stalak na kom se uređaj nalazi. Treba obratiti posebnu pažnju na decu.




#### OPREZ

Ne stavljajte uređaj na nestabilno postolje, policu ili sto. Usled pada može doći do ozbiljne povrede lica ili štete na televizoru.



#### OPREZ

Kada se proizvod ne koristi duži vremenski period, preporučljivo je da isključite mrežni kabl iz utičnice .

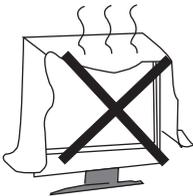

#### OPREZ

Izbegavajte izlaganje uređaja direktnom suncu i drugim izvorima toplote. Ne postavljajte televizor na druge proizvode koji emituju toplotu. Na primer: Video uređaj, audio pojačala. Ne blokiraj otvore za ventilaciju u zadnjem poklopcu. Ventilacija je od suštinskog značaja za sprečavanje električnih kvarova. Ne stavljajte kabl za napajanje ispod uređaja.




#### OPREZ



Panel (ekran) koji se koristi u ovom proizvodu napravljen je od stakla. Može se slomiti padom uređaja ili nasilnim udarcem. Treba oprezno raditi sa razbijenim staklom ekrana.





- Postavite TV na stabilnu, ravnu površinu, ostavljajući najmanje 10 cm oko njega i 30 cm između vrha uređaja i zida ili ormarića. Da biste sprečili da se televizor prevrne kada ga gurnete, postavite ga blizu zida.

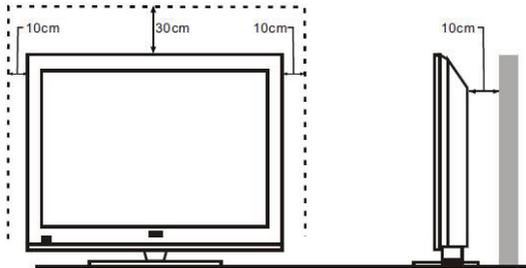

- Umesto da držite gornju stranu televizora kada ga okrećete, trebalo bi da držite donju stranu.

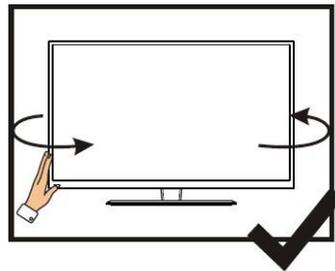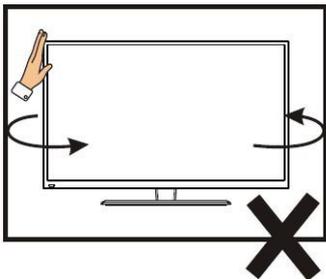

- Izbegavajte rukovanje televizorom samo jednom rukom kada ga podižete; umesto toga, koristite dve ruke.

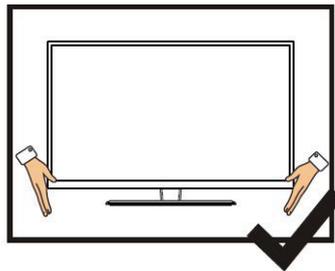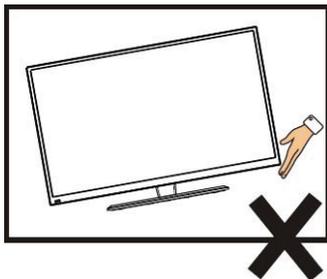

## SADRŽAJ

|   |    |
|---|----|
| 1. Priključivanje i priprema TV-a.....                      | 2  |
| 1.1 Dodatna oprema.....                                     | 2  |
| 1.2 Postavljanje postolja.....                              | 2  |
| 1.3 Tasteri i interfejsi.....                               | 3  |
| 1.4 Daljinski upravljač.....                                | 4  |
| 1.5 Postavljanje baterija.....                              | 5  |
| 2. Osnovni rad.....   | 5  |
| 2.1 UKLJUČIVANJE/ ISKLJUČIVANJE NAPAJANJA (opcionarno)..... | 5  |
| 2.2 Postavljanje.....                                       | 5  |
| 3. Početak s webOS TV-om.....                               | 6  |
| 4. Podešavanja.....   | 7  |
| 5. Tehničke specifikacije.....                              | 19 |
| 6. Format ulaznog signala.....                              | 20 |
| 7. Jednostavna rešenja problema.....                        | 21 |

# FOX LED TV

---


## 1 Priključivanje i priprema TV-a

### 1.1 Dodatna oprema

- ✧ Uputstvo za korišćenje
- ✧ Daljinsko upravljanje
- ✧ Baterija (UM-4/R03P/AAA)
- ✧ Komplet za montiranje na zid (unapred montiran) (opciono)

### 1.2 Postavljanje postolja



(Molimo pogledajte stvarni objekat za detalje o fizičkoj strukturi.)

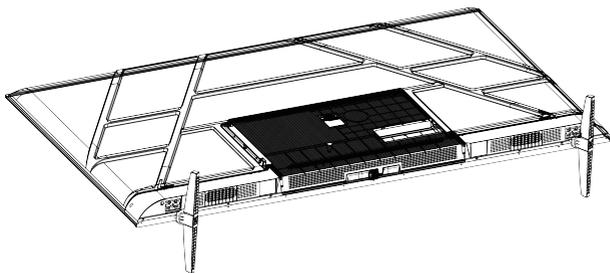


- 1) Postavite TV na mekanu tkaninu ili meke jastuke na sto tako da prednja strana bude okrenuta nadole.
- 2) Stavite postolje u donje ležište televizora.
- 3) Zašrafite utičnice sa šrafovim na mestu, a zatim ih zategnite.

# FOX LED TV


## 1.3 Tasteri i interfejsi

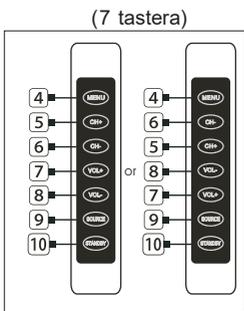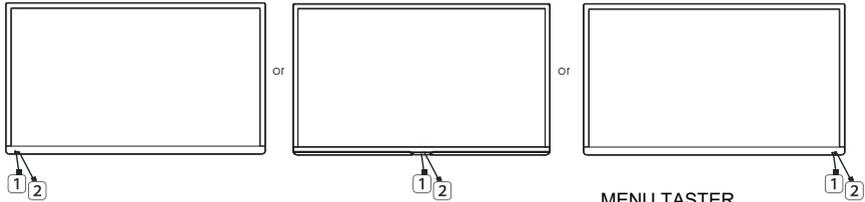

(7 tastera)


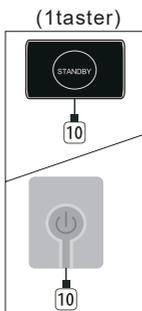


(1 taster)

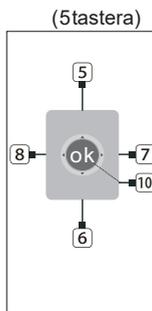

(5 tastera)

- 1 PLASTIČNO SOČIVO IR SENZORA
- 2 INDIKATOR NAPAJANJA
- 3 ZVUČNIK
- 4 MENU TASTER
- 5 PROGRAM "+" TASTER
- 6 PROGRAM "+" TASTER
- 7 VOLUME "+" TASTER
- 8 VOLUME "-" TASTER
- 9 SOURCE TASTER
- 10 TASTER PRIPRAVNOSTI
- 11 ULAZ ZA NAPAJANJE

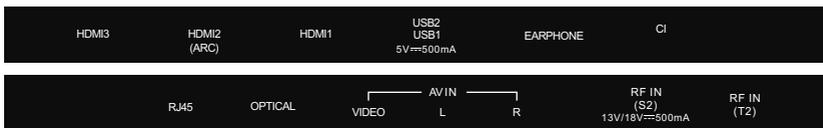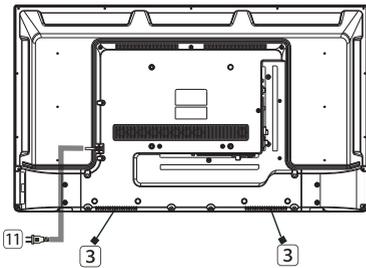

# FOX LED TV

## 1.4 Daljinski upravljač



Molimo Vas da duže pritisnete taster kada vidite znak #. (3-4 sekunde).

**POWER:** UKLJUČENO/ISKLJUČENO.

**(STB POWER)** Možete da uključite/isključite set-top box dekoder.

**0-9:** Taster za izbor brojeva.

**0#:** Pojavio se ekran za brzo uređivanje programi **BRZI PRISTUP.**

**LIST:** Provera sačuvanih programi.

**...**: On prikazuje dodatne tastere na daljinskom upravljaču.

**...#:** Opisuje sadržaj ekrana.

: Podešava nivo jačine zvuka.

: Potvrdite izbor u polju za isključivanje zvuka sa TV-a.

#: Unesite meni pristupačnosti.

: Program možete promeniti.

Ispitajte predloženi sadržaj. (U zavisnosti od zemlje, usluge preporuke mogu, ali i ne moraju biti ponuđene.)

: Da biste koristili funkciju prepoznavanja govora, pritisnite i držite taster dok govorite.

: Prikazuje meni Početni meni.

#: Prikazuje listu koja je prethodno korišćena.

: Unosi meni "Brza podešavanja".

#: Unosi meni "Sva podešavanja".

**Wheel (OK)**: Da biste izabrali meni, pritisnite taster Točak u centru. Taster na točkovima se koristi za promenu kanala.

**(up/down)** Pomerajte se po meniju pritiskom na taster nagore, **left/right** nadole, levo ili desno. Ako pritisnete taster dok je pokazivač aktivan, kursor će nestati sa ekrana i Magični daljinski upravljač će se ponašati kao svaki drugi daljinski upravljač. Protresite magični daljinski upravljač levo i desno da ponovo prikažete pokazivač na ekranu.

: Premeštanje na prethodni korak

#: Zatvara meni.

**GUIDE** Možete proveriti program.

**NETFLIX** idi na Netfliks.

: Bira izvor unosa signala.

#: Ulazimo u kućnu kontrolnu tablu.

**prime video** idite na prime video.

Oni pristupaju posebnim funkcijama u nekim menijima.

**MOVIES:** Pretraži filmove.

: Reprodukuj.

: Puziraj.

# FOX LED TV

---

## 1.5 Instalacija baterija



1 Zadnji poklopac daljinskog upravljača treba da bude otvoren.

2 Stavite dve (AA) 1.5V baterije u daljinski upravljač.

Uverite se da su baterije pravilno polarizovane.

3 Zatvorite zadnji poklopac.

Izvadite baterije iz daljinskog upravljača ako ga neko vreme ne koristite.

Izvršite sledeće provere ako daljinski upravljač ne funkcioniše ispravno.

- Proverite da li je TV u programu.

- Proverite da li je polaritet baterija odgovarajući.

- Proverite da li baterije nisu iscrpljene.

- Uverite se da je napajanje u ispravnom stanju ili da je kabl za napajanje pravilno povezan.

- Uverite se da u blizini nema neobičnih neonskih ili fluorescentnih svetla.

## 2 Osnovni rad

### 2.1 Uključivanje/isključivanje (opciono)

- Povežite kabl za napajanje sa **AC u lazni** .

Priključite kabl za napajanje u odgovarajuću utičnicu.

- Pritisnite **taster d** a uključite TV, zatim pritisnite **Prekidač p** onovo da isključite TV.

Beleška: Nemojte odmah ponovo da otvarate prekidač za napajanje nakon što isključite TV; umesto toga, sačekajte jedan minut pre nego što ponovo otvorite prekidač za napajanje.

### 2.2 Podešavanje režima pripravnosti

- Pritisnite (  ) taster da biste uključili uređaj.

- Pritisnite (  ) taster ponovo da vratite ekran u režim pripravnosti. Indikator napajanja svetli crveno.

- Uverite se da Vaš TV nije ostavljen u režimu pripravnosti duži vremenski period.

### 2.3 Izbor režima unosa

Ovaj uređaj sadrži više modova izvora ulaznog signala; pritisnite taster **Source** više puta da biste izabrali željeni izvor ulaznog signala.

## 3. Početak s webOS TV

### Početna stranica

#### Osobine početne stranice webOS TV

Početnu stranicu možete da otvorite pritiskom na taster  na svom daljinskom upravljaču. Okrećite taster točak (OK) na daljinskom upravljaču da biste pregledali meni. Možete da otvorite aplikacije i sadržaj ili da koristite razne osobine pametnog TV-a.

- Standardni daljinski upravljač Vam uvek dozvoljava da pregledate meni s  tasterima.



- ① Pokrenite **pretragu**.  
Da biste videli detalje kliknite na **Aplikacije i sadržaji Pretraga sadržaja** u **Korisnički vodič**.
  - ② Vraća se na nedavno korišćeni TV ili vanjski ulaz.
  - ③ Možete da pokrenete, pomerite i brišete aplikacije postavljene na svom TV-u.
- **Lista aplikacija** se automatski pokazuje na ekranu svaki put kada se TV uključi. Za promenu prikaza početnog ekrana promenite podešavanja.

Automatsko pokretanje Početne stranice u  ->  -> **Opšte->Sistem->Dodatna podešavanja->Podešavanja početne stranice**.

- Dostupnost sadržaja i usluga i pristup njima u uređaju predmet su promene u bilo koje vreme bez prethodne obavesti.
- Dostupne osobine variraju u zavisnosti od regije ili usluge.

## 4. PODEŠAVANJA.

### Brza podešavanja

Da biste brzo koristili funkcije podešavanja.

Postavite kontrole brzo i jednostavno poput **režim slike**, **izlaz zvuka**, **Optimizator zvuka** itd.

Pritisnite taster  na daljinskom upravljaču.



- ① Možete da postavite **režim slike**.
  - ② Možete da postavite **režim zvuka**.
  - ③ Možete da odaberete **Izbacivanje zvuka**.
  - ④ Usmerava do podešavanja **Optimizator igre**.
  - ⑤ Usmerava do podešavanja **Mreže**.
  - ⑥ Možete da postavite više opcija.
- Možete i dugo da pritisnete taster  daljinskog upravljača za direktno kontrolisanje svih podešavanja.
  - ⑦ Možete da dodate/ obrišete stavke brzih podešavanja ili promenite njihov redosled.
  - Pomaknite se do stavke koja može da se postavi, pritisnite taster **Točak (OK)** jednom a zatim pritisnite i držite taster **Točak (OK)** za prelazak na meni.
  - Podešavanja koje mogu da se konfigurišu razlikuju se zavisno od modela.

## PODEŠAVANJA.

### Picture (Slika)

#### Režim rada Slika

Izbor režima slike

  -> **Slika** -> **Odaberite režim**

Odaberite režim slike koji najbolje odgovara vašoj okolini pregledanja, preferencijama ili vrsti video zapisa.

Odaberite režim slike Podešavanjem i postavljanjem svake stavke u više detalja na osnovu načina, vaš video se bolje optimizuje .

- Izbor koje mogu da se konfiguriraju razlikuju se zavisno od modela.

#### Format prikaza

Postavljanje veličine ekrana

  -> **Slika** -> **Odnos stranica slike**-> **Izbor korisnika**

Možete da promenite veličinu ekrana u skladu s vrstom sadržaja koji gledate.

#### Napredna podešavanja

Osvetljenje

  -> **Slika** -> **Napredna podešavanja** -> **Svetlina**

Možete da podesite svetlinu celog ekrana.

Boja

  -> **Slika** -> **Napredna podešavanja** -> **Boja**

Jasnoća

  -> **Slika** -> **Napredna podešavanja** -> **Jasnoća**

Možete da podesite kontrast slike da bi se pokazala jasnije.

Primenite na svim ulazima

  -> **Slika** -> **Napredna podešavanja**-> **Primeniti na sve ulaze**

Podešavanja koja navodite odnose se samo na trenutno odabrani način unosa.

Da biste primenili postavke trenutne slike na sve načine unosa, odaberite **Primeniti na sve unose**.

Resetovanje

  -> **Slika** -> **Napredna podešavanja** -> **Resetovati**

Ako želite da resetujete postavke slike na fabričke zadane postavke nakon konfigurisanja postavki slike, izaberite resetovanje za svaki režim slike.

## PODEŠAVANJA

### Zvuk

#### Režim Zvuk

 ->  -> Zvuk -> Odaberite režim

Možete da postavite najpogodniji režim zvuka za svaki žanr.

#### Izlaz zvuka

Koristite TV zvučnik

 ->  -> Zvuk -> Izlaz zvuka -> Koristite zvučnik TV-a

Audio se pokreće putem unutrašnjih zvučnika TV-a.

Koristite ižičeni zvučnik

 ->  -> Zvuk -> Izlaz zvuka -> Koristite bežični zvučnik

Koristite bežični zvučnik

 ->  -> Zvuk -> Izlaz zvuka -> Koristite bežični zvučnik

#### Bluetooth uređaj

Bežično povežite Bluetooth audio uređaj da biste uživali u zvuku TV-a.

Pogledajte korisnički priručnik Bluetooth audio uređaja za detalje o tome kako da povežete i koristite uređaj.

- Pritisnite  da biste pregledali uparene uređaje ili uređaje koji mogu da se povežu da biste uparili bilo koji od njih.
- Za neke Bluetooth uređaje, jačina uređaja može da se kontroliše odabirom iz liste povezivanja.
- Uređaji za sinhronizaciju zvuka LG automatski će pokušati da povežu na nedavno korišćene uređaje kada uključite TV.
- Mi preporučujemo da povežete LG audio uređaj koji podržava sinhronizaciju zvuka LG, upotrebom LG TV načina ili načina sinhronizacije zvuka LG na uređaju.
- Neki modeli nisu podržani.
- Zvučni kodek koji može da se koristi putem Bluetooth-a je SBC/aptX™.
- Ako se uređaj ne poveže, proverite napajanje uređaja na koji trebate da uparite i proverite da li audio uređaj radi ispravno.
- U zavisnosti od vrste Bluetooth uređaja, uređaj se možda neće ispravno povezati ili može da se dogodi neuobičajeno ponašanje kao što je nesinhronizovani video i audio.
- Slušalice samo za mobilni telefon možda neće raditi.
- Zvuk može da se prekida ili kvalitet zvuka može da bude lošiji ako:
  - Je Bluetooth uređaj predaleko od TV-a;
  - Postoje prepreke između Bluetooth uređaja i TV-a; ili
  - Se koriste zajedno s radio opremom poput mikrotalasne peći ili bežičnog LAN.
- Ako je Slika-> Izaberi režim postavljeno na Optimizator igre a Izlaz zvuka je postavljeno na Bluetooth uređaj, Slika-> Odaberite režim se menja u Standard.
- Ako i dalje imate problema, mi preporučujemo da koristite ožičenu konekciju. (Optički digitalni, HDMI (eARC/ARC) priključak.

## PODEŠAVANJA

### Mobilni uređaj

Ako postavite aplikaciju LG ThinQ na pametni uređaj i povežete je na svoj TV, možete da koristite uređaj kao zvučnik za TV.

Koristite eksterne zvučnike sa zvučnikom za TV

 ->  -> **Zvuk** -> **Izlaz zvuka**-> **Koristite eksterne zvučnike sa zvučnikom za TV**

Zvuk može da se pokrene putem više uređaja istovremeno.

### **Napredne podešavanja**

Balans

 ->  -> **Zvuk** -> **Napredna podešavanja** -> **Balans**

Možete da podesite jačinu levog i desnog zvučnika.

- Ove postavke dostupne su samo za unutrašnji zvučnik TV-a.

Ekvalizator

 ->  -> **Zvuk** -> **Napredna podešavanja** -> **Ekvalizator**

Zvuk možete da postavite povećanjem ili smanjenjem izlaza specifičnog opsega frekvencije signala glasa.

- Ova se opcija može omogućiti ako se **Zvuk** -> **Izaberi režim** postavi na **Standard**.
- Ova podešavanja dostupne su samo za unutrašnji zvučnik TV-a.

Primenite na SVIM unosima

 ->  -> **Zvuk** -> **Napredna podešavanja** -> **Primeniti na sve unose**

Podešavanja koja navodite odnose se samo na trenutno izabrani režim unosa.

Da biste primenili podešavanja trenutnog zvuka na sve načine unosa, izaberite **Primeniti na sve unose**.

Resetovanje

 ->  -> **Zvuk** -> **Napredna podešavanja** -> **Resetovati**

Vraća detaljna podešavanja efekata za režim zvuka **Standard** na početna podešavanja.

- Ova podešavanja dostupna su samo za unutrašnji zvučnik TV-a.

Vrsta podešavanja

Instalacije

 ->  -> **Zvuk** -> **Napredna podešavanja** -> **Vrsta instalacije**

Ovaj način optimizuje zvuk na osnovu postavljanja TV-a.

Automatsko podešavanje jačine zvuka

 ->  -> **Zvuk** -> **Napredna podešavanja** -> **Automatsko podešavanje jačine zvuka**

Ako je postavljeno na **Uključeno**, jačina zvuka će se automatski postaviti na isti nivo za svaki sadržaj koji gledate.

- Ova podešavanja dostupna su samo za unutrašnji zvučnik TV-a.

Podešavanja DTV zvuka

 ->  -> **Zvuk** -> **Napredna podešavanja** -> **Podešavanje DTV zvuka**

## PODEŠAVANJA.

Kada različite vrste zvuka postoje u ulaznom signalu, ova vam funkcija omogućava da izaberete vrstu zvuka koju želite.

Ako postavite na **automatski**, redosled pretrage je AC4 → HE-AAC → Dolby Digital Plus → Dolby Digital → MPEG i izlaz se proizvodi u prvom audio formatu koji se pronađe.

- Sledeći redosled pretrage može da se promeni u zavisnosti od zemlje: AC4 → HE-AAC → Dolby Digital Plus → Dolby Digital → MPEG.
- Ako odabrani format zvuka nije podržan, drugi format zvuka može da se koristi za izlaz.
- Neki redosledi nisu podržani.

Uskladite ekran i zvuk

  -> **Zvuk** -> **Napredna podešavanja** -> **Uskladite ekran i zvuk**

Podešava sinhronizaciju zvuka iz zvučnika koji radi.

Izaberite HDMI Audio format ulaza

  -> **Zvuk** -> **Napredna podešavanja** -> **Izaberi HDMI Audio format ulaza**

Možete da postavite audio format za svaki HDMI ulaz.

U slučaju priključivanja na uređaje ili sadržaj koji podržavaju najnoviju tehnologiju okružujućeg zvuka, podešavanje na **Bitstream** omogućiće Vam slušanje zvuka pri željenom kvalitetu.

Kada zvuk koji se dostavlja putem HDMI priključka nije sinhronizovan, postavite ga na **PCM**.

LG sinhronizacija zvuka

  -> **Zvuk** -> **Napredna podešavanja** -> **LG sinhronizacija zvuka**

Povežite uređaj LG sinhronizacija zvuka na optički, digitalni ulazni priključak i postavite **izlaz zvuka** na **Uređaj za optički izlaz**.

Postavljanjem ove osobine na **Uključeno** možete da podesite jačinu povezanog LG uređaja za sinhronizaciju zvuka koristeći daljinski upravljač TV-a.

- Ako je osobina automatskog napajanja zvučne kartice koja podržava LG Sound Sync postavljena na Uključeno, zvučna kartica će se uključiti ili isključiti zajedno kada se TV uključi ili isključi.

Digitalni Izlaz zvuka

  -> **Zvuk** -> **Napredna podešavanja** -> **Digitalno izlaz zvuka**

Možete da konfigurirate podešavanje **Digitalni Izlaz zvuka**.

eARC podrška

  -> **Zvuk** -> **Napredna podešavanja** -> **eARC podrška**

eARC je tehnologija koja može poslati i primiti više informacija o zvuku brž zahvaljujući široj propusnosti od one kod konvencionalnog ARC. Možete da uživajte u kvalitetnijem zvuku TV-a nego u slučaju ARC putem povezanog audio uređaja.

### OPŠTE

#### AI Usluga

 ->  -> Opšte -> AI usluga

#### AI Preporuka

 ->  -> Opšte -> AI usluga -> AI preporuke

Možete da dobijete poruke preporuke sadržaja u skladu sa svojom istorijom pregleda sadržaja i istorijom upotrebe aplikacije.

#### Optimizator za igre

Postavlja osobine za sveobuhvatno iskustvo kada igrate na konzoli.

- 1) Pritisnite taster  na daljinskom upravljaču.
  - 2) Odaberite **Optimizator igre**.
  - 3) Odabirom **Uključeno** uključujete sva povezana podešavanja.
- Radi samo s HDMI ulazima.
  - Ako postavite  ->  -> **Slika** -> **Izaberi režim** na način koji nije **Optimizator igre**, neka podešavanja u **Optimizator igre** ne mogu da se postave.
  - Ako ovu osobinu postavite na **Uključeno**, ne možete da promenite neka podešavanja video zapisa.
  - Kada je **Optimizator igre** postavljen na **Uključeno**, nestanak zvuka se događa ako postavite **izlaz zvuka** na **Bluetooth uređaj/Uređaj za optički izlaz/HDMI(ARC) uređaj**.

Prebacite na **Koristite TV zvučnik** ili promenite  ->  -> **Zvuk** -> **Napredna podešavanja** -> **izaberi audio format HDMI ulaza** na PCM.

- Podešavanja koja mogu da se konfigurišu razlikuju se ovisno o modelu.

### Kanali

#### Podešavanje kanala

 ->  -> Opšte -> Kanali -> Podešavanje kanala

#### Automatsko podešavanje

 ->  -> Opšte -> Kanali -> Podešavanje kanala -> Automatsko podešavanje

Automatski podešava kanale.

#### Ručno podešavanje

 ->  -> Opšte -> Kanali -> Podešavanje kanala -> Ručno podešavanje

Ova funkcija je za ručnu pretragu i memorisanje kanala.

Za digitalno emitovanje možete da proverite jačinu signala i kvalitet signala

## PODEŠAVANJA.

### Režim kanala

  -> **Uopšteno**-> Programi -> Podešavanje kanala -> Program Način Odaberite načine podešavanja programa.

#### Ažuriranje popisa programa

  -> **Opšte**-> Kanali -> Podešavanje kanala -> Ažuriranje liste kanala

Ako je režim kanala postavljen na kabl.

Ažurira promenjene informacije o listi programa na osnovu okolnosti emitovanja u zemlji.

Nakon ažuriranja, Lista programa može da se promeni. Ako ne želite, odaberite Isključiti.

Neki modeli ne podržavaju ovu funkciju.

### Test signala

  -> **Opšte** -> Kanali -> Podešavanje kanala -> Testiranje signala

Pokazuje MUX, Informacije o usluzi itd.

- Test signala je dostupan samo u režimu Antena ili Kabl.
- Neki modeli ne podržavaju ovu funkciju.

#### Upravljanje kanalima

  -> **Opšte**-> Kanali-> **Alatka za upravljanje kanalima**

#### Uredi u svim kanalima

  -> **Opšte**-> Kanali -> **Alatka za upravljanje kanalima** -> **Uredi u svim kanalima**

Odabrane kanale možete da zaključate ili otključate iz svih memorisanih kanala ili ih možete preskočiti prilikom promene programa.

#### Urediti u omiljenima

  -> **Opšte** -> Kanali -> **Alatke za upravljanje kanalima**->**Uredi u omiljenima**

Željene kanale možete da dodate/brišete u omiljene kanale/iz omiljenih kanala, menjate njihov položaj itd.

### CI Informacije

  -> **Opšte** -> Kanali ->**CI Informacije**

Ova vam funkcija omogućuje gledanje nekih kodiranih usluga (usluge koje se plaćaju).

#### Kopiraj kanale

  -> **Opšte** -> Kanali ->**Kopiraj kanale**

Izvezite informacije o listi programa Vašeg TV-a na povezani USB uređaj ili uvezite informacije o listi programa Vašeg TV-a s povezanog USB uređaja.

- Za satelitske modele

# FOX LED TV

---

HbbTV

  [Opšte](#) -> [Kanali](#)->[HbbTV](#)

HbbTV (Hybrid Broadcast Broadband TV) novi je standard emitovanja koji omogućuje integraciju ili povezivanje usluga tipa super-teleteksta, koje se isporučuju emitovanim TV kanalom, s online uslugama isporučenim putem širokopojasne veze na povezani pametni TV.

- Neki modeli ne podržavaju ovu funkciju.

## Uređaji

Upravljanje televizorom

  [Opšte](#)-> [Uređaji](#)-> [Upravljanje televizorom](#)

Esterni uređaj

  [Opšte](#) -> [Uređaji](#) -> [Eksterni uređaji](#)

Možete da podesite pametni uređaj povezan s televizorom za upravljanje televizorom ili upravljanje istorijom povezivanja.

- Podešavanja koje mogu da se konfigurišu razlikuju se ovisno o modelu.

### Poveži Bluetooth kontroler

Možete da povežete i koristite uređaje poput tastature s omogućenim Bluetoothom ili konzolom sa svojim TV-om.

Uključite uređaj, postavite ga na režim uparivanja a zatim kliknite [Povezati se](#) na ekranu svog TV-a. Kada je uređaj kojeg ste pre povezali uključen, automatski se povezuje na Vaš TV. Za isključivanje postojeće konekcije kliknite [Isključi](#).

### Podešavanje univerzalnog daljinskog upravljača

Ako postavite univerzalni daljinski, možete da kontrolišete periferne uređaje povezane s TV-om s magičnim daljinskim umesto njihovih vlastitih daljinskih upravljača.

Za više informacija vidi [Kako da radite s TV-om](#)-> [Upotreba univerzalnog daljinskog u Korisnički vodič](#).

### Uključivanje televizora pomoću mobilnog uređaja

Ako je opcija [Uključi putem bežične mreže](#) ili [Uključi putem Bluetooth-a](#) postavljena na [Uključeno](#), možete da uključite TV pomoću aplikacije koja podržava [TV uključen s mobilnog uređaja](#).

### Obrišite istoriju povezivanja

Možete da obrišete istoriju povezivanja uređaja koji je povezan s TV-om putem bežične mreže.

HDMI podešavanja

  [opšte](#)-> [Uređaji](#)-> [HDMI podešavanja](#)

Možete da primenite podešavanja da biste obezbedili jasnu sliku i laku kontrolu za svoje uređaje povezane s HDMI.

# FOX LED TV

---

## Mreža

Postavljanje ožičene mreže

 ->  -> **Opšte-> Mreža-> Žičana veza(Ethernet)**

Ako ruter spojen na mrežu podržava osobinu DHCP, povezivanjem TV-a i rutera žicom automatski će se povezati s mrežom. Ako automatsko postavljanje nije podržano, možete odabrati **Uredi** za ručno postavljanje mrežne veze.

Postavljanje bežične mreže

 ->  -> **Opšte -> Mreža-> WiFi veza**

Ako ste televizor postavili za bežičnu mrežu, možete da proverite i priključite se na dostupne bežične internet mreže. Izaberite svoj ruter bežične mreže za povezivanje.

Za detaljnije podešavanje odaberite **Druge mrežne podešavanja**.

## **Sistem**

Jezik

 ->  -> **Opšte-> Sistem-> Jezik**

Možete da odaberete jezik menija prikazan na ekranu i audio jezik digitalnog emitovanja

Lokacija

 ->  -> **Opšte-> Sistem-> Lokacija**

Možete da promenite podešavanja lokacije svog

Pametnog TV-a.

Vreme i tajmer

 ->  -> **Uopšteno-> Sistem-> Vreme i tajmer**

Možete da proverite vreme ili zakazujete uključivanje/isključivanje Vašeg televizora.

Bezbednost

 ->  -> **Opšte-> Sistem-> Bezbednost**

Možete da stavite ključ na TV emitovanja ili aplikacije.

Postavite ga na **Uključeno** za primenu ključa.

# FOX LED TV

## PODEŠAVANJE.

### Zaključavanje TV kanala

Ova funkcija radi prema informacijama sa stanice za emitovanje. Stoga ako signal ima netačne informacije, ova funkcija ne radi ispravno.

Sprečava decu da gledaju određene TV kanale za odrasle, u skladu s postavljenim ograničenjem gledanosti. Unesite lozinku za gledanje blokiranog kanala. Ocenjivanje se razlikuje od države do države.

- Podržano samo u digitalnom režimu.
- Neki modeli ne podržavaju ovu funkciju.

### Zaključavanje kanala

Blokira kanale koji sadrže neprikladne sadržaje za decu. Kanali se mogu odabrati, ali ekran je prazan i zvuk je isključen. Za gledanje zaključanog programa unesite lozinku.

### Zaključavanje aplikacije

Aplikaciju možete otključati ili zaključati.

Funkcija zaključavanja nije odmah dostupna za trenutno pokrenutu aplikaciju.

### Ulazna zaključavanja

Ulaze signala možete otključati ili zaključati.

### Resetovanje lozinke

Postavite ili promenite lozinku za TV.

Zadana lozinka je postavljena na "0000".

Kada je, kao zemlja, odabrana Francuska, Norveška ili Belgija, lozinka nije "0000" već je "1234".

### Resetovanje izgubljene lozinke

Ako zaboravite lozinku koju ste podesili, možete da poništite loziku na sledeći način:

① Pritisnite taster  na daljinskom upravljaču.

② Odaberite  Opšta bezbednost sistema.

③ Pritisnite  (Kanali)   (Kanali)   (Kanali)   (Kanali)  na

daljinskom upravljaču. Pojaviće se prozor za unos glavne lozinke.

④ Unesite brojeve "0313" u prozor za unos glavne lozinke, zatim pritisnite **OK**. Lozinka će biti resetovana.

LG nalog

Možete da se prijavite za LG članstvo i prijavite se sa svojom adresom e-pošte u [LG nalog](#).

Za više informacija vidi [Početak s webOS TV](#) -> [Upravljanje vašim LG računom](#) u [Korisnički vodič](#).

Dodatna podešavanja

Obaveštenja

 ->  -> **Opšte**-> **Sistem**-> **Dodatna podešavanja** -> **Obaveštenja**

# FOX LED TV

## PODEŠAVANJA.

Možete da pregledate ili obrišete obaveštenja iz TV aplikacija i usluga. Za obaveštenja koje podržavaju prečice možete da idete direktno na tu aplikaciju ili internet stranicu.

Početna podešavanja

 ->  -> **Opšte-> Sistem-> Dodatna podešavanja -> Početna podešavanja**

Osvetljenje u režimu mirovnja

 ->  -> **Opšte-> Sistem-> Dodatna podešavanja -> Osvetljenje u režimu mirovanja**

Osvetljenje u režimu mirovanja možete da uključite ili isključite.

- Neki modeli ne podržavaju ovu funkciju.

Opcije pokazivača

 ->  -> **Opšte-> Sistem-> Dodana podešavanja -> Opcije pokazivača**

Možete da postavite brzinu i veličinu pokazivača koje želite dok je na ekranu.

Reklama

 ->  -> **Opšte-> Sistem-> Dodatna podešavanja -> Reklame**

Ako je Vaš TV priključen na internet, webOS može da koristi kolačić za ograničavanje učestalosti da bi pratio koliko je puta oglas prikazan na Vašem TV-u.

Ove se informacije koriste za ograničavanje broja prikazivanja istog oglasa. Možete da izbrišete ovaj kolačić ili ga uključite ili isključite u bilo kojem trenutku tako da odete na podešavanja za **reklamu** na svom TV-u.

Uz ovaj kolačić nisu vezani nikakvi podaci koji bi mogli da identifikuju lice.

Live Plus

**Live Plus** je usluga koja daje različite informacije o kanalu kojeg gledate.

Da biste videli detalje, Kliknite na **Making the Most of Smart TV (Najbolje od pametnog TV-a)** ->

**Live Plus** u **Korisnički vodič**.

- Neki modeli ne podržavaju ovu funkciju.

Pomoć za podešavanje

 ->  -> **Opšte-> Sistem-> Dodatna podešavanja -> Pomoć za podešavanje**

Kada se postavi na **Uključeno**, možete da dobijete pomoć za odabrane stavke kada navigirate kroz meni podešavanja.

Postavite identifikaciju

 ->  -> **Uopšteno-> Sistem-> Dodatna podešavanja-> Postavite identifikaciju**

Možete da postavite broj (identifikacija) za upravljanje više TV-a.

- Ova osobina je za administratore. Ne preporučuje se za korišćenje u uobičajenom kućnom ambijentu.

Resetovati na početne postavke

 ->  -> **Uopšteno -> Sistem-> Resetovati na početna podešavanja**

Vratite TV na početna podešavanja. Nakon resetovanja, TV će se automatski isključiti i uključiti.

### Podrška

#### Ažuriranje softvera

 ->  -> Podrška-> Ažuriranje softvera

Koristi ažuriranje softvera za proveru i instalaciju najnovije verzije.

#### Automatsko ažuriranje

Kada se postavi na Uključeno, ažuriranja se automatski rade bez odvojenog postupka potvrde osim za neka važna ažuriranja.

#### Proverite da li ima ažuriranja

Prilikom provere najnovije verzije ažuriranja, možete da izvršite ažuriranja samo ako je dostupna datoteka ažuriranja novije verzije. Televizor automatski proverava Vašu verziju softvera, ali, ako je potrebno, možete da izvršite ručnu proveru.

- Podešavanja koja mogu da se konfigurišu razlikuju se ovisno o modelu.
- Najnovija verzija može da se dobije putem digitalnih signala emitovanja ili internet konekcija.
- Promena kanala kada preuzimate softver putem digitalnog signala emitovanja prekida postupak preuzimanja. Povratak na početni program dozvoljava da se preuzimanje nastavi.
- Ako softver nije ažuriran, neke funkcije neće ispravno raditi.
- U nekim zemljama, **Automatsko ažuriranje** se ne prikazuje ako niste povezani na internet.

#### Privatnost i uslovi

 ->  -> Privatnost -> Uslovi

#### Ugovori sa korisnikom

Ovo su uslovi koji se odnose na upotrebu usluge Pametna TV i zaštitu privatnosti.

#### Pravno obaveštenje

To su pravna obaveštenja za usluge koje se pružaju putem TV-a.

#### Obaveštenje o softveru otvorenog koda

Možete da pregledate uputstva za svako podešavanje.

# FOX LED TV

## 5. Tehničke specifikacije

|                               |   |                |
|-------------------------------|---|----------------|
| Model proizvoda               | 50WOS640E   |                |
| Veličina ekrana               | 50" dijagonalno   |                |
| Format prikaza                | 16:9  |                |
| Napajanje                     | AC 100-240V~,50/60Hz  |                |
| Potrošnja električne energije | 120W  |                |
| TV Sistem                     | PAL B/G D/K I,SECAM B/G D/K DVB-T/T2/C/S/S2(s/s2 opcija)<br>(U nekim zemljama ili područjima nema DVB-C signala.) |                |
| Izlazna audio snaga (interna) | 8Wx2  |                |
| Ulazni terminal               | Ulaz antene   | X2 (S2 opcija) |
|                               | USB ulaz  | x 2            |
|                               | HDMI ulaz   | x 3            |
|                               | VGA ulaz  | NE             |
|                               | PC AUDIO Ulaz   | NE             |
|                               | Audio Ulaz ( L/R)   | x 1            |
|                               | Video Ulaz  | x 1            |
|                               | YPbPr Ulaz  | NE             |
|                               | RJ45 Ulaz   | x 1            |
|                               | CI kartica In   | x 1            |
|                               | SCART In/Izlaz  | NE             |
|                               | DC In (12V)   | NE             |
| Izlazni terminal              | Slušalice   | x 1            |
|                               | Audio Linija Izvan ( L/R)   | NE             |
|                               | Video izlaz   | NE             |
|                               | Optičko   | x 1            |
| Koaksijalni izlaz             | NE  |                |
| Radna temperatura             | 0°C~40°C  |                |
| Radna vlažnost                | 20% ~ 80% bez kondenzacije  |                |

*Zabeleška: Gore prikazane specifikacije mogu da se promene bez prethodne obavesti radi poboljšanja kvaliteta.*



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

## 6. Podrška Signalni načini

### A HDMI režim

| Rezolucija       | Horizontalna frekvencija (Khz) | Vertikalna frekvencija (Hz) |
|------------------|--------------------------------|-----------------------------|
| 480p             | 31.468                         | 59.94                       |
| 576p             | 31.25                          | 50.00                       |
| 720P             | 45.00                          | 60.00                       |
| 1080i            | 33.75                          | 60.00                       |
| 1080P(1920x1080) | 67. 50                         | 60.00                       |
| 2160p(3840x2160) | 67. 50                         | 30.00                       |
| 2160p(3840x2160) | 135.00                         | 60.00                       |

*-Kada signal koji prima ekran pređe dopušteni raspon, na ekranu će se pojaviti poruka upozorenja.*

-Možete da potvrdite format ulaznog signala na ekranu.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

## 7. Jednostavno otklanjanje poteškoća

Ako ekran pokvari ili se njegove performanse drastično promene, proverite ekran u skladu sa smernicama u nastavku. Ne zaboravite da pregledate periferne uređaje kako biste identifikovali koren problema.

| <b>Simptom</b>   | <b>Rešenje</b>  |
|--|---|
| Napajanje se ne može aktivirati.<br>(Indikator napajanja ne svetli.) | -Potvrdite da su oba kraja kabla za napajanje pravilno umetnuta u utičnicu i da li je zidna utičnica funkcionalna.  |
| Prikazuje se poruka Nema ulaznog signala.                            | - Proverite da li je signalna linija ispravno povezana.<br>-Potvrdite da su relevantni periferni uređaji uključeni.<br>-Uverite se da izabrani izbor ulaza odgovara ulaznom signalu.  |
| Daljinski upravljač ne radi ispravno.                                | -Proverite da baterije nisu istrošene. (Koristite novu bateriju.)<br>-Potvrdite da daljinski upravljač radi u svom dometu.<br>- Uverite se da je daljinski upravljač usmeren ka prozoru daljinskog upravljača ekrana.<br>- Uverite se da nema prepreka između daljinskog upravljača i njegovog prozora. |
| Na ekranu se nalaze trepćuće tačke ili pruge.                        | - Uverite se da nema emisija (auto, VN žice ili neonske sijalice) ili drugih potencijalnih izvora smetnji.  |
| Boja ili kvalitet slike se pogoršavaju.                              | - Proverite da li su sva video podešavanja, kao što su osvetljenost, kontrast i boja, pravilno podešena.<br>-Za dodatne informacije o video postavkama, pogledajte OSD funkcije poglavlja 2.  |
| Položaj i veličina ekrana su netačni.                                | -Potvrdite da su pozicija i veličina ekrana na odgovarajući način.  |
| Slika ili boja su netačne.   | - Proverite da li je signalna linija ispravno povezana.<br>-Kada ste povezani sa računarnom, možete da promenite rezoluciju računara da biste dobili odgovarajuću sliku. Disparitet u izlaznom signalu računara može uticati na prikaz slike.   |
| Prikažite poruku upozorenja.   | - Proverite da li je ulazna linija signala na odgovarajući način obezbeđena.<br>-Izaberite odgovarajući ulazni signal.<br>-Pogledajte Podržani režimi signala u poglavlju 4 za dodatne informacije.   |



# USER MANUAL

## LED Television Model: 50WOS640E

Thank you for purchasing this device.

FOX LED televisions are known for their great performance, as for modern, functional and elegant design. Besides that, we constantly improve our customer support, we have highly efficient and wide network of services, that make our proud customers feel safe.

You made a right choice.

Now it's time for instructions, they are not complicated, but you have to follow them.

EN

## IMPORTANT SAFETY INSTRUCTIONS

### WARNING

- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE TO PREVENT BLADE EXPOSURE.
- TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

|  |  |   |
|--|--|---|
|  <p>This lightning flash with arrowhead symbol in an equilateral triangle alerts users to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock.</p> | <h3>CAUTION</h3> <p><b>RISK OF ELECTRIC SHOCK<br/>DO NOT OPEN</b></p> <p>Warning: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.</p> |  <p>The exclamation mark within an equilateral triangle alerts users to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p> |
|--|--|---|

This appliance should not be exposed to water and no object filled with liquid such as a vase should be placed on the unit.

### CAUTION

- Danger of explosion if batteries are incorrectly replaced.
- Replace with only equivalent type of battery.
- Do not expose battery to direct sunlight or any other source of heat.
- Ensure proper disposal of used batteries.
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- To reduce the risk of electric shock, do not perform any servicing other than what is mentioned in the operating manual.
- There are no user-serviceable parts inside the TV; do not open the TV casing.

### IMPORTANT INFORMATION

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.



### Safe installation

Use the belt fixing the television to facilitate restraining the television from toping forward.



1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating instructions should be followed.



5. **Water and Moisture** - The appliance should not be used near water.
6. **Cart and Stands** - The appliance should only be used with a cart or stand that is recommended by the manufacturer.
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be well situated so that its location or position does not interfere with its proper ventilation.
9. **Heat** - This appliance should be placed away from heat sources such as radiators, heat registers and stoves.
10. **Power Sources** - The appliance should only be connected to a power supply as described in the operating instructions or as marked on the appliance.
11. **Grounding or Polarization** - Precautions should be taken.
12. **Power Cord Protection** - Power supply cord should be routed so that it is not likely to be walked on, pinched by items placed upon it against the cord and its end.
13. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
14. **Power Line** - An outdoor antenna should be located away from power lines.
15. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, the antenna system must be grounded so as to provide against voltages and built-up static charges.
16. **Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
17. **Object and Liquid Entry** - Care should be taken so that objects did not fall, and liquids are not spilled into the enclosure through openings.
18. **Conditions requiring Service** - The appliance should be serviced by qualified service personnel when:
  - The power-supply cord or the plug has been damaged.
  - Objects have fallen on or liquid has been spilled into the appliance.
  - The appliance has been exposed to rain.
  - The appliance does not appear to operate normally or exhibits a marked change in performance.
19. The ventilation should not be impeded by covering the ventilation opening with items, such as newspapers, table-cloths,curtains,etc.  
 No naked flame sources, such as lighted candles, should be placed on the apparatus.  
 The apparatus shall be connected to mains socket outlet with a protective earthing connection.  
 The appliance coupler regard as disconnection device, the disconnect device shall remain readily operable.



**Warning**

High voltages are used in the operating of this product. Do not remove the back cover of the cabinet. Refer servicing to qualified service personnel.




**Warning**

To prevent fire or electrical shock hazard, do not expose the main unit to rain or moisture.



**Warning**

Do not drop or push objects into television cabinet slots or openings. Never spill any kind of liquid on the television receiver.

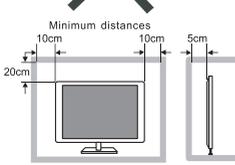

**Caution**

If the television is to be built into a compartment or similarly enclosed, the minimum distances must be maintained.

Heat built up can reduce the service life of your television, and can also be dangerous.



**Caution**

Never stand on, lean on, push suddenly the product or its stand. You should pay special attention to children.




**Caution**

Do not place the main unit on an unstable cart stand, shelf or table. Serious injury to an individual, and damage to the television, may result should it fall.



**Caution**

When the product is not used for an extended period of time, it is advisable to disconnect the AC power cord from the AC outlet.

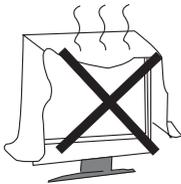

**Caution**

Avoid exposing the main unit to direct sunlight and other sources of heat. Do not position television receiver directly on other products which give off heat. E.g. Video cassette players, audio amplifiers. Do not block the ventilation holes in the back cover. Ventilation is essential to prevent electrical failure. Do not squash power supply cord under the main unit.




**Caution**


The panel used in this product is made of glass. It can break when the product is dropped or applied with force. Individuals should execute caution when dealing with broken glass should the panel break.




- Place the TV on a firm and flat surface, leaving a space of at least 10cm around the set and 30cm from the top of the set to the wall or cabinet. Ensure the TV is positioned close to the wall to avoid it falling when pushed.

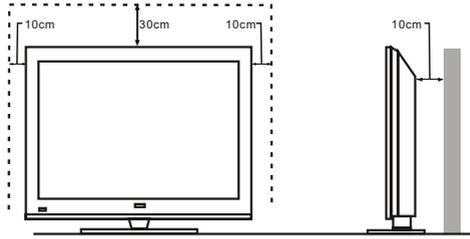

- When you turning the TV set, do not hold the top side of the TV set, you should hold the bottom side.

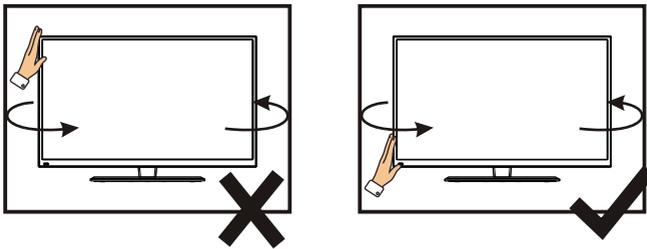

- When you lifting the TV set, do not use one hand to handle it, you should lift the TV set by two hands.

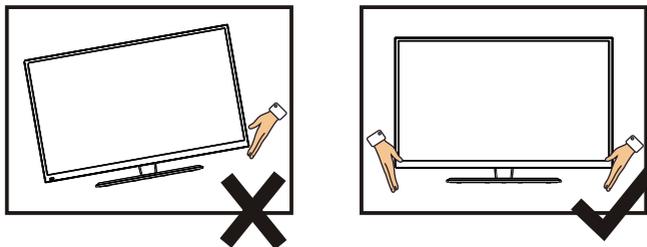

# LED COLOR TV

---

## CONTENTS

|  |    |
|--|----|
| 1. Connection and Preparation of TV..... | 2  |
| 1.1 Accessories .....                    | 2  |
| 1.2 Installation of Stand.....           | 2  |
| 1.3 Keys and Interfaces.....             | 3  |
| 1.4 Remote Control.....                  | 4  |
| 1.5 Installation of Batteries.....       | 5  |
| 2. Basic Operation.....                  | 5  |
| 2.1 Power ON/OFF(Optional).....          | 5  |
| 2.2 Setting of Standby Mode.....         | 5  |
| 3. Getting Started with webOS TV.....    | 6  |
| 4. SETTINGS .....                        | 7  |
| 5. Technical Specification.....          | 19 |
| 6. Support Signal Modes.....             | 20 |
| 7. Simple Troubleshooting .....          | 21 |

# LED COLOR TV

---


## 1.Connection and Preparation of TV

### 1.1 Accessories

- ★ User Manual
- ★ Remote Control
- ★ Battery(UM-4/R03P/AAA)
- ★ Wall Mount Kit (Pre-assembled)(Optional)

### 1.2 Installation of Stand

(For the physical structure, please refer to the real object)


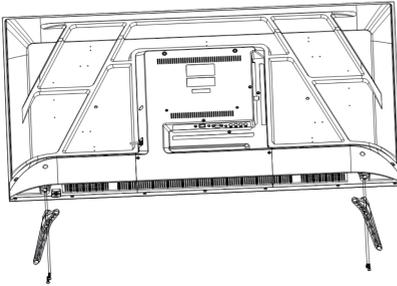


- ① Place the TV with the front panel facing downwards on the soft cloth or soft pads on a desk.
- ② Insert the stand into the bottom socket of the TV.
- ③ Insert the screws into the sockets and tighten them.



# LED COLOR TV

## 1.3 Keys and Interfaces

The design and specification takes actual products as the standard

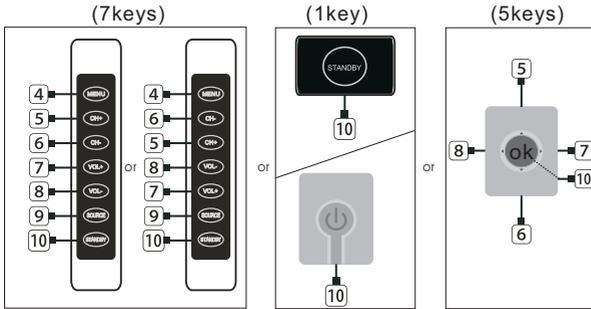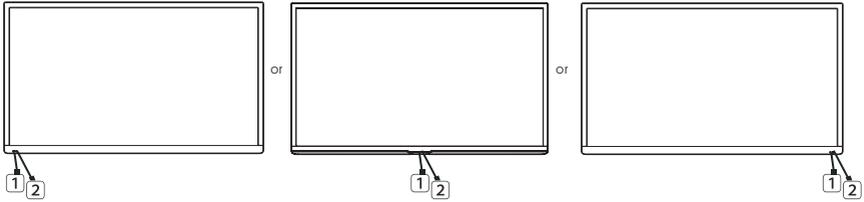

1. REMOTE SENSOR WINDOW
2. POWER INDICATOR
3. SPEAKER
4. MENU KEY
5. PROGRAM “+” KEY
6. PROGRAM “-” KEY
7. VOLUME “+” KEY
8. VOLUME “-” KEY
9. SOURCE KEY
10. STANDBYKEY
11. POWERPLUG INPUT

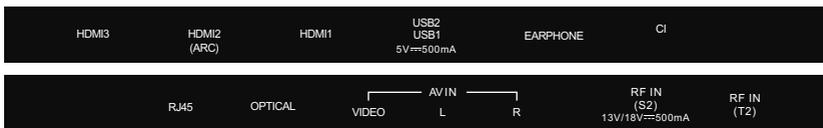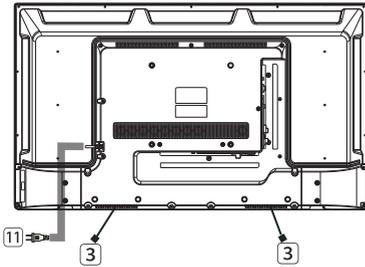

# LED COLOR TV

## 1.4 Remote Control

(Here is only the sketch, please in kind prevail)



For buttons with #, please long-press (hold for more than a second).

**POWER:** ON/OFF.

(STB POWER) You can turn on/off the power of the set-top box.

**0-9:** Number selection key.

**0# :**The QUICK ACCESS edit screen appears.

**LIST:** Checking the saved programmes.

**...** :It displays the additional buttons on the remote control.

**...#:** Audibly describes the contents of the screen.

: It adjusts the volume level.

: Select to turn off the sound from the TV.

# : Enter the Accessibility menu.

: You can change the programme.

: Check out the recommended contents. (Recommendation service may not be available depending on the countries you are in.)

Push and hold the button while speaking to use the voice recognition function.

: Displays the Home menu.

# : Displays the list used previously.

: Enters the Quick Settings menu.

# : Enters the All Settings menu.

**Wheel (OK)** :Press the center of the Wheel button to select a menu.You can change channels by using the wheel button.

**(up/down/left/right)** Press the up,down,left or right button to scroll the menu.If you press buttons while the pointer is in use,the pointer will disappear from the screen and Magic Remote will operate like a general remote control.To display the pointer on the screen again,shake Magic Remote the left and right.

: Move to the previous step.

# : Closes the menu.

**GUIDE** : You can check the programme.

**NETFLIX** : go to Netflix.

: Selects an input source.

# : Entering into the Home Dashboard.

**prime video** : go to prime video.

These access special functions in some menus.

**MOVIES**:Search Movies.

: Play.

: Pause.

# LED COLOR TV

---

## 1.5 Installation of Batteries

(Here is only the sketch, please in kind prevail)



- ① Open the back lid of the remote control.
- ② Install two 7#(AAA)1.5V batteries.  
Ensure the correct polarity of the batteries.
- ③ Cover the back lid.  
Please take out of the batteries from the remote control for long time of no use.

If the remote control doesn't work properly, please carry out the following checks.

- Check the TV is turned on.
- Check the polarity of the batteries are correct.
- Check the batteries are not drained.
- Check the power supply is normal or the power cord is correctly connected.
- Check there are no special fluorescent light or neon light around.

## 2. Basic Operation

### 2.1 Power ON/OFF(Optional)

- Connect the power cord to the **AC input**. Insert the power cord into the appropriate socket.
- Press the **Power switch** to switch on the TV, then press **Power** button to turn on the unit.
- Press the **Power switch** again to switch off the TV.

Note: After switch off the TV, please don't immediately re-open the power switch ,should be delayed one minute more to re-open the power switch.

### 2.2 Setting of Standby Mode

- Press (  ) button to turn on the unit.
- Press (  ) button again to return the display to standby mode. The power indicator turns red.
- Be sure not to set your TV in standby mode for a long period of time.

# LED COLOR TV

## 3. Getting Started with webOS TV

### Home Tutorial

#### Using the Home Feature of the webOS TV

You can open the Home screen by pressing the  button on your remote control. Roll the Wheel (Ok) button on the Magic Remote to scroll through the menu. You can open apps and content or use various features of the smart TV.

- Standard remote control allows you to scroll through the menu with the  /  buttons.



- ① Launch Search.  
To see the details, click the Apps and Content Search in User Guide.
  - ② Returns to the most recently used TV or external input.
  - ③ You can run, move or delete the apps installed on your TV.
- App List is automatically shown on the screen each time the TV is turned on. To change the Home screen display, change the setting of Home Auto Launch in ->  ->   
->General->System->AdditionalSettings->Home Settings .
  - The availability of and access to Contents and Services in the device are subject to change at any time without prior notice.
  - Available features vary depending on the region or service.

# LED COLOR TV

## 4. SETTINGS

### Quick Settings

To Use Setting Function Quickly

Set of light-weight controls quickly and simply such as **Picture Mode**, **Sound Out**, **Game Optimiser** and so on.

Press the  button on the remote control.



- ① You can set **Picture Mode**.
- ② You can set **Sound Mode**.
- ③ You can choose **Sound Out**.
- ④ Directs to the **Game Optimiser** settings.
- ⑤ Directs to the **Network** settings.
- ⑥ You can set more options.
  - You can also long-press  button of the remote control to run the All settings directly.
- ⑦ You can add/delete the quick setting items or change their order.
  - Move to an item that can be set up, press the remote control's **Wheel (OK)** button once, and then press and hold the **Wheel (OK)** button to move to the menu.
  - The configurable items differ depending on model.

# LED COLOR TV

---

## SETTINGS

### Picture

#### *Picture Mode*

Selecting Picture Mode

 ->  -> [Picture](#) -> [Select Mode](#)

Select the picture mode that is best suited to your viewing environment, preferences or video type.

Select a picture mode. By adjusting and setting each item in more detail based on the mode, your video is better optimised for its characteristics.

- The configurable items differ depending on model.

#### *Aspect Ratio*

Setting the Screen Size

 ->  -> [Picture](#) -> [Aspect Ratio](#) -> [User Selection](#)

You can change the screen size according to the type of content you are watching.

#### *Advanced Settings*

Brightness

 ->  -> [Picture](#) -> [Advanced Settings](#) -> [Brightness](#)

You can adjust the brightness of the entire screen.

Colour

 ->  -> [Picture](#) -> [Advanced Settings](#) -> [Colour](#)

Clarity

 ->  -> [Picture](#) -> [Advanced Settings](#) -> [Clarity](#)

You can adjust the contrast of a Picture to show it more clearly.

Apply to all inputs

 ->  -> [Picture](#) -> [Advanced Settings](#) -> [Apply to All Inputs](#)

The settings you specify only apply to the currently selected input mode.

To apply your current picture settings to all input modes, select [Apply to All Inputs](#).

Reset

 ->  -> [Picture](#) -> [Advanced Settings](#) -> [Reset](#)

If you want to reset the image settings to the factory defaults after configuring the image settings, select reset for each image mode.

# LED COLOR TV

## SETTINGS

### Sound

#### Sound Mode

 ->  -> **Sound** -> **Select Mode**

You can select the most suitable sound mode for each genre.

#### Sound Out

Use TV Speaker

 ->  -> **Sound** -> **Sound Out** -> **Use TV Speaker**

Audio is played through the TV's internal speakers.

Use Wired Speaker

 ->  -> **Sound** -> **Sound Out** -> **Use Wired Speaker**

Use Wireless Speaker

 ->  -> **Sound** -> **Sound Out** -> **Use Wireless Speaker**

#### Bluetooth Device

Wirelessly connect a Bluetooth audio device to enjoy TV sound more conveniently.

Refer to the user manual of the Bluetooth audio device for details on how to connect and use the device.

- Press  to view the connected devices or the devices that can be connected to connect any one of them.
- For some Bluetooth devices, the device volume can be controlled by selecting from the connection list.
- LG Sound Sync devices will automatically try to connect to the recently used devices when you turn the TV on.
- We recommend that you connect an LG audio device that supports LG Sound Sync, using LG TV mode or LG Sound Sync mode on device.
- Some models may not be supported.
- The audio codec that can be output via Bluetooth is SBC/aptX™.
- If the device fails to connect, check the power of the device to connect to and check if the audio device is working properly.
- Depending on the type of the Bluetooth device, the device may not connect correctly or an abnormal behavior may occur such as unsynchronized video and audio.
  - The mobile-only headsets may not work.
- Sound may stutter or sound quality may be reduced if:
  - the Bluetooth device is too far from the TV;
  - there are obstacles between the Bluetooth device and the TV; or
  - used together with radio equipment such as a microwave oven or wireless LAN
- If the **Picture** -> **Select Mode** is set to **Game Optimiser** and **Sound Out** is set to **Bluetooth Device**, the **Picture** -> **Select Mode** changes to **Standard**.
- If you continue to experience problems, we recommend using a wired connection. ( Optical digital, **HDMI (eARC/ARC)** port )

# LED COLOR TV

## SETTINGS

### Mobile Device

If you install the LG ThinQ app on a smart device and connect it to your TV, you can use the device as a speaker for the TV.

Use External Speakers with TV Speaker

 ->  -> **Sound** -> **Sound Out** -> **Use External Speakers with TV Speaker**

Audio can be played through the multiple devices simultaneously.

### Advanced Settings

Balance

 ->  -> **Sound** -> **Advanced Settings** -> **Balance**

You can adjust the volume of the left and right speakers.

- This setting is only available for Internal TV Speaker.

Equalizer

 ->  -> **Sound** -> **Advanced Settings** -> **Equalizer**

You can adjust the sound by increasing or decreasing the output of the specific frequency range of the voice signal.

- This option can be enabled if **Sound** -> **Select Mode** is set to **Standard**.
- This setting is only available for Internal TV Speaker.

APPLY to ALL Inputs

 ->  -> **Sound** -> **Advanced Settings** -> **Apply to All Inputs**

The settings you specify only apply to the currently selected input mode.

To apply your current sound settings to all input modes, select **Apply to All Inputs**.

Reset

 ->  -> **Sound** -> **Advanced Settings** -> **Reset**

Restores the detailed effect settings for the **Standard** sound mode to the initial settings.

- This setting is only available for Internal TV Speaker.

Installation Type

 ->  -> **Sound** -> **Advanced Settings** -> **Installation Type**

This mode optimises the sound based on the TV setup.

Automatic Volume Adjustment

 ->  -> **Sound** -> **Advanced Settings** -> **Automatic Volume Adjustment**

If it is set to On, the volume will be automatically adjusted to a suitable level for each content you watch to help you enjoy watching more comfortably.

- This setting is only available for Internal TV Speaker.

DTV Audio Setting

 ->  -> **Sound** -> **Advanced Settings** -> **DTV Audio Setting**

# LED COLOR TV

## SETTINGS

When different audio types exist in an input signal, this function allows you to select the audio type you want.

If set to **Auto** the search order is AC4 → HE-AAC → Dolby Digital Plus → Dolby Digital → MPEG and output is produced in the first Audio Format found.

- The following search order may change depending on the country : AC4 → HE-AAC → Dolby Digital Plus → Dolby Digital → MPEG.
- If the selected Audio Format is not supported, another Audio Format may be used for output.
- Some models may not be supported.

### Match Screen and Sound

 ->  -> **Sound** -> **Advanced Settings** -> **Match Screen and Sound**

Adjusts the synchronization of the sound from the speaker that is working.

The closer the value is set to 60, the slower the voice output speed will be than the default speed.

### Select HDMI Input Audio Format

 ->  -> **Sound** -> **Advanced Settings** -> **Select HDMI Input Audio Format**

You can set the audio format for each HDMI input.

When connected to devices or content that support the latest surround sound technology, setting to **Bitstream** will enable you to listen to the intended sound quality.

When the voice delivered through the HDMI port is not synchronized, set it to **PCM**.

### LG Sound Sync

 >  > **Sound** -> **Advanced Settings** -> **LG Sound Sync**

Connect the LG Sound Sync device to the optical digital input port and set **Sound Out** to **Optical Out Device**.

By setting this feature to **On**, you can adjust the volume of the connected LG Sound Sync device using a TV remote control.

- If the auto-power feature of the sound bar that supports LG Sound Sync is set to **On**, the sound bar will be turned on or off together when the TV is turned on or off.

### Digital Sound Output

 ->  -> **Sound** -> **Advanced Settings** -> **Digital Sound Output**

You can configure the **Digital Sound Output** settings.

### eARC Support

 ->  -> **Sound** -> **Advanced Settings** -> **eARC Support**

eARC is a technology that can send and receive more sound information faster thanks to its wider bandwidth than that of the conventional ARC. You can enjoy TV sound with higher quality than ARC through a connected audio device.

# LED COLOR TV

## SETTINGS

### GENERAL

#### AI Service

 ->  -> General -> AI Service

#### AI Recommendation

 ->  -> General -> AI Service -> AI Recommendation

You can get content recommendation messages according to your content viewing history and app usage history.

#### Game Optimiser

Sets up the features for an immersive experience when you play with a video game console.

- 1) Press the  button on the remote control.
  - 2) Select **Game Optimiser**.
  - 3) Selecting **On** turns on all related settings.
- It only works with HDMI inputs.
  - If you set  ->  -> **Picture** -> **Select Mode** to a mode other than **Game Optimiser**, some items in **Game Optimiser** cannot be set.
  - If you turn this feature **On**, you cannot change some video settings items.
  - When **Game Optimiser** is set to **On**, audio delays may occur if you set **Sound Out** to **Bluetooth Device/Optical OutDevice/HDMI(ARC) Device**. Switch to **Use TV Speaker** or change  ->  -> **Sound** -> **Advanced Settings** -> **Select HDMI Input AudioFormat** to **PCM**.
  - The configurable items differ depending on model.

#### Programmes

##### Programme Tuning & Settings

 ->  -> General -> Programmes -> Programme Tuning & Settings

##### Auto Tuning

 ->  -> General -> Programmes -> Programme Tuning & Settings -> Auto Tuning

Automatically tunes the programmes.

##### Manual Tuning

 ->  -> General -> Programmes -> Programme Tuning (Programme Tuning & Settings) -> Manual Tuning

This function is for manually searching and saving programmes.  
For digital broadcasting, signal strength and signal quality can be checked.

# LED COLOR TV

## SETTINGS

### Programme Mode

 →  → **General** → Programmes → Programme Tuning & Settings → Programme Mode  
Select programme tuning modes.

### Programme List Update

 →  → **General** → Programmes → Programme Tuning & Settings → Programme List Update

If the programme mode is set to Cable.

It updates the changed Programme List information by based on country broadcasting circumstance.

After updates, the Programme List may be changed. If not want, select Off.

Some models may not be supported.

### Signal Test

 →  → **General** → Programmes → Programme Tuning (Programme Tuning & Settings) → Signal Test

Shows the MUX and Service information etc.

- Signal test is only available in Antenna or Cable mode.
- Some models may not be supported.

### Programme Manager

 →  → **General** → Programmes → Programme Manager

### Edit All Programmes

 →  → **General** → Programmes → Programme Manager → Edit All Programmes

You can lock or unlock the selected programmes from all the stored programmes, or you can set them to be skipped when switching programmes.

### Edit Favourites

 →  → **General** → Programmes → Programme Manager → Edit Favourites

You can add/delete desired programmes to/from the favourite programmes, change their positions, etc.

### CI Information

 →  → **General** → Programmes → CI Information

This function enables you to watch some encrypted services (pay services).

### Copy Programmes

 →  → **General** → Programmes → Copy Programmes

Export your TV's programme list information to a connected USB storage device or Import your TV's programme list information from a connected USB storage device.

- For Satellite models

# LED COLOR TV

---

## SETTINGS

HbbTV

 ->  -> [General](#) -> [Programmes](#) -> [HbbTV](#)

HbbTV (Hybrid Broadcast Broadband TV) is a new broadcasting standard that enables super-teletext type services, delivered by a broadcast TV programme, to be integrated or linked to online services delivered over broadband to a connected Smart TV.

- Some models may not be supported.

### Devices

TV Management

 ->  -> [General](#) -> [Devices](#) -> [TV Management](#)

External Device

 ->  -> [General](#) -> [Devices](#) -> [External Devices](#)

You can set to use a smart device connected to the TV to control the TV or manage the connection history.

- The configurable items differ depending on model.

#### Connect Bluetooth Controller

You can connect and use devices such as a Bluetooth-enabled keyboard, mouse, or a gamepad with your TV.

Turn on the device, set it to pairing mode, and then click [Connect](#) on your TV screen. When a device you've connected before is turned on, it automatically connects to your TV. To disconnect the existing connection, click [Disconnect](#).

#### Universal Control Settings

If you set up the universal remote control, you can control peripheral devices connected to the TV with the Magic Remote instead of their own remote controls.

For more information, see [How to Operate TV -> Using Universal Remote Control](#) in [User Guide](#).

#### TV On With Mobile

If [Turn on via Wi-Fi](#) or [Turn on via Bluetooth](#) is set to [On](#), you can turn on your TV using an application that supports [TV On With Mobile](#).

#### Delete Connection History

You can delete the connection history of the devices connected to the TV on the wireless network.

HDMI Settings

 >  -> [General](#) -> [Devices](#) -> [HDMI Settings](#)

You can apply settings to ensure a clear picture and easy control for the HDMI connected devices.

# LED COLOR TV

---

## SETTINGS

### Network

Setting a Wired Network

 ->  -> **General** -> **Network** -> **Wired Connection (Ethernet)**

If the router connected to the network supports the DHCP feature, connecting the TV and router by wire will automatically connect to the network. If the automatic setup is not supported, you can select **Edit** to manually set up the network connection.

Setting a Wireless Network

 ->  -> **General** -> **Network** -> **Wi-Fi Connection**

If you have set the TV up for a wireless network, you can check and connect to the available wireless Internet networks. Select the wireless router to connect.

For more detailed settings, select **Other Network Settings**.

### System

Language

 ->  -> **General** -> **System** -> **Language**

You can choose the menu language displayed on the screen and the audio language of the digital broadcast.

Location

 ->  -> **General** -> **System** -> **Location**

You can change the location setting of your Smart TV.

Time & Timer

 ->  -> **General** -> **System** -> **Time & Timer**

You can check the time or configure related settings.

Safety

 ->  -> **General** -> **System** -> **Safety**

You can put a lock on TV broadcasts or apps.

Set it to **On** to apply the lock.

# LED COLOR TV

## SETTINGS

### TV Rating Locks

This function operates according to information from the broadcasting station. Therefore if the signal has incorrect information, this function does not operate.

Prevents children from watching certain adult's TV programmes, according to the ratings limit set. Enter a password to watch a blocked programme. Rating differs by country.

- Supported only in the digital mode.
- Some models may not be supported.

### Programme Locks

Blocks the programmes that contain inappropriate contents for children. The programmes can be selected but the screen is blank and the audio is muted. To watch a locked programme, enter the password.

### Application Locks

You can lock or unlock the application.

The lock function is not immediately available for the currently running application.

### Input Locks

You can lock or unlock the Inputs.

### Reset Password

Set or change the password for the TV.

The default password is set as "0000".

When France, Norway or Belgium is selected for Country, the password is not "0000" but "1234".

### Restting a Lost Prassword

If you lose the password you set, you can reset it as follows:

① Press the  button on the remote control.

② Select  General System Safety.

③ Press  (Programmes) 

->  (Programmes)  ->  (Programmes)  ->  (Programmes)  on the remote control. The master password input window will appear.

④ Enter the numbers "0313" in the master password input window, then press **OK**. The password will be reset.

### LG Account

You can sign up for LG membership and log in with your email address in [LG Account](#).

For more information, see [Getting Started with webOS TV -> Managing Your LG Account](#) in [User Guide](#).

### Additional Settings

#### Notifications

 ->  -> [General](#) -> [System](#) -> [Additional Settings](#) -> [Notifications](#)

# LED COLOR TV

---

## SETTINGS

You can view or delete notifications from TV apps and services. For notifications that support shortcuts, you can go directly to that app or website.

### Home Settings

 ->  -> [General](#) -> [System](#) -> [Additional Settings](#) -> [Home Settings](#)

### Standby Light

 ->  -> [General](#) -> [System](#) -> [Additional Settings](#) -> [Standby Light](#)

You can turn the standby light on or off.

- Some models may not be supported.

### Pointer Options

 ->  -> [General](#) -> [System](#) -> [Additional Settings](#) -> [Pointer Options](#)

You can set the pointer speed and size you want while it is on the screen.

### Advertisement

 ->  -> [General](#) -> [System](#) -> [Additional Settings](#) -> [Advertisement](#)

If your TV is connected to the Internet, webOS may use a frequency capping cookie to keep track of the number of times an ad is shown on your TV.

This information is used to help limit the number of times the same ad is displayed. You can clear this cookie or turn it on or off at any time by going to the [Advertisement](#) setting on your TV.

No personally identifiable information is tied to this cookie.

### Live Plus

[Live Plus](#) is a service that provides various information on the programme you watch.

To see the details, click the [Making the Most of Smart TV -> Live Plus](#) in [User Guide](#).

- Some models may not be supported.

### Settings Help

 ->  -> [General](#) -> [System](#) -> [Additional Settings](#) -> [Settings Help](#)

When set to [On](#), you can get help for the selected items when navigating through the Settings menu.

### Set ID

 ->  -> [General](#) -> [System](#) -> [Additional Settings](#) -> [Set ID](#)

You can set a number (ID) to manage multiple TVs.

- This feature is for administrators. It is not recommended for use in a typical home environment.

### Reset to Initial Settings

 ->  -> [General](#) -> [System](#) -> [Reset to Initial Settings](#)

Return TV to its initial settings. After reset, the TV will automatically turn off and on.

# LED COLOR TV

---

## SETTINGS

### Support

#### Software Update

 ->  -> [Support](#) -> [Software Update](#)

Uses software update to check and obtain the latest version.

##### Auto Update

When it is set to On, updates are automatically made without a separate confirmation procedure except for some important updates.

##### Check for Updates

When checking for the latest update version, you can only perform updates if an update file of a later version is available. The TV automatically checks your software version but, if necessary, you can perform a manual check.

- The configurable items differ depending on model.
- The latest version can be obtained via digital broadcast signals or internet connections.
- Changing the programme while downloading the software via digital broadcast signal interrupts the download process. Returning to the initial programme allows downloading to resume.
- If software is not updated, certain functions may not work properly.
- In some countries, [Auto Update](#) is not displayed if you are not connected to the Internet.

#### Privacy & Terms

 ->  -> [Support](#) -> [Privacy & Terms](#)

##### User Agreements

These are the terms and conditions related to use of the Smart TV service and protection of privacy.

##### Legal Notice

It's a legal notice for services provided via TV.

##### Open Source Software Notice

You can view the instructions for each item.

# LED COLOR TV

## 5. Technical Specification

|                               |  |                |
|-------------------------------|--|----------------|
| Product Model                 | 50WOS640E  |                |
| Screen Size                   | 50" diagonal   |                |
| Aspect Ratio                  | 16:9   |                |
| Power Supply                  | AC 100-240V~,50/60Hz   |                |
| Power Consumption             | 120W   |                |
| TV System                     | PAL B/G/D/K I,SECAM B/G D/K DVB-T/T2/C/S/S2(s/s2 option)<br>(There is no DVB-C signal in some Countries or Areas.) |                |
| Audio Output Power (Internal) | 8Wx2   |                |
| Input Terminal                | Antenna Input  | x2 (S2 option) |
|                               | USB Input  | x2             |
|                               | HDMI Input   | x3             |
|                               | VGA Input  | NO             |
|                               | PC AUDIO Input   | NO             |
|                               | Audio Input (L/R)  | x1             |
|                               | Video Input  | x1             |
|                               | YPbPr Input  | NO             |
|                               | RJ45 Input   | x1             |
|                               | CI card In   | x1             |
|                               | SCART In/Output  | NO             |
|                               | DC In (12V)  | NO             |
| Output Terminal               | Earphone   | x1             |
|                               | Audio Line Out(L/R)  | NO             |
|                               | Video Output   | NO             |
|                               | Optical  | x1             |
|                               | Coaxial out  | NO             |
| Working Temperature           | 0°C~40°C   |                |
| Working Humidity              | 20% ~ 80% Non-condensing   |                |

*Note:the specification shown above may change without notice for quality improvement.*

# LED COLOR TV

---

## 6. Supported Signal Modes

### A.HDMI Mode

| Resolution       | Horizontal Frequency (Khz) | Vertical Frequency (Hz) |
|------------------|----------------------------|-------------------------|
| 480p             | 31.468                     | 59.94                   |
| 576p             | 31.25                      | 50.00                   |
| 720p             | 45.00                      | 60.00                   |
| 1080i            | 33.75                      | 60.00                   |
| 1080p(1920x1080) | 67.50                      | 60.00                   |
| 2160p(3840x2160) | 67.50                      | 30.00                   |
| 2160p(3840x2160) | 135.00                     | 60.00                   |

*-When the signal received by the Display exceeds the allowed range, a warning message will appear on the screen.*

*-You can confirm the input signal format onscreen.*

# LED COLOR TV

## 7. Simple Troubleshooting

If the display fails or the performance changes dramatically, check the display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure.

| Symptom   | Solution   |
|---|--|
| Power cannot be turned on.(Power indicator does not light.) | -Check that both ends of the power cable are plugged into the socket appropriately and the wall socket is operational  |
| No Input Signal message appears.                            | -Check that the signal line is connected properly.<br>-Check that the power of the relevant peripherals is turned on.<br>-Check that the Input option that has been selected matches with the input signal.  |
| The remote control does not function properly.              | -Check the batteries are not drained.(Use new batteries.)<br>-Check that the remote control is within the operating range.<br>-Check that the remote control is pointed to the remote control window on the display.<br>-Check that there are no obstacles between the remote control and the remote control window. |
| Flashing spots or stripes appear on the screen.             | -Check that there are no emission (Car, HV cable or Neon lamp) or other possible interference sources.   |
| Image colour or quality deteriorates.                       | -Check that all the video settings are adjusted appropriately, such as brightness, contrast, colour etc.<br>-For more information about video settings, refer to OSD Functions in Chapter 2.   |
| Screen position and size are incorrect.                     | -Check that the screen position and size is adjusted appropriately.  |
| Image or colour is incorrect.                               | -Check that the signal line is connected properly.<br>-When connecting to a PC, you can change the resolution of the PC to acquire the correct image. The discrepancy of the PC output signal may affect the display of the image.   |
| Display warning message.                                    | -Check that the input signal line is properly fixed.<br>-Select the correct input signal.<br>-For more information, refer to Supported Signal Modes in Chapter 4.  |



Nadamo se da ste pažljivo pročitali uputstva i da ćete ih se pridržavati.  
Za više informacija o FOX uređajima posetite nas na internet stranici:

-Srbija

[www.foxelectronics.rs](http://www.foxelectronics.rs)

-Crna Gora

[www.foxelectronics.me](http://www.foxelectronics.me)

-Severna Makedonija

[www.fox-electronics.com](http://www.fox-electronics.com)

-Bosna i Hercegovina